SAMSUNG

SERVICE MANUAL DVD-611/511

SAMSUNG ELECTRONICS

© Samsung Electronics Co., Ltd. **MAR. 2000**

Printed in Korea

AH68-00434A

SAMSUNG

DVD PLAYER

DVD-611

DVD-511

SERVICE Manual

DVD PLAYER

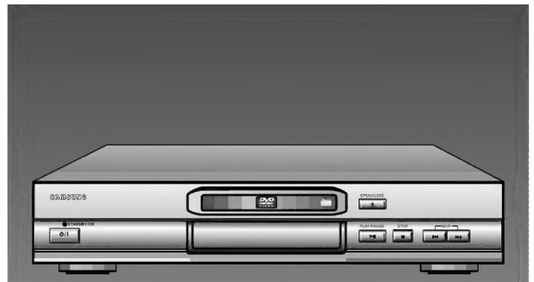

DVD-611

DVD-511

CONTENTS

1. Precautions

2. Reference Information

3. Product Specification

4. Disassembly and Reassembly

5. Circuit Descriptions

6. Troubleshooting

7. Exploded Views and Parts List

8. Electrical Parts List

9. Block Diagrams

10. PCB Diagrams

11. Wiring Diagram

12. Schematic Diagrams

1. Precautions

1-1 Safety Precautions

1) Before returning an instrument to the customer, always make a safety check of the entire instrument, including, but not limited to, the following items:

(1) Be sure that no built-in protective devices are defective or have been defeated during servicing. (1)Protective shields are provided to protect both the technician and the customer. Correctly replace all missing protective shields, including any remove for servicing convenience.
(2)When reinstalling the chassis and/or other assembly in the cabinet, be sure to put back in place all protective devices, including, but not limited to, nonmetallic control knobs, insulating fish papers, adjustment and compartment covers/shields, and isolation resistor/capacitor networks. Do not operate this instrument or permit it to be operated without all protective devices correctly installed and functioning.

(2) Be sure that there are no cabinet openings through which adults or children might be able to insert their fingers and contact a hazardous voltage. Such openings include, but are not limited to, excessively wide cabinet ventilation slots, and an improperly fitted and/or incorrectly secured cabinet back cover.

(3) Leakage Current Hot Check-With the instrument completely reassembled, plug the AC line cord directly into a 120V AC outlet. (Do not use a isolation transformer during this test.) Use a leakage current tester or a metering system that complies with American National Standards institute (ANSI) C101.1 Leakage Current for Appliances and Underwriters Laboratories (UL) 1270 (40.7). With the instrument's AC switch first in the ON position and then in the OFF position, measure from a known earth ground (metal water pipe, conduit, etc.) to all exposed metal parts of the instrument (antennas, handle brackets, metal cabinets, screwheads, metallic overlays, control shafts, etc.), especially any exposed metal parts that offer an electrical return path to the chassis.
Any current measured must not exceed 0.5mA. Reverse the instrument power cord plug in the outlet and repeat the test. See Fig. 1-1.
Any measurements not within the limits specified herein indicate a potential shock hazard that must be eliminated before returning the instrument to the customer.

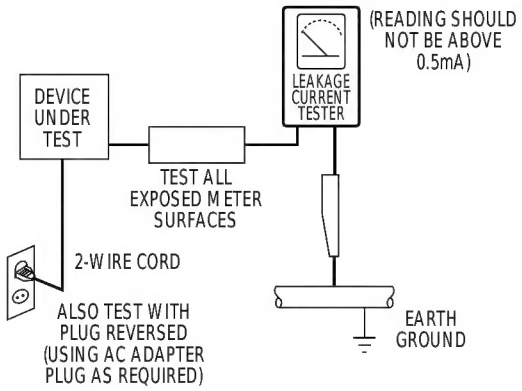
(READING SHOULD NOT BE ABOVE 0.5mA)
LEAKAGE CURRENT TESTER
DEVICE UNDER TEST
TEST ALL EXPOSED METER SURFACES
2-WIRE CORD
ALSO TEST WITH PLUG REVERSED (USING AC ADAPTER PLUG AS REQUIRED)
EARTH GROUND

Fig. 1-1 AC Leakage Test

(4) Insulation Resistance Test Cold Check-(1) Unplug the power supply cord and connect a jumper wire between the two prongs of the plug. (2) Turn on the power switch of the instrument. (3) Measure the resistance with an ohmmeter between the jumpered AC plug and all exposed metallic cabinet parts on the instrument, such as screwheads, antenna, control shafts, handle brackets, etc. When an exposed metallic part has a return path to the chassis, the reading should be between 1 and 5.2 megohm. When there is no return path to the chassis, the reading must be infinite. If the reading is not within the limits specified, there is the possibility of a shock hazard, and the instrument must be re-pared and rechecked before it is returned to the customer. See Fig. 1-2.

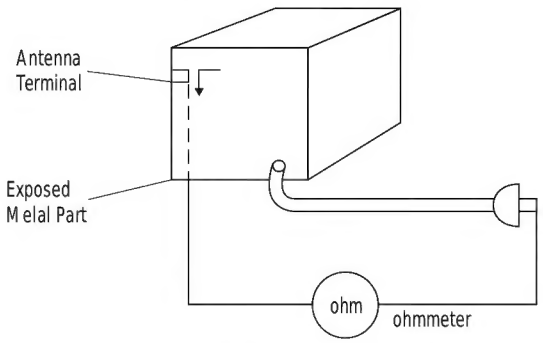

Fig. 1-2 Insulation Resistance Test

2) Read and comply with all caution and safety related notes non or inside the cabinet, or on the chassis.

3) Design Alteration Warning-Do not alter of add to the mechanical or electrical design of this instrument. Design alterations and additions, including but not limited to, circuit modifications and the addition of items such as auxiliary audio output connections, might alter the safety characteristics of this instrument and create a hazard to the user. Any design alterations or additions will make you, the service, responsible for personal injury or property damage resulting therefrom.

4) Observe original lead dress. Take extra care to assure correct lead dress in the following areas:
(1) near sharp edges, (2) near thermally hot parts (be sure that leads and components do not touch thermally hot parts), (3) the AC supply, (4) high voltage, and (5) antenna wiring. Always inspect in all areas for pinched, out-of-place, or frayed wiring, Do not change spacing between a component and the printed-circuit board. Check the AC power cord for damage.

5) Components, parts, and/or wiring that appear to have overheated or that are otherwise damaged should be replaced with components, parts and/ or wiring that meet original specifications.
Additionally, determine the cause of overheating and/or damage and, if necessary, take corrective action to remove any potential safety hazard.

6) Product Safety Notice-Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc. Parts that have special safety characteristics are identified by shading, an (⚠)or a (⚠)on schematics and parts lists. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might created shock, fire and/or other hazards. Product safety is under review continuously and new instructions are issued whenever appropriate.

1-2 Servicing Precautions

CAUTION : Before servicing Instruments covered by this service manual and its supplements, read and follow the Safety Precautions section of this manual.

Note : If unforseen circument create conflict between the following servicing precautions and any of the safety precautions, always follow the safety precautions. Remember: Safety First.

1-2-1 General Servicing Precautions

(1) a. Always unplug the instrument's AC power cord from the AC power source before (1) re-moving or reinstalling any component, circuit board, module or any other instrument assembly, (2) disconnecting any instrument electrical plug or other electrical connection, (3) connecting a test substitute in parallel with an electrolytic capacitor in the instrument.

b. Do not defeat any plug/socket B+ voltage interlocks with which instruments covered by this service manual might be equipped.

c. Do not apply AC power to this instrument and /or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.

d. Always connect a test instrument's ground lead to the instrument chassis ground before connecting the test instrument positive lead. Always remove the test instrument ground lead last.

Note : Refer to the Safety Precautions section ground lead last.

(2) The service precautions are indicated or printed on the cabinet, chassis or components. When servicing, follow the printed or indicated service precautions and service materials.

(3) The components used in the unit have a specified flame resistance and dielectric strength.
When replacing components, use components which have the same ratings. Components i-entified by shading, by(⚠) or by (⚠) in the circuit diagram are important for safety or for the characteristics of the unit. Always replace them with the exact replacement components.

(4) An insulation tube or tape is sometimes used and some components are raised above the printed wiring board for safety. The internal wiring is sometimes clamped to prevent contact with heating components. Install such elements as they were.

(5) After servicing, always check that the removed screws, components, and wiring have been installed correctly and that the portion around the serviced part has not been damaged and so on. Further, check the insulation between the blades of the attachment plug and accessible conductive parts.

1-2-2 Insulation Checking Procedure

Disconnect the attachment plug from the AC outlet and turn the power ON. Connect the insulation resistance meter (500V) to the blades of the attachment plug. The insulation resistance between each blade of the attachment plug and accessible conductive parts(see note) should be more than 1 Megohm.

Note : Accessible conductive parts include metal panels, input terminals, earphone jacks, etc.

1-3 ESD Precautions

Electrostatically Sensitive Devices (ESD)

Some semiconductor (solid state) devices can be damaged easily by static electricity.
Such components commonly are called Electrostatically Sensitive Devices(ESD). Examples of typical ESD devices are integrated circuits and some field-effect transistors and semiconductor chip components. The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

(1) Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.

(2) After removing an electrical assembly equipped with ESD devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.

(3) Use only a grounded-tip soldering iron to solder or unsolder ESD devices.

(4) Use only an anti-static solder removal devices. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ESD devices.

(5) Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ESD devices.

(6) Do not remove a replacement ESD device from its protective package until immediately before your are ready to install it.(Most replacement ESD devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive materials).

(7) Immediately before removing the protective materials from the leads of a replacement ESD device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION : Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

(8) Minimize bodily motions when handling unpackaged replacement ESD devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ESD device).

1-4 Handling the optical pick-up

The laser diode in the optical pick up may suffer electrostatic breakdown because of potential static electricity from clothing and your body.

The following method is recommended.

(1) Place a conductive sheet on the work bench (The black sheet used for wrapping repair parts.)

(2) Place the set on the conductive sheet so that the chassis is grounded to the sheet.

(3) Place your hands on the conductive sheet(This gives them the same ground as the sheet.)

(4) Remove the optical pick up block

(5) Perform work on top of the conductive sheet. Be careful not to let your clothes or any other static sources to touch the unit.

Be sure to put on a wrist strap grounded to the sheet.
Be sure to lay a conductive sheet made of copper etc. Which is grounded to the table.

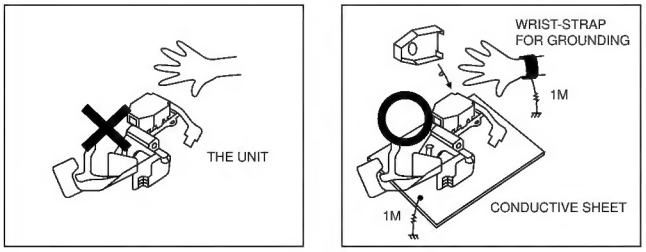

Fig.1-3

(6) Short the short terminal on the PCB, which is inside the Pick-Up ASS'Y, before replacing the Pick-Up. (The short terminal is shorted when the Pick-Up Ass'y is being lifted or moved.)

(7) After replacing the Pick-up, open the short terminal on the PCB.

1-5 Pick-up disassembly and reassembly

1-5-1 Disassembly

1) Remove the power cable.
2) Switch SW3 on deck PCB to "OFF" before removing the FPC.
   (Inserted into Main PCB DCN1. See Fig. 1-4)
3) Disassemble the deck.
4) Disassemble the deck PCB.

1-5-2 Assembly

1) Replace the Pick-up.
2) Assemble the deck PCB.
3) Reassemble the deck.
4) Insert FPC into Main PCB DCN1 and switch SW3 on deck PCB to "ON". (See Fig 1-4)

Note : If the assembly and disassembly are not done in correct sequence, the Pick-up may be damaged.

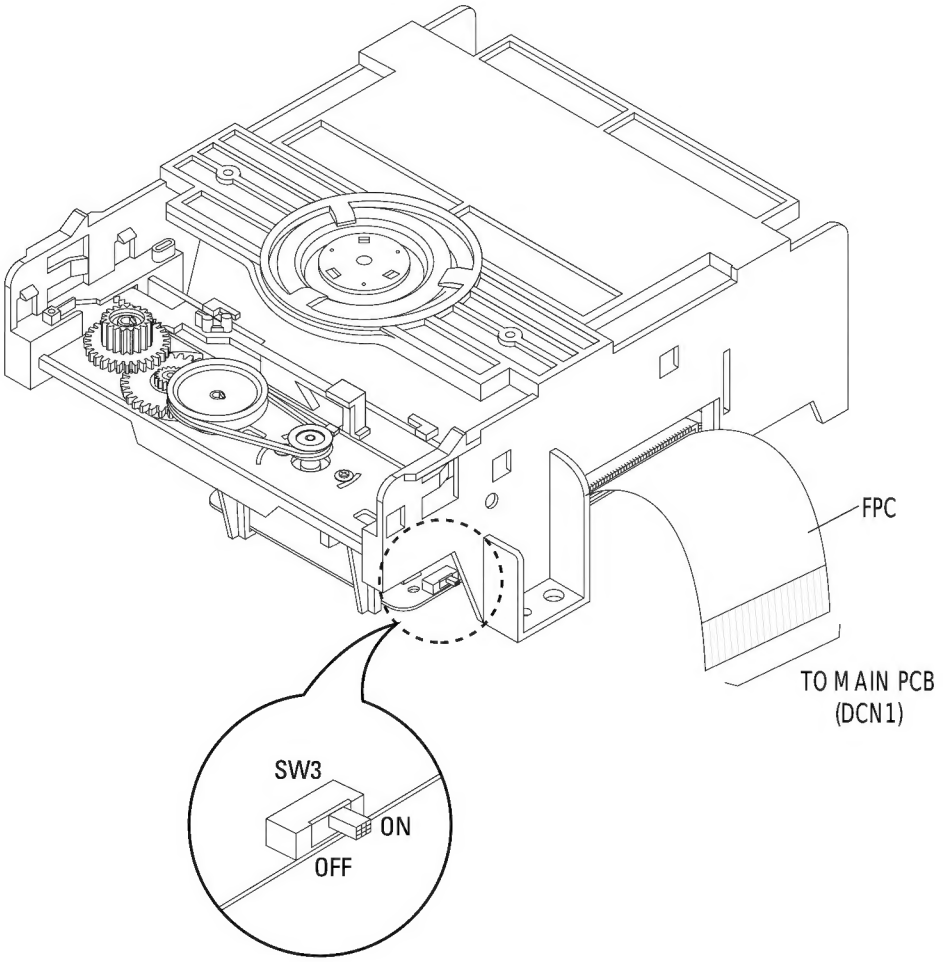

Fig. 1-4

2. Reference Information

2-1 IC Descriptions

2-1-1 AIC1 (AK4393 ; Digital-to-Analog Converter)

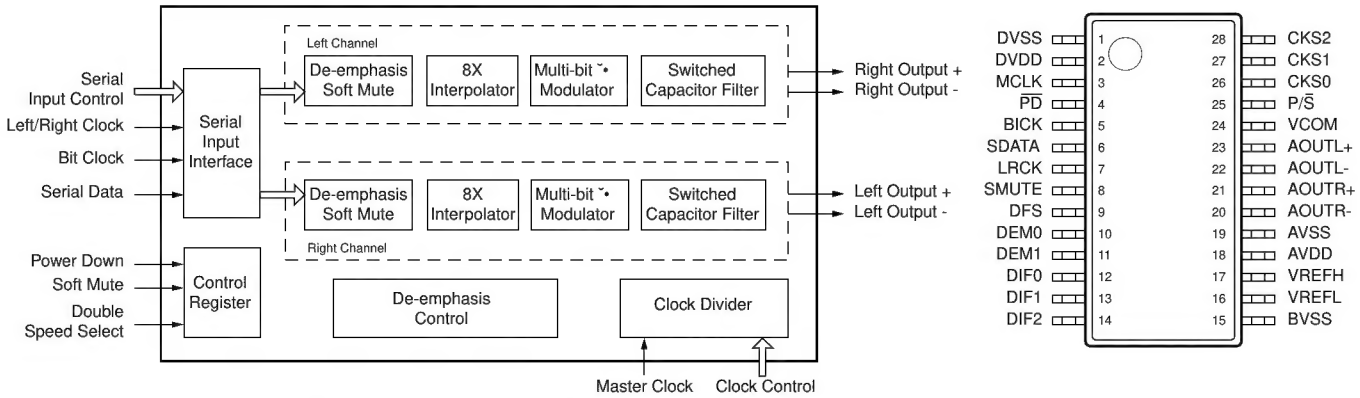

No.	Pin Name	I/O	Pin Function and Description
1	DVSS	-	Digital Ground. Digital ground is 0V.
2	DVDD	-	Digital Supply. 3.3V or 5.0V nominal.
3	MCLK	I	Master Clock Input.
4	PD	I	Power-down and Reset. When low the AK4393 is in Power-down Mode and held in reset. The AK4393 should always be reset after power-up.
5	BICK	I	Audio Serial Data Clock Input. A clock input of 64fs or more is recommended.
6	SDATA	I	Serial Data Input.
7	LRCK	I	Left/Right Clock Input. Defines the sampling rate, F_s.
8	SMUTE (or $\overline{CS}$)	I	Soft Mute Input or Chip Select Input. If the P/$\overline{S}$ pin (pin 25) is high, SMUTE controls the soft mute function as follows: - When SMUTE goes high, the soft mute cycle is initiated. - When SMUTE goes low, the output mute is slowly released. If the P/$\overline{S}$ pin is low, SMUTE is the Chip Select Input for the Serial Control Mode. Chip select is active when SMUTE is low.
9	DFS	I	Double Sampling Speed Input. When low, this pin defines the Normal Speed Mode, and 128 xF_s oversampling is implemented. When high, the DFS pin defines the Double Speed Mode, implemented with 64 x F_s oversampling. This pin features an internal pull-down.
10	DEM0 (or CCLK)	I	De-emphasis Enable #0 or Control Data Clock Input. If the P/$\overline{S}$ pin (pin 25) is high, DEM0 is used to select the De-emphasis Mode according to Table 3. If the P/$\overline{S}$ pin os low DEM0 is the clock input for the Serial Control Mode.
11	DEM1 (or CDTI)	I	De-emphasis Enable #1 or Control Data Input. If the P/$\overline{S}$ pin (pin 25) is high, DEM1 is used to select the De-emphasis Mode according to Table 3. If the P/$\overline{S}$ pin is low, DEM1 is the control data input for the Serial Control Mode.
12	DIF0	I	Digital Input Format Select #0.
13	DIF1	I	Digital Input Format Select #1.
14	DIF2	I	Digital Input Format Select #2.
15	BVSS	-	Substrate Ground Pin. Substrate ground is 0V.
16	VREFL	I	Low Level Voltage Reference Input. Normally connected to analog ground.
17	VREFH	I	High Level Voltage Reference Input. Normally connected to analog supply.
18	AVDD	-	Analog Supply. Analog supply is 5V nominal.
19	AVSS	-	Analog Ground. Analog ground is 0V.
20	AOUTR-	O	Right Channel Negative Output.
21	AOUTR+	O	Right Channel Positive Output.
22	AOUTL-	O	Left Channel Negative Output.
23	AOUTL+	O	Left Channel Positive Output.
24	VCOM	O	Common Voltage Output. Common voltage output is 2.6V nominal.
25	P/$\overline{S}$	I	Parallel/Serial Control Mode Select Input. If Low, the Serial Control Mode is implemented. If High, the Parallel Control Mode is selected. This pin has an internal pull-up.
26	CKS0	I	Master Clock Select #0.
27	CKS1	I	Master Clock Select #1.
28	CKS2	I	Master Clock Select #2.

2-1-2 DIC1 (KS1453 ; Data Processor)

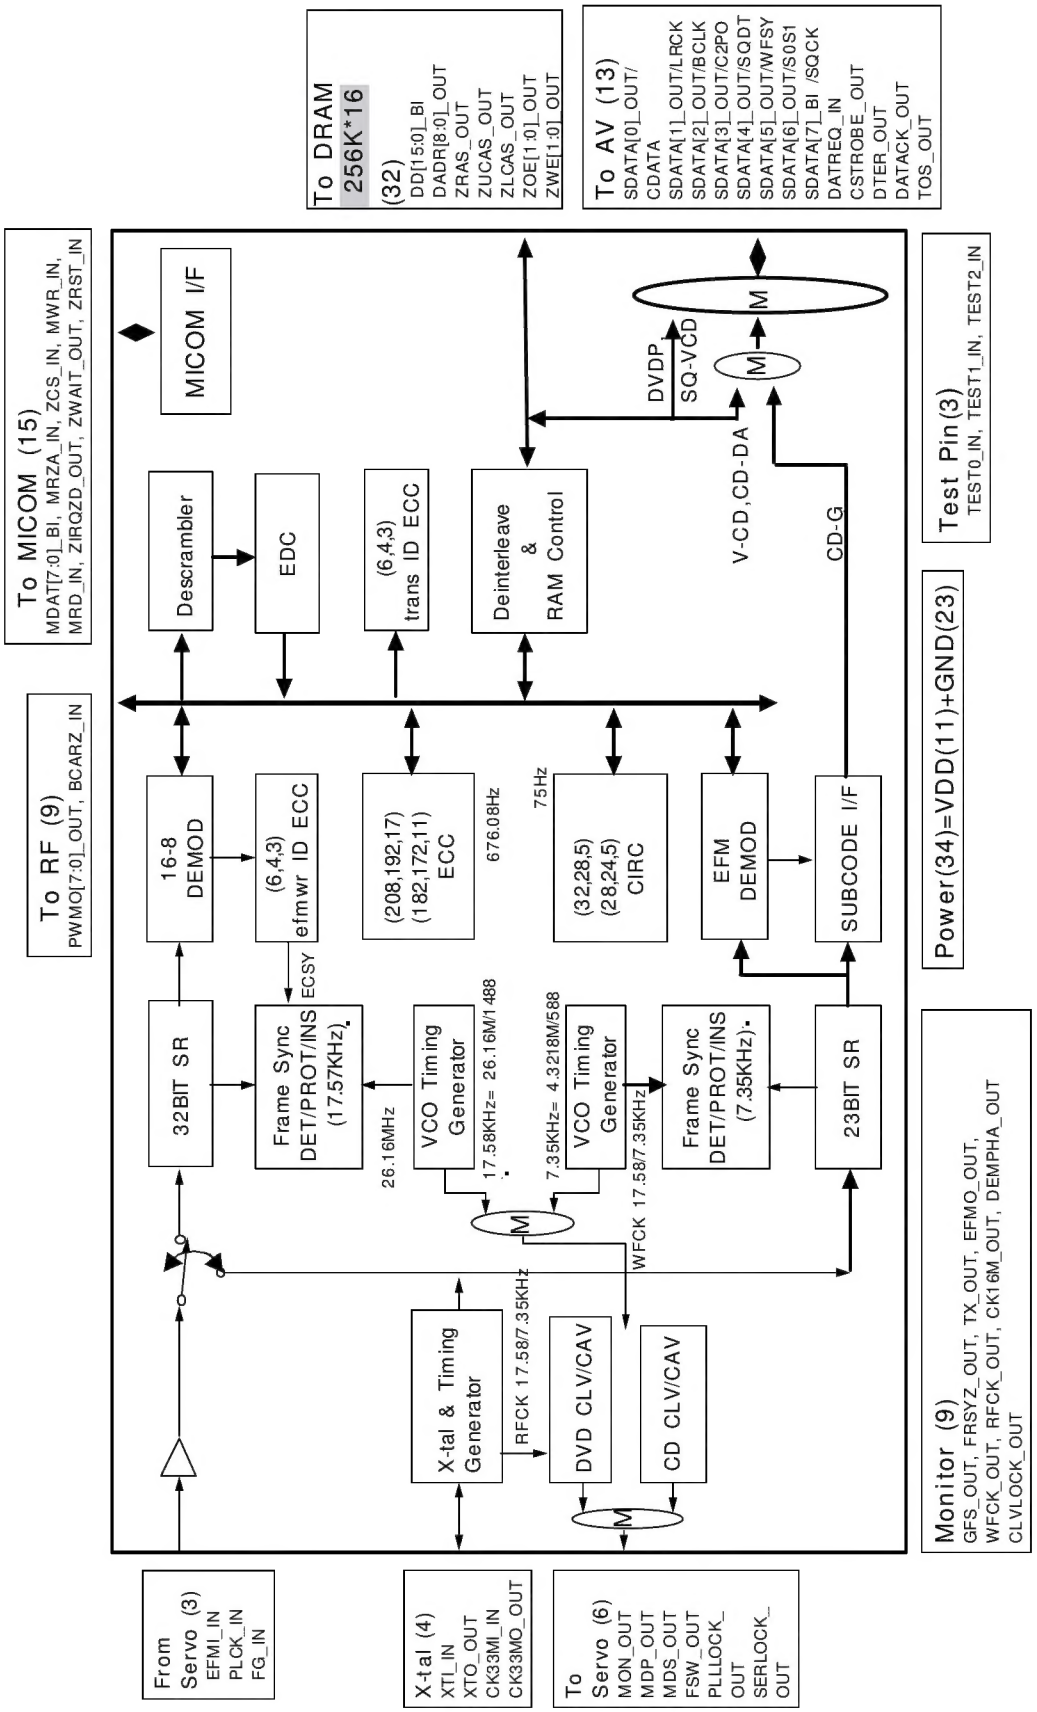

No.	Pin Name	Description	I/O	Notes
1	DVSS	Digital GND (0 V)		
2	ZCS_IN	Chip Select (Active Low)	I	MICOM
3	MRZA_IN	Micom Register Select (L REGISTER H fi DATA)	I	MICOM
4	DVSS	Digital GND (0 V)		
5	MDAT7_BI	MICOM Data Bus	B	MICOM
6	MDAT6_BI	MICOM Data Bus	B	MICOM
7	MDAT5_BI	MICOM Data Bus	B	MICOM
8	MDAT4_BI	MICOM Data Bus	B	MICOM
9	MDAT3_BI	MICOM Data Bus	B	MICOM
10	MDAT2_BI	MICOM Data Bus	B	MICOM
11	MDAT1_BI	MICOM Data Bus	B	MICOM
12	MDAT0_BI	MICOM Data Bus	B	MICOM
13	DVDD	Digital Power (+5V)		
14	XTI_IN	System Clock Input for 26.16 MHz	I	XTAL
15	XTO_OUT	System Clock Output for 26.16 MHz	O	XTAL
16	DVSS	Digital GND (0 V)		
17	DD15_BI	DRAM Data Bus	B	DRAM
18	DD0_BI	DRAM Data Bus	B	DRAM
19	DD14_BI	DRAM Data Bus	B	DRAM
20	DD1_BI	DRAM Data Bus	B	DRAM
21	DVSS	Digital GND (0 V)		
22	DD13_BI	DRAM Data Bus DRAM Address Bus	B	DRAM
23	DD2_BI	DRAM Data Bus	B	DRAM
24	DD12_BI	DRAM Data Bus	B	DRAM
25	DD3_BI	DRAM Data Bus	B	DRAM
26	DVDD	Digital Power (+5 V)		
27	DD11_BI	Digital Data Bus	B	DRAM
28	DD4_BI	Digital Data Bus	B	DRAM
29	DD10_BI	Digital Data Bus	B	DRAM
30	DD5_BI	Digital Data Bus	B	DRAM
31	DVSS	Digital GND (0 V)		
32	DD9_BI	DRAM Data Bus	B	DRAM
33	DD6_BI	DRAM Data Bus	B	DRAM
34	DD8_BI	DRAM Data Bus	B	DRAM
35	DD7_BI	DRAM Data Bus	B	DRAM
36	DVSS	Digital GND (0 V)		
37	ZLCAS_OUT	DRAM Low Column Address Strobe	O	DRAM
38	ZUCAS_OUT	DRAM Upper Column Address Strobe	O	DRAM
39	ZWE1_OUT	DRAM Write Enable 1 (8M ONLY)	O	DRAM
40	ZWE0_OUT	DRAM Write Enable 0 (4M, 8M, 16M)	O	DRAM
41	ZOE1_OUT	DRAM Output Enable 1 (16M MODE DADR9)	O	DRAM
42	DVDD	Digital Power (+5 V)		
43	ZOE0_OUT	DRAM Output Enable 0	O	DRAM
44	ZRAS_OUT	DRAM Row Address Strobe	O	DRAM
45	DADR8_OUT		O	DRAM
46	DADR7_OUT	DRAM Address Bus	O	DRAM
47	DVSS	Digital GND (0 V)		
48	DADR0_OUT	DRAM Address Bus	O	DRAM
49	DADR6_OUT	DRAM Address Bus	O	DRAM
50	DADR1_OUT	DRAM Address Bus	O	DRAM
51	DADR5_OUT	DRAM Address Bus	O	DRAM
52	DADR2_OUT	DRAM Address Bus	O	DRAM
53	DADR4_OUT	DRAM Address Bus	O	DRAM
54	DADR3_OUT	DRAM Address Bus	O	DRAM
55	DVSS	Digital GND (0 V)		
56	DVSS	Digital GND (0 V)		
57	TOS_OUT	Top of Sector	O	AV Decoder
58	DATACK_OUT	Data Acknowledge Signal Output	O	AV Decoder
59	DVDD	DIGITAL Power (+5 V)		
60	SDATA0_OUT	DVD Data/CD Data Bit Stream (CDATA)	O	AV Decoder
61	SDATA1_OUT	DVD Data/CD Data L/R Clock (LRCK)	O	AV Decoder
62	SDATA2_OUT	DVD Data/CD Data Bit Clock (BLCK)	O	AV Decoder
63	SDATA3_OUT	DVD Data/CD Data Error Flag (C2PO)	O	AV Decoder
64	SDATA4_OUT	DVD Data/Subcode Serial Data (SQDT)	O	AV Decoder

No.	Pin Name	Description	I/O	Notes
65	SDATA5_OUT	DVD Data/Subcode Frame Sync (WFSY)	O	AV Decoder
66	SDATA6_OUT	DVD Data/Subcode Block Sync (S0S1)	O	AV Decoder
67	SDATA7_BI	DVD Data/Subcode Serial Clock (SQCK)	B	AV Decoder
68	DVSS	Digital GND (0 V)		
69	CSTROBE_OUT	Data Strobe (Clock) Output	O	AV Decoder
70	DATREQ_IN	Data Request from A/V Decoder or ROM Decoder	I	AV Decoder
71	DTER_OUT	DVD Data Error Output	O	AV Decoder
72	DVSS	Digital GND (0 V)		
73	PWMO7_OUT	PWM Output Signal	O	RF
74	PWMO6_OUT	PWM Output Signal	O	RF
75	PWMO5_OUT	PWM Output Signal	O	RF
76	PWMO4_OUT	PWM Output Signal	O	RF
77	DVDD	Digital Power (+5 V)		
78	PWMO3_OUT	PWM Output Signal	O	RF
79	PWMO2_OUT	PWM Output Signal	O	RF
80	PWMO1_OUT	PWM Output Signal	O	RF
81	PWMO0_OUT	PWM Output Signal	O	RF
82	DVSS	Digital GND (0 V)		
83	DVSS	Digital GND (0 V)		
84	DVSS	Digital GND (0 V)		
85	DVDD	DIGITAL Power (+5 V)		
86	DVDD	DIGITAL Power (+5 V)		
87	DVSS	Digital GND (0 V)		
88	DVSS	Digital GND (0 V)		
89	DVSS	Digital GND (0 V)		
90	DVSS	Digital GND (0 V)		
91	FRSYZ_OUT	Frame Sync Out	O	Monitor
92	TX_OUT	Digital Out	O	Monitor
93	GFS_OUT	Good Frame Sync Detection State Output (OK at H)	O	Monitor
94	DVSS	Digital GND (0 V)		
95	CK33MI_IN	System Clock Input for 33.8688 MHz	I	X-tal
96	CK33MO_OUT	System Clock Output for 33.8688 MHz	O	X-tal
97	DVDD	Digital Power (+5 V)		
98	TEST0_IN	Test Mode Selection Terminal	I	
99	TEST1_IN	Test Mode Selection Terminal	I	
100	TEST2_IN	Test Mode Selection Terminal	I	
101	EFMO_OUT	EFM Out	O	Monitor
102	WFCK_OUT	Write Frame Pulse	O	Monitor
103	RFCK_OUT	Reference Frame Pulse	O	Monitor
104	PLCK_IN	Phase Locked Clock	I	Servo
105	DVSS	Digital GND (0 V)		
106	PLLLOCK_OUT	Lock Signal for PLL	O	Servo
107	CLVLOCK_OUT	Lock Signal for CLV	O	Monitor
108	SERLOCK_OUT	Lock Signal for SERVO	O	Servo
109	MDP_OUT	Spindle Motor Phase Control Signal (3-STATE)	O	Servo
110	MDS_OUT	Spindle Motor Speed Control Signal (3-STATE)	O	Servo
111	DVSS	Digital GND (0 V)		
112	DVSS	Digital GND (0 V)		
113	MON_OUT	Spindle Motor Output Filter Switching Output	O	Servo
114	FG_IN	Reference Signal for CAV	I	Servo
115	FSW_OUT	Spindle Motor Output Filter Switching Output (3-STATE)	O	Servo
116	EFMI_IN	EFM/EFM+ Signal Input Notes	I	Servo
117	DVDD	Digital Power (+5 V)		
118	DVDD	Digital Power (+5 V)		
119	DVDD	Digital Power (+5 V)		
120	CK16M_OUT	CK33Ms 2 Division Clock / 16.9344 MHz	O	Monitor
121	DEMPHA_OUT	HIGH, when on Deemphasis	O	Monitor
122	BCARZ_IN	BCA Input Signal	I	RF
123	DVSS	Digital GND (0 V)		
124	ZRST_IN	Hardware Reset (Active Low)	I	MICOM
125	ZWAIT_OUT	Micom Read / Write Access Wait (Wait at L)	O	MICOM
126	ZIRQZD_OUT	Interrupt Request to Micom	O	MICOM
127	MRD_IN	Micom Read Strobe (Active Low)	I	MICOM
128	MWR_IN	Micom Write Strobe (Active Low)	I	MICOM

2-1-3 DIC2 (KM416C254D ; CMOS 4M DRAM)

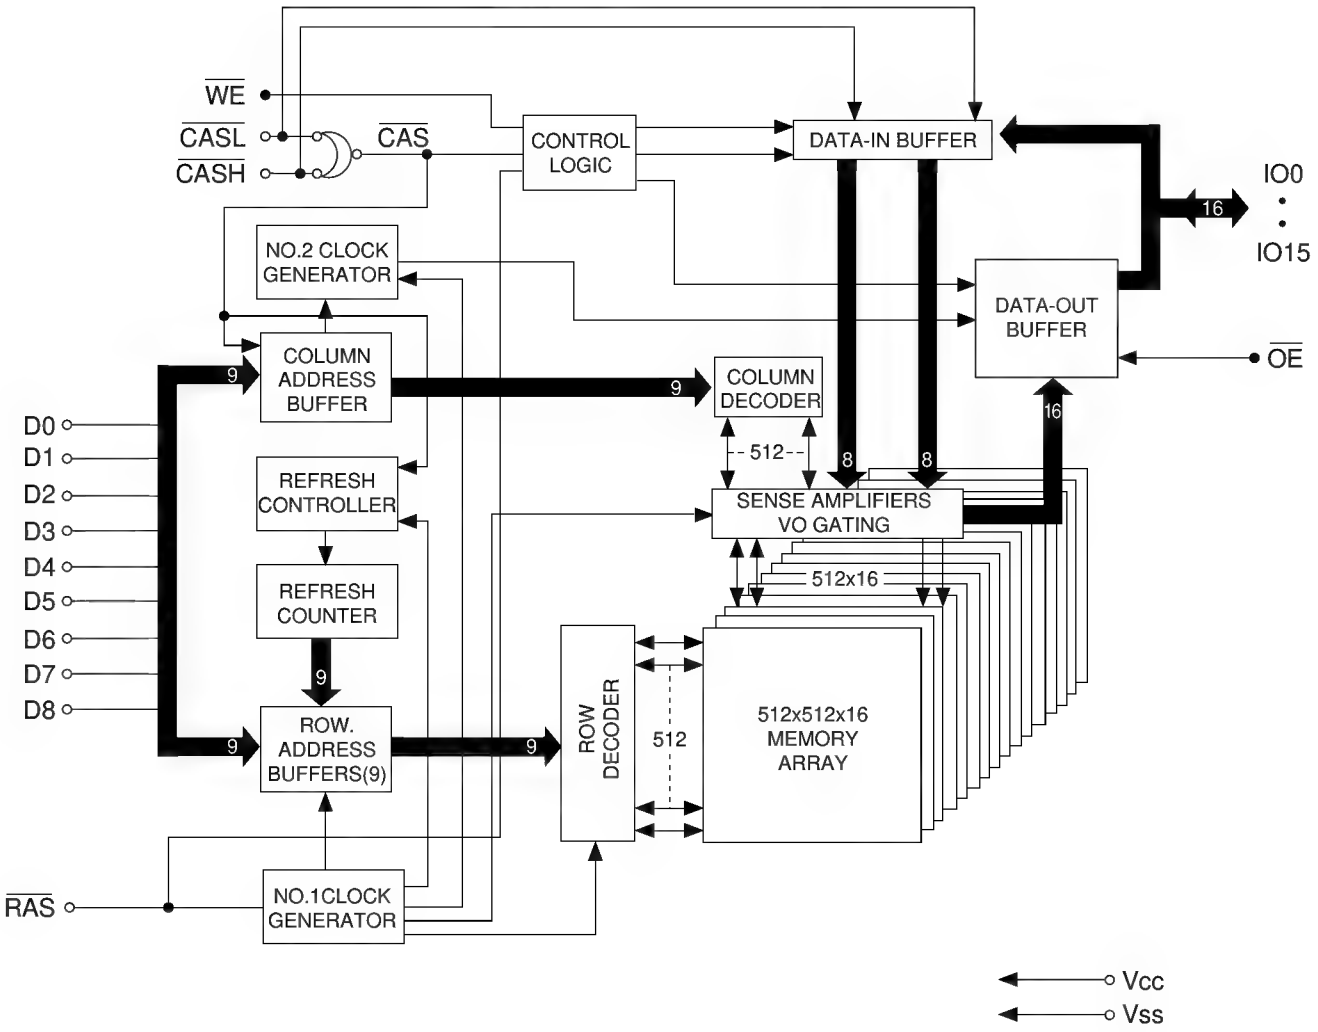

PIN NO.	SYM.	TYPE	DESCRITION
16~19, 22~26	A0~A8	Input	Address Input
14	$\overline{RAS}$	Input	Row Address Strobe
28	$\overline{CASH}$	Input	Column Address Strobe/Upper Byte Control
29	$\overline{CASL}$	Input	Column Address Strobe/Lower Byte Control
13	$\overline{WE}$	Input	Write Enable
27	$\overline{OE}$	Input	Output Enable
2~5, 7~10, 31~34, 36~39	I/O0~I/O15	Input/Output	Data Input/Output
1, 6, 20	Vcc	Supply	Power, 5V
21, 35, 40	Vss	Ground	Ground
11, 12, 15, 30	NC	-	No Connect

2-1-4 MIC1 (TMP95C265 ; Main Micom)

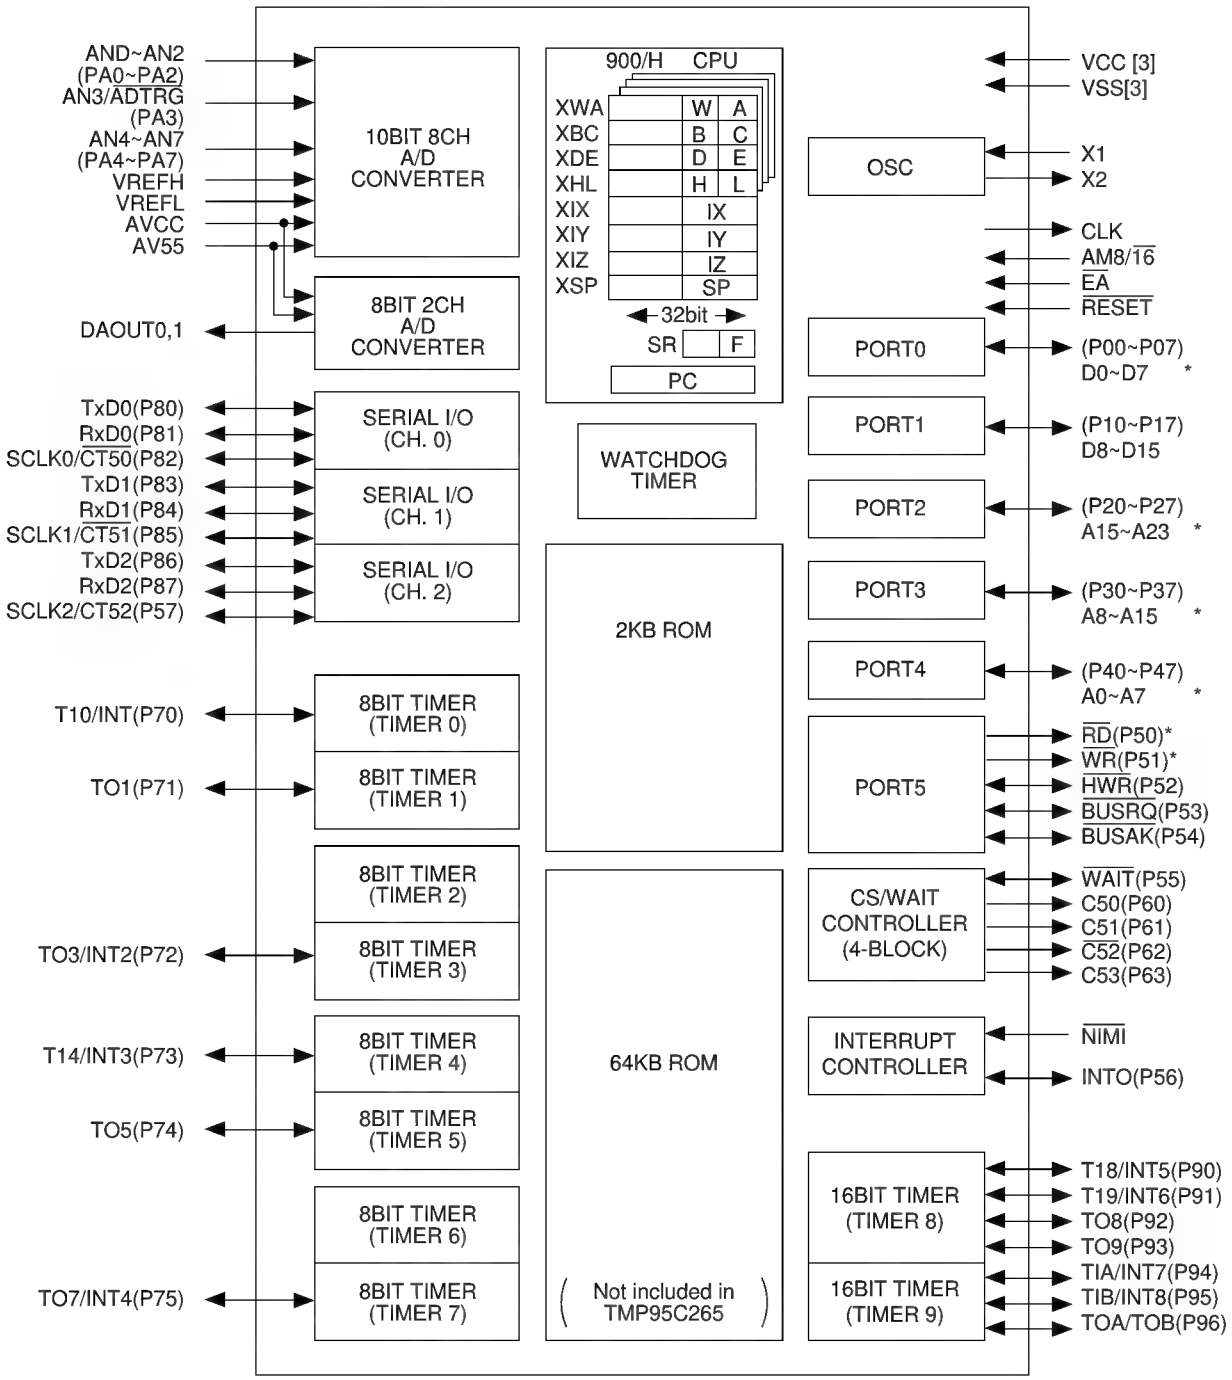

NO	PORT NAME	ASSIGNED NAME	DESCRIPTION	TYPE	REMARK
1	VREFL	DGND	A/D Ref Input(L)	I	DGND
2	AVss	DGND	A/D Ref Input	-	DGND
3	AVcc	5D	A/D VCC Input	-	5D
4	DAOUT0	MTP1		0	NC
5	DAOUT1	MPT2		0	NC
6	/NMI	-	PULL-UP	I	
7	P53	CSB	D. Servo IC Chip Select	0	KS1452(10)
8	P54/BUSAK	MTP3		0	
9	/WAIT	/MWAIT	/Wait(ZiVA, DSP)	I	/MWait
10	P56	DVD/CD	DVD/CD RF AGC Gain Select	0	RF(KS1461)
11	SCLK2	SCLK	Serial Data Clock	I	FRONT
12	P80/TXD0	MD	RF Contrl Data	0	KS1461(69)
13	P81/RXD0	STB	RF Data Latch	I/0	KS1461(71)
14	P82/SCLKO	MC	RF Control Clock	0	KS1461(70)
15	P83/TXD1	MTP5		0	NC
16	P84/RXD1	MTP6		0	NC
17	P85/SCLK1	MTP4		0	NC
18	TXD2	RXD	Serial Data Output	0	FRONT
19	RXD2	TXD	Serial Data Input	I	FRONT
20	CSO	/CSO	EPROM(M27C801) Select	0	EPROM(M27C801)
21	CS1	/CS1	SRAM(KM681000) Select	0	SRAM(KM681000)
22	CS2	/DVD1CS	AVDecoder(ZiVA4) Select	0	AVDecoder(ZiVA4)
23	CS3	/DSPCS	Data Processor(KS1453) Select	0	Data Processor(KS1453)
24	CLK	CLK	CLOCK OUTPUT (System Clock-2)	0	fc/2
25	Vcc	5D		-	VCC
26	Vss	GDND	GND	-	GND
27	X1	X1	High Frequency OSC in	I	20MHz
28	X2	X2	High frequency OSC out	0	
29	/EA	/EA	Internal ROM Less Mode	I	GND
30	/REST	/MRST	Master reset from FRONT	I	FRONT, IC
31	INT1	SRQ	Interrupt from Front Micom	I	FRONT
32	P71	RRQ	Request to Front Micom	0	FRONT
33	P72	SCL	EEPROM CLOCK	0	KS24C020(6)
34	P73	SDA	EEPROM DATA I/O	0	KS24C020(5)
35	P74	OPEN	Tray Out Motor Control Output	0	DRIVER(0PIN-, 16)
36	P75	CLOSE	Tray In Motor Control Output	0	DRIVER(0PIN-, 17)
37	INT5	FGINT	Interrupt from Spindle Motor FG	I	DRIVER(FG, 2)
38	P91	ACT MUTE	Driver IC MUTE(Actuator)	0	DRIVER(MUTE4, 37)
39	P92	M/D MUTE	Driver IC MUTE(Spindle)	0	DRIVER(MUTE3, 38)
40	P93	ZRST	DSP H/W reset	0	KS1453(124)
41	INT7	/DVDINT	Interrupt from AV-DEC	I	INV(ZiVA-4(51))
42	INT8	/DSPINT	Interrupt from DSP	I	INV(KS1453(126))
43	P96	ZIVA RST	AV Decoder Reset(Active H:4.0, L:4.1)	0	ZiVA-4(52)
44	Vcc	5D			
45	D0	HAD0	Data 0	I/0	
46	D1	HAD1	Data 1	I/0	
47	D2	HAD2	Data 2	I/0	
48	D3	HAD3	Data 3	I/0	
49	D4	HAD4	Data 4	I/0	
50	D5	HAD5	Data 5	I/0	

NO	PORT NAME	ASSIGNED NAME	DESCRIPTION	TYPE	REMARK
51	D6	HAD6	Data6	I/0	
52	D7	HAD7	Data7	I/0	
53	P10	CLSW	Close Switch	I	DECK
54	P11	OPSW	Open Swithc	I	DECK
55	P12	MTP8	Reserved I/0	0	NC
56	P13	MTP9	Reserved I/0	0	NC
57	P14	MTP10	Reserved I/0	0	NC
58	P15	MTP11	Reserved I/0	0	NC
59	P16	MTP12	Reserved I/0	0	NC
60	P17	MTP13	Reserved I/0	0	NC
61	AM8/16	AM8	Address Mode(H:8 BIT MODE)	I	VCC
62	Vss	DGND		-	GND
63	Vcc	5D		-	VCC
64	A23	HA23	SERVO /RD Strobe Mask Signal	0	74HCOO(5)
65	P26/A22	MRP14	Reserved Address Port	0	NC
66	P25/A21	MRP15	Reserved Address Port	0	NC
67	P24/A20	MRP16	Reserved Address Port	0	NC
68	A19	HA19	Address 19	0	EPROM, SRAM ADDRESS
69	A18	HA18	Address 18	0	EPROM, SRAM ADDRESS
70	A17	HA17	Address 17	0	EPROM, SRAM ADDRESS
71	A16	HA16	Address 16	0	EPROM, SRAM ADDRESS
72	A15	HA15	Address 15	0	EPROM, SRAM ADDRESS
73	A14	HA14	Address 14	0	EPROM, SRAM ADDRESS
74	A13	HA13	Address 13	0	EPROM, SRAM ADDRESS
75	A12	HA12	Address 12	0	EPROM, SRAM ADDRESS
76	A11	HA11	Address 11	0	EPROM, SRAM ADDRESS
77	A10	HA10	Address 10	0	EPROM, SRAM, Zlva Adrs
78	A9	HA9	Address 9	0	EPROM, SRAM, Zlva Adrs
79	A8	HA8	Address 8	0	EPROM, SRAM, Zlva Adrs
80	A7	HA7	Address 7	0	EPROM, SRAM ADDRESS
81	A6	HA6	Address 6	0	EPROM, SRAM ADDRESS
82	A5	HA5	Address 5	0	EPROM, SRAM ADDRESS
83	A4	HA4	Address 4	0	EPROM, SRAM ADDRESS
84	A3	HA3	Address 3	0	EPROM, SRAM ADDRESS
85	A2	HA2	Address 2	0	EPROM, SRAM ADDRESS
86	A1	HA1	Address 1(SERVO DAB)	0	EPROM, SRAM ADDRESS
87	A0	HA0	Address 0(DSP DAB)	0	EPROM, SRAM ADDRESS
88	/RD	/RD	/Read Strobe	0	/Read
89	/WR	/WR	/Write Strobe	0	/Write
90	P52	RSTB	RF&Servo IC Reset	0	KS1461 (73), KS1452 (9)
91	Vss	DGND		-	DGND
92	PA0	RFRP	Tracking Lock monitir from SERVO	I	KS1452 (7)
93	PA1	TILTO	Monitor signal	I	KS1452 (69)
94	PA2	MTP17	Reserved I	I	NC
95	PA3	SENSE	SENSE monitor from SERVO	I	KS1452 (22)
96	PA4	FR	Spindle direcrion from SP Driver	I	BA6849FP (20)
97	PA5	SLOCK	LOCK monitor from DSP	I	KS1453 (108)
98	PA6	FOKB	Focus lock monitor from RF	I	KS1461 (48)
99	PA7	RFO	RF sum signal (Analog Lnput)	I	RFO
100	VREFH	5D	A/D Ref Input (H)	I	5D

2-1-5 MIC2 (M27C801 ; 8Mbit (1Mbx8) UVEPROM and OTP EPROM)

LOGIC DIAGRAM

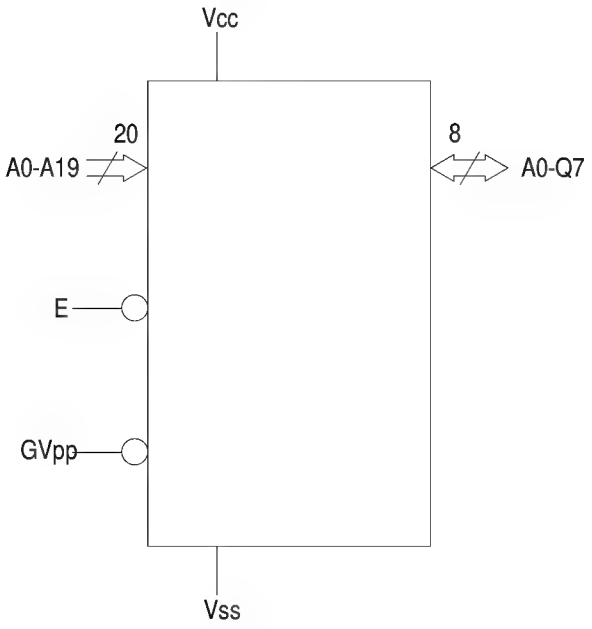

TOP VIEW

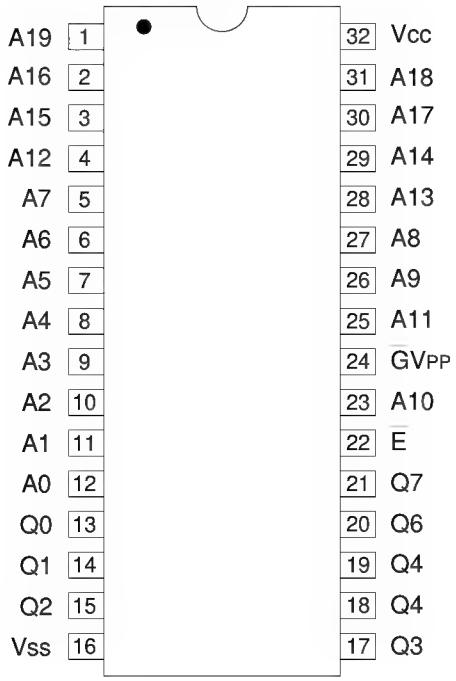

NAME	FUNCTION
A0-A19	Address Inputs
Q0-Q7	Data Outputs
$\overline{E}$	Chip Enable
OVpp	Output Enable/Program Supply
Vcc	Supply Voltage
Vss	Ground

2-1-6 MIC3 (KM681000C ; CMOS 1M SRAM)

BLOCK DIAGRAM

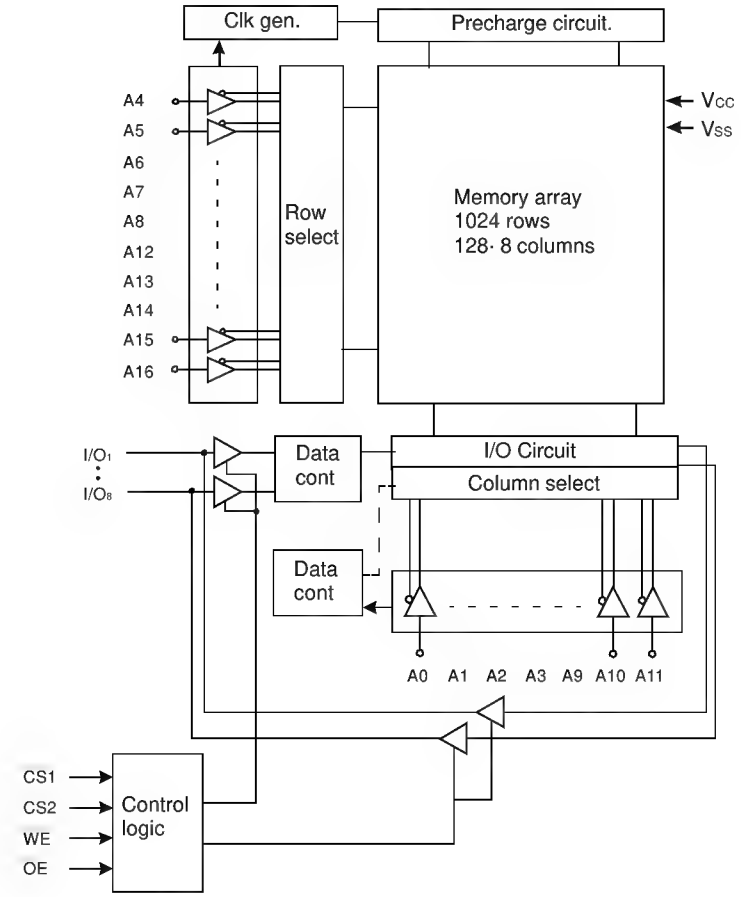

TOP VIEW

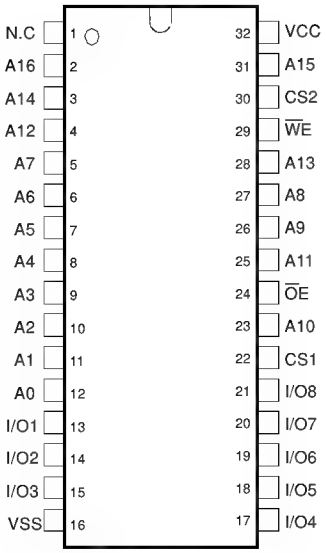

Name	Function	Name	Function
$\overline{CS}_1$,CS_2	Chip Select Inputs	I/O_1~I/O_8	Data Inputs/Out-
$\overline{OE}$	Output Enable	Vcc	Power
$\overline{WE}$	Write Enable	Vss	Ground
A_0~A_{16}	Address Inputs	N.C	No Connection

2-1-7 FIC1 (LC86P6232 ; Front Micom)

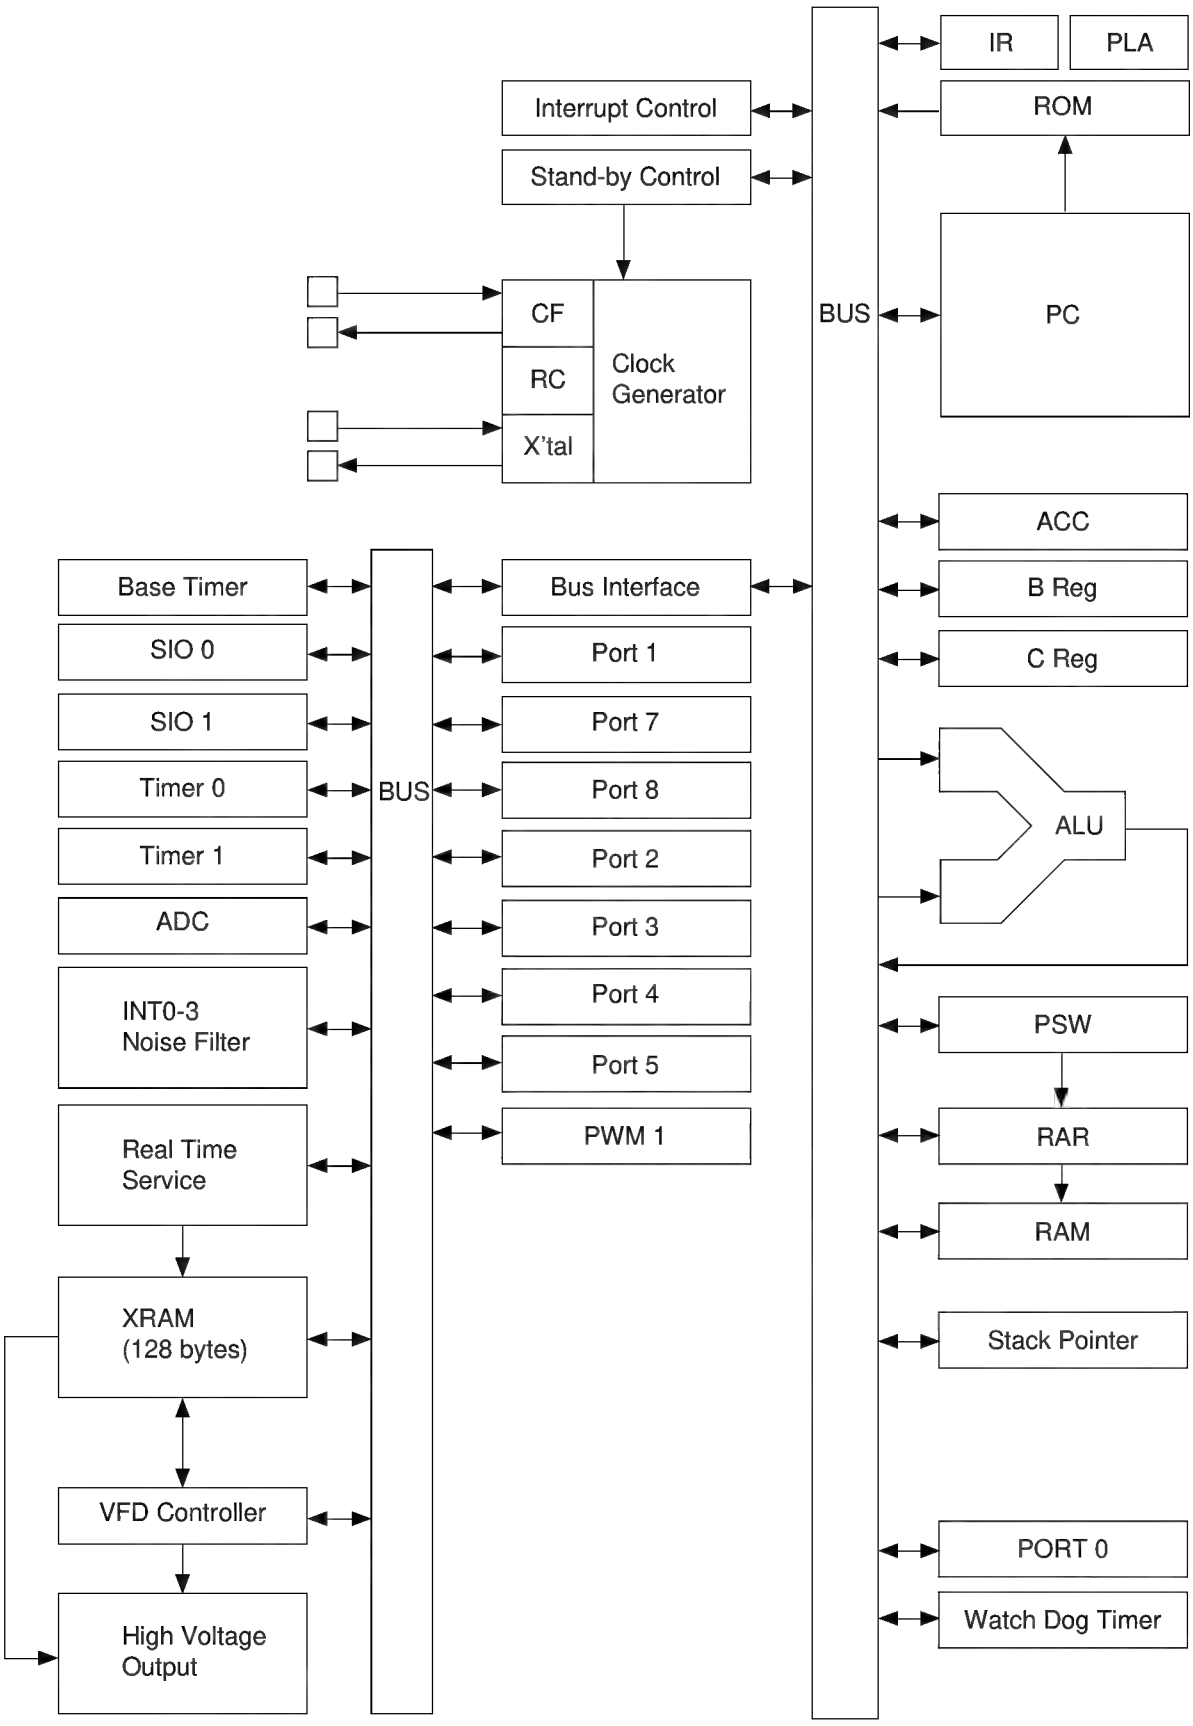

NO	PORT NAME	TYPE	ASSIGNED NAME	DESCRIPTION	REMARK
1	P52	0	MRST	Front end reset	RESET
2	PWM1	-	TP1		NC
3	P20	0	CS1	Chip Select 1	AK4393
4	P21	0	CCLK	Control Data Clock	AK4393/AK4356
5	P22	0	CDTI	Control Data	AK4393/AK4356
6	P23	0	CS2	Chip Select 2	AK4356
7	P24	0	DARST	PD(Power Down)	AK4393
8	P25	0	DARST 1	PD(Power Down)	AK4356
9	P26	0	VMUTE0	BA7660 MUTE(VIC2)	VIDEO(RESERVED)
10	P27	0	VMUTE1	BA7660 MUTE(VIC1)	VIDEO(RESERVED)
11	TEST1	-	TP4		NC
12	*RES	I	*RES	Reset	
13	XT1	-	GND	Low Frequency OSC in	
14	XT2	-	TP5	Low Frequency OSC out	
15	VSS	-	GND		
16	CF1	I	-	High Frequency OSC in	
17	CF2	0	-	High Frequency OSC out	
18	VDD	-	VDD		
19	ANO/P8 0	I	ECHO_VR	ECHO volume A/D input	KARAOKE
20	AN1/P8 1	I	MIC DET	MIC detect	KARAOKE
21	AN2/P8 2	-	TP19		NC
22	AN3/P8 3	I	KEY0	KEY SCAN	TACT SW
23	AN4/P8 4	I	KEY1	KEY SCAN	TACT SW
24	AN5/P8 5	I	KEY2	KEY SCAN	TACT SW
25	AN6/P8 6	-	NC		
26	AN7/P8 7	-	NC		
27	P70/IN TO	I	RRQ	Request to Front Micom	MAIN MICOM
28	P71/IN T1	-	TP25		NC
29	P72/IN T2	-	TP26		NC
30	P73/IN T3	I	REMOCON	REMOCON data in	REMOCON EYE
31	S0/T0	0	GRID11	FLT GRID CONTROL	FLT
32	S1/T1	0	GRID10	FLT GRID CONTROL	FLT
33	S2/T2	0	GRID9	FLT GRID CONTROL	FLT
34	S3/T3	0	GRID8	FLT GRID CONTROL	FLT
35	S4/T4	0	GRID7	FLT GRID CONTROL	FLT
36	S5/T5	0	GRID6	FLT GRID CONTROL	FLT
37	S6/T6	0	GRID5	FLT GRID CONTROL	FLT
38	S7/T7	0	GRID4	FLT GRID CONTROL	FLT
39	S8/T8	0	GRID3	FLT GRID CONTROL	FLT
40	S9/T9	0	GRID2	FLT GRID CONTROL	FLT
41	S10/T10	0	GRID1	FLT GRID CONTROL	FLT
42	S11/T11	0			
43	S12/T12	0	SEG1	FLT SEGMENT CONTROL	FLT
44	S13/T13	0	SEG2	FLT SEGMENT CONTROL	FLT
45	S14/T14	0	SEG3	FLT SEGMENT CONTROL	FLT
46	S15/T15	0	SEG4	FLT SEGMENT CONTROL	FLT
47	VOD	-	+5V		
48	VP	-	-28V		
49	S16	0	SEG5	FLT SEGMENT CONTROL	FLT
50	S17	0	SEG6	FLT SEGMENT CONTROL	FLT

NO	PORT NAME	TYPE	ASSIGNED NAME	DESCRIPTION	REMARK
51	S18	-	SEG7	FLT SEGMENT CONTROL	FLT
52	S19	-	SEG8	FLT SEGMENT CONTROL	FLT
53	S20	-	SEG9	FLT SEGMENT CONTROL	FLT
54	S21	0	SEG10	FLT SEGMENT CONTROL	FLT
55	S22	0	SEG11	FLT SEGMENT CONTROL	FLT
56	S23	0	SEG12	FLT SEGMENT CONTROL	FLT
57	S24	0	SEG13	FLT SEGMENT CONTROL	FLT
58	S25	0	SEG14	FLT SEGMENT CONTROL	FLT
59	S26	0	SEG15	FLT SEGMENT CONTROL	FLT
60	S27	0	SEG16	FLT SEGMENT CONTROL	FLT
61	S28	0	SEG17	FLT SEGMENT CONTROL	FLT
62	S29	0	SEG18	FLT SEGMENT CONTROL	FLT
63	S30	0	SEG19	FLT SEGMENT CONTROL	FLT
64	S31	0	SEG20	FLT SEGMENT CONTROL	FLT
65	P00	I	MODE4	HARDWARE MODE SELECT	MARKET CODE
66	P01	I	MODE3	HARDWARE MODE SELECT	MARKET CODE
67	P02	I	MODE2	HARDWARE MODE SELECT	MARKET CODE
68	P03	I	MODE1	HARDWARE MODE SELECT	MARKET CODE
69	P04	I	MODE0	HARDWARE MODE SELECT	MARKET CODE
70	P05	-	TP10		NC
71	P06	-	TP11		NC
72	P07	--			NC
73	P10/S0 0	0	TXD	SERIAL DATA OUT	SERIAL DATA OUT
74	P11/S1 0	I	RXD	SERIAL DATA IN	SERIAL DATA IN
75	P12/SC K0	0	SCLK	SERIAL CLOCK	SERIAL CLOCK
76	P13/S0 1	-	TP12		NC
77	P14/SI 1	-	TP13		NC
78	P15/SC K1	-	TP14		NC
79	P16/BU Z	-	TP15		NC
80	P17/PW MO	-	TP16		NC
81	P30	I	S1	SHUTTLE DATA	JOG/SHUTTLE
82	P31	I	S2	SHUTTLE DATA	JOG/SHUTTLE
83	P32	I	S3	SHUTTLE DATA	JOG/SHUTTLE
84	P33	I	S4	SHUTTLE DATA	JOG/SHUTTLE
85	P34	I	J1	JOG DATA	JOG/SHUTTLE
86	P35	I	J2	JOG DATA	JOG/SHUTTLE
87	P36	I	AT	VIDEO OUT SEL.	VIDEO SELECT(OPEN)
88	P37	I	AD	VIDEO OUT SEL.	VIDEO SELECT
89	VSS	-	+5V		
90	VDD	-	GND		
91	P40	0	RGBCTL	SCART CONTROL	SCART JACK
92	P41	0	SCON_B	SCART CONTROL	SCART JACK
93	P42	-	TP28		NC
94	P43	0	WIDE	SCART CONTROL	SCART JACK
95	P44	0	SRQ	request to main micom	NC
96	P45	0	SAVE	POWER SAVE MODE	POWER
97	P46	0	AMUTE1	REAR MUTE	AUDIO
98	P47	0	AMUTE0	FRONT MUTE	AUDIO
99	P50	0	LED	STANDBY LED	LED
100	P51	0	ON/OFF	POWER ON/OFF CONTROL	POWER

2-1-8 RIC1 (KS1461 ; RF Signal Processor)

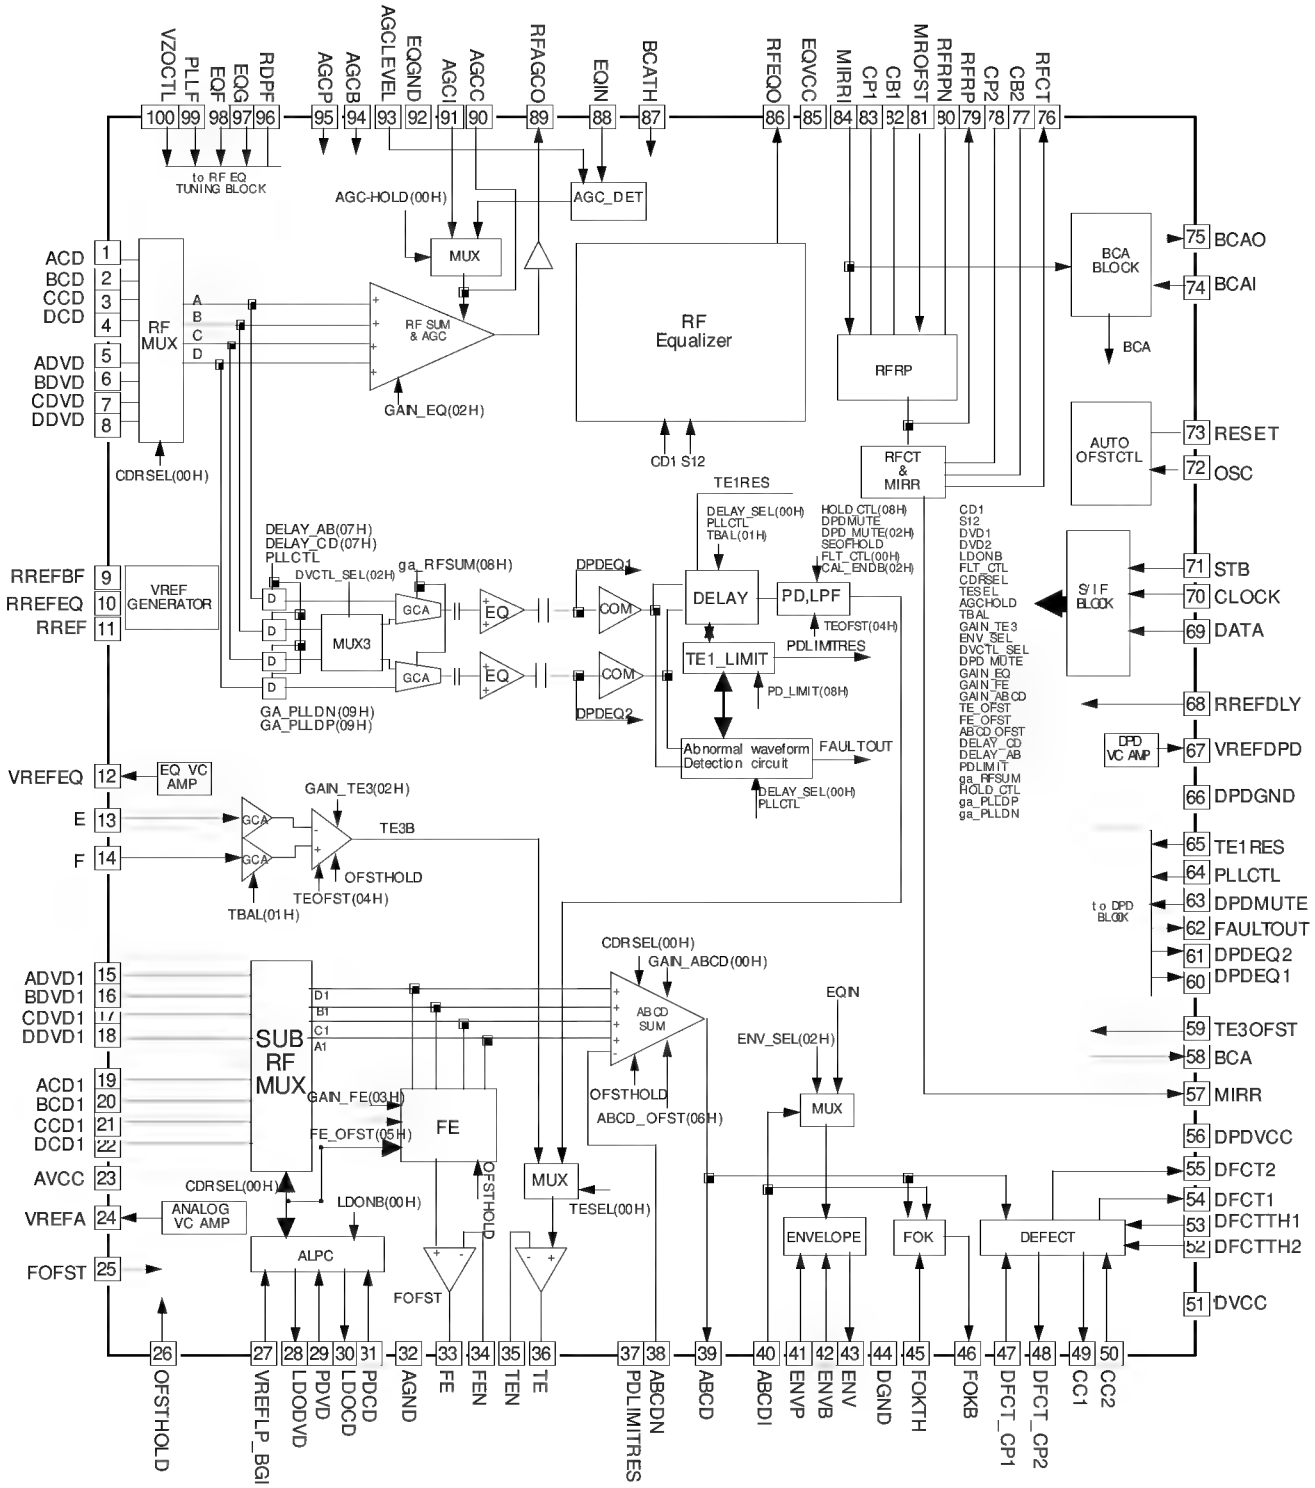

Pin No.	Pin Name	I/O	Description	Related Block	Related Part
1	ACD	I	Optical main beam A, AC Coupling input terminals for CD of RF block	PRE AMP	P/U
2	BCD	I	Optical main beam B, AC Coupling input terminals for CD of RF block	PRE AMP	P/U
3	CCD	I	Optical main beam C, AC Coupling input terminals for CD of RF block	PRE AMP	P/U
4	DCD	I	Optical main beam D, AC Coupling input terminals for CD of RF block	PRE AMP	P/U
5	ADVD	I	Optical main beam A, AC Coupling input terminals for DVD of RF block	PRE AMP	P/U
6	BDVD	I	Optical main beam B, AC Coupling input terminals for DVD of RF block	PRE AMP	P/U
7	CDVD	I	Optical main beam C, AC Coupling input terminals for DVD of RF block	PRE AMP	P/U
8	DDVD	I	Optical main beam D, AC Coupling input terminals for DVD of RF block	PRE AMP	P/U
9	RREFBF	-	RF AMP I.O buffer bias resistance connection terminal	RF AMP	-
10	RREFEQ	-	RF EQ BIAS resistance connection terminal	RF EQ	-
11	RREF	-	Analog Block bias resistance connection terminal	ANALOG	-
12	VREFEQ	-	CAP connection terminal for RF EQ Center voltage	EQ VC AMP	-
13	E	I	CD Optical sub beam E input terminal for Servos	TE 3B	P/U
14	F	I	CD Optical sub beam F input terminal for Servos	TE 3B	P/U
15	ADVD1	I	Optical main beam A input terminal for DVD of Servo block	SERVO AMP	P/U
16	BDVD1	I	Optical main beam B input terminal for DVD of Servo block	SERVO AMP	P/U
17	CDVD1	I	Optical main beam C input terminal for DVD of Servo block	SERVO AMP	P/U
18	DDVD1	I	Optical main beam D input terminal for DVD of Servo block	SERVO AMP	P/U
19	ACD1	I	Optical main beam A input terminal for CD of Servo block	SERVO AMP	P/U
20	BCD1	I	Optical main beam B input terminal for CD of Servo block	SERVO AMP	P/U
21	CCD1	I	Optical main beam C input terminal for CD of Servo block	SERVO AMP	P/U
22	DCD1	I	Optical main beam D input terminal for CD of Servo block	SERVO AMP	P/U
23	AVCC	P	Power voltage input terminal for Analog Part	ANALOG	-
24	VREFA	I/O	CAP connection terminal for Analog Part center voltage Uses an external block	ANA VC AMP	SERVO
25	FOFST	-	CAP connection terminal (open) for Focus Auto Offsets	FE AMP	-
26	OFSTHOLD	I	On/Off terminal for Auto Offset Block (L: Auto Offset Adjustments, H: Serial Offset Adjustments)	OFSTCTL	MICOM
27	VREFLP_BGI	I	Band gap voltage input block for ALPC	ALPC	-
28	LDODVD	O	Optical Laser Diodes operation voltage output terminal for DVD	ALPC	P/U
29	PDDVD	I	Optical Laser Monitor Diode voltage input terminal for DVD	ALPC	P/U
30	LDOCD	O	Optical Laser Diode operating voltage output terminal for CD	ALPC	P/U
31	PDCD	I	Optical Laser Monitor Diode voltage input terminal for CD	ALPC	P/U
32	AGND	P	Power GND terminal for Analog Part	ANALOG	-
33	FE	O	FE AMP output terminal	FE AMP	DSSP
34	FEN	I	Input terminal for selecting FE AMP Gain	FE AMP	-
35	TEN	I	Input terminal for selecting TE AMP Gain	TE AMP	-
36	TE	O	TE AMP output terminal	TE AMP	DSSP
37	PDLIMTRES	-	Bias resistance terminal for PDLIMIT	DPD	-
38	ABCDN	I	ABCD AMP for selecting Gain (-) input terminal	ABCD AMP	-
39	ABCD	O	ABCD AMP output terminal	ABCD AMP	-
40	ABCDI	I	ABCD AC Coupling input terminal for servo monitor	SERVO MONIT	-
41	ENVP	-	CAP connection terminal for selecting the RC value of Peak Hold for detecting RF Envelopes	RF ENV	-
42	ENVB	-	CAP connection terminal for selecting the RC value of Bottom Hold for detecting RF Envelopes	RF ENV	-
43	ENV	O	RF Envelope Detect Output terminal	RF ENV	DSSP
44	DGND	P	Power GND input terminal for digital circuits	DIGITAL	-
45	FOKTH	I	Focus OK comparating level input terminal	FOKB	-
46	FOKB	O	Focus OK comparator output terminal (L: Focus OK)	FOKB	DSSP
47	DFCT_CP1	-	Connection terminal for RC value of Peak Hold. for selecting the maximum time for Servo signal	DFCT	-
48	DFCT_CP2	-	Connection terminal for RC value of Peak Hold. for selecting the minimum defect time for PLL	DFCT	-
49	CC1	O	Peak Hold Output terminal for selecting the minimum Defect time for Defect	DFCT	-
50	CC2	I	Peak Hold AC Coupling Input terminal for Defect	DFCT	-
51	DVCC	P	Power voltage input terminal for digital circuit	DIGITAL	-
52	DFCTTH2	-	Resistance connection terminal for selecting the Defect Comparating Level for PLL	DEFECT	-
53	DFCTTH1	-	Resistance connection terminal for selecting the Defect Comparating Level for Servo	DEFECT	-
54	DFCT1	O	Defect output terminal for Servo	DEFECT	DSSP
55	DFCT2	O	Defect output terminal for PLL	DEFECT	PLL
56	DPDVCC	P	Power voltage input terminal for DPD TE	DPD	-
57	MIRR	O	Mirror output terminal	MIRR	DSSP
58	BCA	O	BCA output terminal	BCA	DSP

Pin No.	Pin Name	I/O	Description	Related Block	Related Part
59	TE3OFST	-	Cap connection terminal (open) for 3B TE Offset	3B TE AMP	-
60	DPDEQ1	O	DPD EQ (A+C) output terminal	DPD	-
61	DPDEQ2	O	DPD EQ (B+D) output terminal	DPD	-
62	FAULTOUT	O	DPD abnormal wave form output terminal (monitor)	DPD	-
63	DPDMUTE	I	DPD TE MUTE control terminal (H: Mute)	DPD	MICOM
64	PLLCTL	I	DPD TE PLL variable input terminal	DPD	SERVO
65	TE1RES	I	DPD TE PLL variable bias resistance	DPD	-
66	DPDGND	P	Power GND input terminal for DPD TE	DPD	-
67	VREFDPD	O	CAP connection terminal for DPD TE center voltage	DPD VC AMP	-
68	RREFDLY	-	Bias resistance connection terminal for Delay Block	Delay Block	-
69	DATA	I	Data input terminal	Serial Interface	MICOM
70	CLOCK	I	Clock input terminal	Serial Interface	MICOM
71	STB	I	Data Enable input terminal	Serial Interface	MICOM
72	OSC		Input terminal for RC value of OSC, for Auto Offset Block	Auto OFSTCTL	-
73	RESET	I	Reset input terminal (L: Reset) for Auto Offset Block	Auto OFSTCTL	MICOM
74	BCAI	I	BCA Filter1	BCA	-
75	BCAO	O	BCA Filter2 Related	BCA	-
76	RFCT	O	RF Ripple Center voltage output terminal for Mirror	MIRROR	DSSP
77	CB2	-	CAP connection terminal of RC value of Bottom Hold, for RFCT generation	MIRROR	-
78	CP2	-	CAP connection terminal of RC value of Peak Hold, for RFCT generation	MIRROR	-
79	RFRP	O	RF Ripple Amp output terminal for Mirror	MIRROR	DSSP
80	RFRPN	I	Input terminal for selecting RFRP Amp gain	MIRROR	-
81	MROFST	I	RF Ripple Offset control terminal for Mirror	MRROR	-
82	CB1	-	RC connection terminal of RC value of Bottom Hold, for RFRP generation	MRROR	-
83	CP1	-	RC connection terminal of RC value of Peak Hold, for RFRP generation	MRROR	-
84	MIRRI	I	Input terminal for MIRR signal generation	MRROR	-
85	EQVCC	P	Power voltage input signal for RF EQ	RF EQ	-
86	RFEQ0	0	RF EQ output terminal	RF EQ	PLL
87	BCATH	I	BCA Comparating Level control terminal	BCA	DSP
88	EQIN	I	RFAGCO input terminal for RF EQ	RFEQ,RFENV	DSSP
89	RFAGCO	O	RF AGC AMP output terminal	RF AGC	-
90	AGCC	-	CAP connection terminal for time constant of AGC	RF AGC	-
91	AGCI	I	AGC voltage input terminal while in AGC hold	RF AGC	-
92	EQGND	P	Power GND input terminal for RF EQ	RF EQ	-
93	AGCLEVEL	I	AGC Level control voltage input terminal (3.5 V) while in AGC hold off	RF AGC	-
94	AGCB	-	RC connection terminal for RC value of Bottom Hold, for RF AGC	RF AGC	-
95	AGCP	-	RC connection terminal for RC value of Peak Hold, for RF AGC	RF AGC	-
96	RDPF	-	Bias resistance connection terminal for selecting RF EQ frequency	RF EQ	-
97	EQG	I	RF EQ Boost Gain control voltage input terminal	RF EQ	DSSP
98	EQF	I	RF EQ Peak Frequency control voltage input terminal	RF EQ	DSSP
99	PLLF	I	Wide-band PLL compatible RF EQ Peak Frequency Control terminal	RF EQ	DSSP
100	VZOCTL	I	RF EQ zero control terminal	RF EQ	DSSP

2-1-9 SIC1 (KS1452 ; Servo Processor)

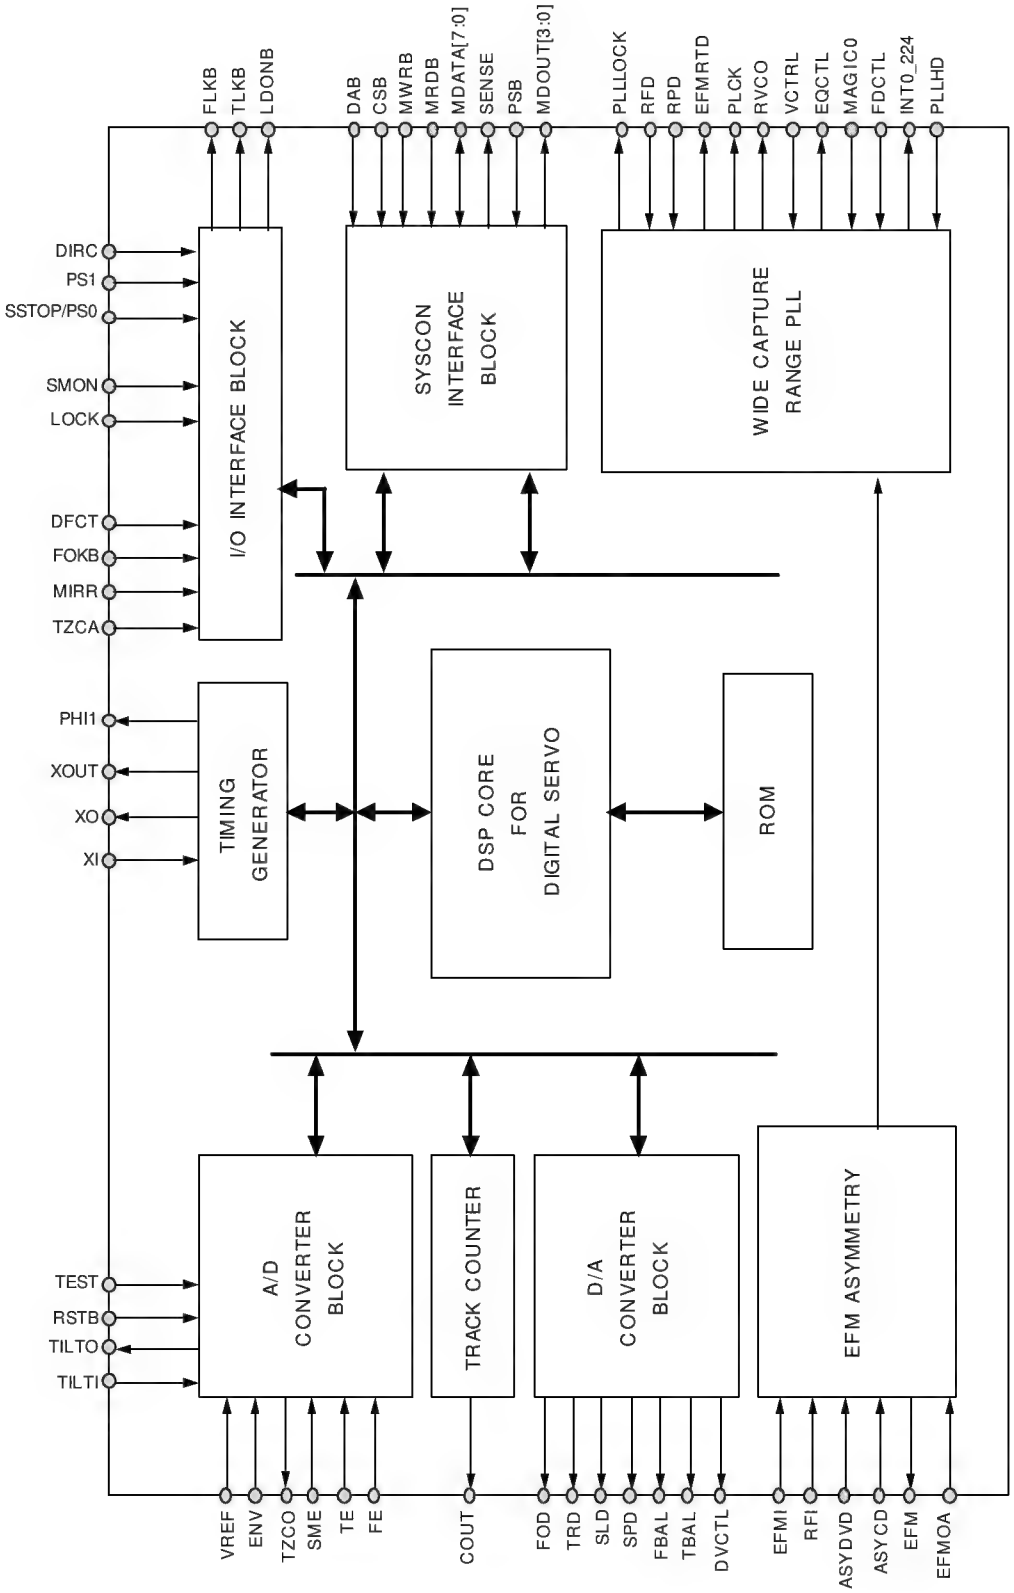

No	Name	I/O	Description
1	MDOUT3	O	Mode data3 out controlled by micom
2	SSTOP/PS0PS1	I	Limit switch/sled position sensor input pin0
3	PS1	I	Sled motor position sensor input pin1
4	TEST	I	Test pin (L: normal H: test)
5	COUT	O	Counter clock
6	FLKB	O	Focus servo lock signal output pin
7	TLKB	O	Tracking servo lock signal output pin
8	PSB	I	0: 1 Bit, 1: 8 Bit
9	RSTB	I	System reset signal input pin
10	CSB	I	MICOM chip select pin
11	DAB	I	MICOM data/addrs select pin
12	MWRB	I	MICOM write clock signal input pin
13	MRDB	I	MICOM read clock signal input pin
14	MDATA0	I/O	MICOM data pin0
15	MDATA1	I/O	MICOM data pin1
16	MDATA2	I/O	MICOM data pin2
17	MDATA3	I/O	MICOM data pin3
18	MDATA4	I/O	MICOM data pin4
19	MDATA5	I/O	MICOM data pin5
20	MDATA6	I/O	MICOM data pin6
21	MDATA7	I/O	MICOM data pin7
22	SENSE	O	Internal status monitor pin
23	DVDD	P	Servo logic & ROM VDD power supply pin
24	XI	I	System clock signal input pin
25	XO	O	System clock signal output pin
26	XOUT	O	Clock out (33.9688MHz) to DSP
27	DVSS	P	Servo logic & ROM VSS power supply pin
28	SQCK	O	Clock output pin for subcode data read
29	SQSI	I	Subcode data input pin
30	SCOR	I	Timing detection input pin for subcode data read
31	SMON	I	Motor ON signal input pin
32	LOCK	I	Lock signal input pin
33	DIRC	I	Direct jump control (for 1 track jump)
34	FOKB	I	Focus OK signal input pin
35	FDCTL	I	PLL frequency detect control input pin
36	LDONB	O	Laser diode ON signal output pin
37	DFCT	I	Defect detection signal input pin
38	MIRR	I	Mirror signal input pin
39	PLLHD	I	PLL hold signal from micom
40	INT0_224	O	Servo interrupt monitor pin

No	Name	I/O	Description
41	PVDD	P	PLL logic block VDD power supply pin
42	PLCK	O	PLCK
43	PLLLOCK	O	Frequency lock detect output (H: lock, L: unlock)
44	EFMRTD	O	Latched EFM output signal
45	PVSS	P	PLL logic block VSS power supply pin
46	RVCO	I	Resistor pin for VCO gain
47	RFD	I	Gain adjust resister for frequency detector
48	RPD	I	Gain adjust resister for phase detector
49	VCTL	I	control voltage for VCO
50	MAGIC0	I	Input for controlling hysteresis of the FD output (for testing)
51	EFMOA	I	EFM offset adjustment pin
52	TZCO	O	Tracking zero cross output pin
53	SVDD	P	Servo CPU VDD power supply pin
54	EQCTL	O	EQ control signal
55	EFMI	I	EFM signal for test
56	EFMO	O	EFM signal
57	LPFDVD	I	Asymmetric input signal for DVD
58	LPFCD	I	Asymmetric input signal for CD
59	RFI	I	Rf input signal
60	SVSS	P	Servo CPU VSS power supply pin
61	AVSS	P	Analog block VSS power supply pin
62	SME	I	Spindle error input pin
63	VREF	I	Reference voltage input pin
64	TE	I	Tracking error signal input pin
65	FE	I	Focus error signal input pin
66	ENV	I	RF envelope input pin
67	TILTI	I	TILT in (reserved)
68	AVDD	P	Analog block VDD power supply pin
69	TILTO	O	TILT out (reserved)
70	DVCTL	O	Depth variation control signal output pin
71	TBAL	O	Tracking balance signal output pin
72	FBAL	O	Focus balance signal output pin
73	SLD	O	Sled motor drive signal output pin
74	SPD	O	Spindle motor drive signal output pin
75	FOD	O	Focus actuator drive signal output pin
76	TRD	O	Tracking actuator drive signal output pin
77	TZCA	I	TE signal for tracking zero cross input pin
78	MDOUT0	O	Mode data0 out controlled by micom
79	MDOUT1	O	Mode data1 out controlled by micom
80	MDOUT2	O	Mode data2 out controlled by micom

2-1-10 SIC4 (KA3017 ; Motor & Actuator Driver)

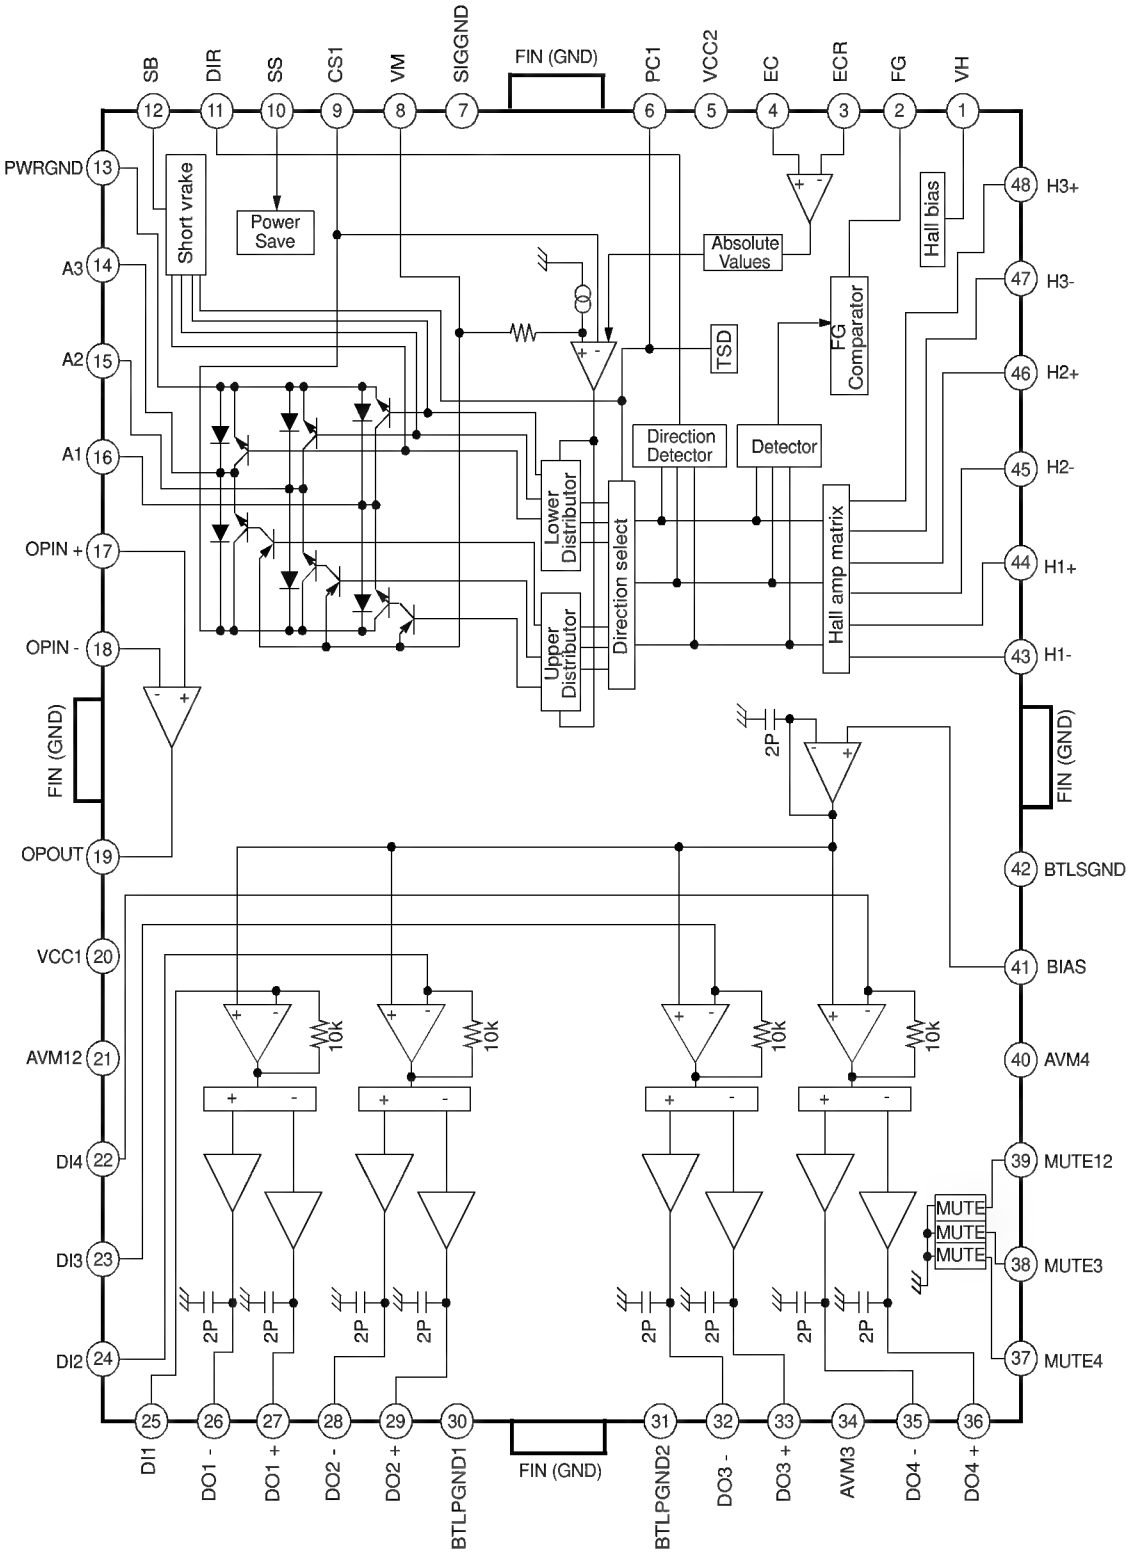

No.	Symbol	I/O	Description
1	VH	I	HALL BIAS
2	FG	O	FG SIGNAL OUTPUT
3	ECR	I	TORQUE CONTROL REFERENCE
4	EC	I	TORQUE CONTROL SIGNAL
5	VCC2	—	SUPPLY VOLTAGE
6	PC1	—	PHASE COMPENSATION CAPACITOR
7	SIGGND	—	SIGNAL GROUND
8	VM	—	MOTOR SUPPLY VOLTAGE
9	CS1	I	CURRENT SENSOR
10	S/S	I	START/STOP
11	DIR	O	3-PHASE ROTATIONAL DIRECTION OUTPUT
12	SB	I	SHORT BRAKE
13	PWRGND	—	POWER GROUND
14	A3	O	3-PHASE OUTPUT 3
15	A2	O	3-PHASE OUTPUT 2
16	A1	O	3-PHASE OUTPUT 1
17	OPIN+	I	OP AMP INPUT (+)
18	OPIN-	I	OP AMP INPUT (-)
19	OPOUT	O	OP AMP OUTPUT
20	VCC1	—	SUPPLY VOLTAGE
21	AVM12	—	BTL CH-1, 2 MOTOR SUPPLY VOLTAGE
22	DI4	I	BTL DRIVE INPUT 4
23	DI3	I	BTL DRIVE INPUT 3
24	DI2	I	BTL DRIVE INPUT 2
25	DI1	I	BTL DRIVE INPUT 1
26	DO1-	O	BTL DRIVE 1 OUTPUT (-)
27	DO1+	O	BTL DRIVE 1 OUTPUT (+)
28	DO2-	O	BTL DRIVE 2 OUTPUT (-)
29	DO2+	O	BTL DRIVE 2 OUTPUT (+)
30	BTLPGND1	—	BTL POWER GROUND 1
31	BTLPGND2	—	BTL POWER GROUND 2
32	DO3-	O	BTL DRIVE 3 OUTPUT (-)
33	DO3+	O	BTL DRIVE 3 OUTPUT (+)
34	AVM3	—	BTL CH3 MOTOR SUPPLY VOLTAGE
35	DO4-	O	BTL DRIVE 4 OUTPUT (-)
36	DO4+	O	BTL DRIVE 4 OUTPUT (+)
37	MUTE4	I	BTL DRIVE MUTE CH 4
38	MUTE3	I	BTL DRIVE MUTE CH 3
39	MUTE12	I	BTL DRIVE MUTE CH 1, 2
40	AVM4	—	BTL CH 4 MOTOR SUPPLY VOLTAGE
41	BIAS	—	BTL BIAS VOLTAGE
42	BTLSGND	—	BTL DRIVE SIGNAL GROUND
43	H1-	I	HALL1(-) INPUT
44	H1+	I	HALL1(+) INPUT
45	H2-	I	HALL2(-) INPUT
46	H2+	I	HALL2(+) INPUT
47	H3-	I	HALL3(-) INPUT
48	H3+	I	HALL3(+) INPUT

2-1-11 ZIC1 (ZIVA 4.1 ; A/V Decoder)

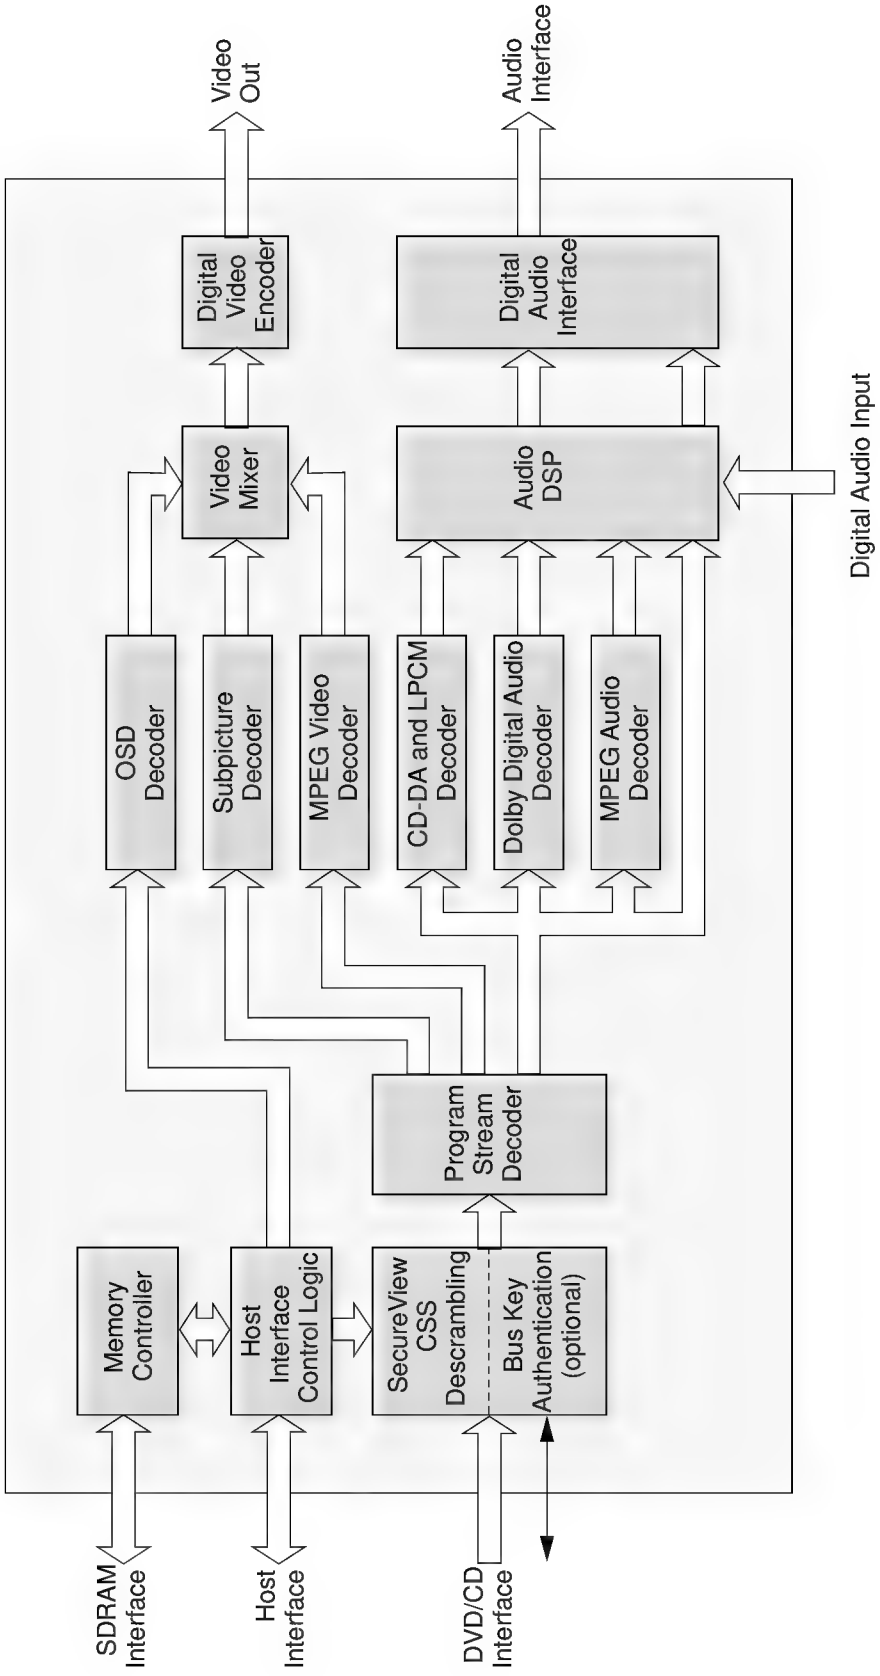

Pin No.	Pin Name	I/O Voltage	I/O Type
1	RD	3.3V	I
2	R/W	3.3V	I
3	VDD_3.3	3.3V	
4	WAIT	3.3V	O, OD, PU
5	RESET	3.3V	I
6	VSS	GROUND	
7	VDD_3.3	3.3V	
8	INT	3.3V	O, OD, PU
9	NC	No Connect	O
10	NC	No Connect	O
11	NC	No Connect	O
12	NC	No Connect	O
13	VDD 2.5	2.5V	
14	VSS	GROUND	
15	NC	No Connect	O
16	NC	No Connect	O
17	NC	No Connect	O
18	NC	No Connect	O
19	VSS	GROUND	
20	VDD 3.3	3.3V	
21	VDATA0	3.3V	O
22	VDATA1	3.3V	O
23	VDATA2	3.3V	O
24	VDATA3	3.3V	O
25	VDATA4	3.3V	O
26	VDATA5	3.3V	O
27	VDATA6	3.3V	O
28	VDATA7	3.3V	O
29	VSYNC	3.3V	I/O
30	HSYNC	3.3V	I/O
31	VSS	GROUND	
32	VDD 3.3	3.3V	
33	RESERVED	3.3V	I
34	RESERVED	3.3V	I
35	RESERVED	3.3V	I
36	VDD_2.5	2.5V	
37	VSS	GROUND	
38	RESERVED	3.3V	I
39	RESERVED	3.3V	I
40	RESERVED	3.3V	I
41	RESERVED	3.3V	I
42	RESERVED	3.3V	I
43	PIO0	3.3V	I/O
44	VSS	GROUND	
45	VDD_3.3	3.3V	
46	PIO1	3.3V	I/O
47	PIO2	3.3V	I/O
48	PIO3	3.3V	I/O

Pin No.	Pin Name	I/O Voltage	I/O Type
49	PIO4	3.3V	I/O
50	PIO5	3.3V	I/O
51	PIO6	3.3V	I/O
52	PIO7	3.3V	I/O
53	MDATA0	3.3V	I/O
54	MDATA1	3.3V	I/O
55	VDD 3.3	3.3V	
56	VSS	GROUND	
57	MDATA2	3.3V	I/O
58	MDATA3	3.3V	I/O
59	MDATA4	3.3V	I/O
60	MDATA5	3.3V	I/O
61	MDATA6	3.3V	I/O
62	MDATA7	3.3V	I/O
63	MDATA15	3.3V	I/O
64	VDD_3.3	3.3V	I/O
65	VSS	GROUND	I/O
66	MDATA14	3.3V	I/O
67	VDD 2.5	2.5V	
68	VSS	GROUND	
69	MDATA13	3.3V	I/O
70	MDATA12	3.3V	I/O
71	MDATA11	3.3V	I/O
72	MDATA10	3.3V	I/O
73	MDATA9	3.3V	I/O
74	VDD_3.3	3.3V	
75	VSS	GROUND	
76	MDATA8	3.3V	I/O
77	LDQM	3.3V	O
78	SD-CLK	3.3V	O
79	CLKSEL	3.3V	I
80	MADDR9	3.3V	O
81	MADDR8	3.3V	O
82	VDD_3.3	3.3V	
83	VSS	GROUND	
84	MADDR7	3.3V	O
85	MADDR6	3.3V	O
86	MADDR5	3.3V	O
87	VDD 2.5	2.5V	
88	VSS	GROUND	
89	MADDR4	3.3V	O
90	MWE	3.3V	O
91	SD-CAS	3.3V	O
92	VDD_3.3	3.3V	
93	VSS	GROUND	
94	SD-RAS	3.3V	O
95	SD-CS0	3.3V	O
96	SD-CS1/MADDR11	3.3V	O

Pin No.	Pin Name	I/O Voltage	I/O Type
97	SD-BS	3.3V	O
98	MADDR10	3.3V	O
99	MADDR0	3.3V	O
100	VDD_3.3	3.3V	
101	VSS	GROUND	
102	MADDR1	3.3V	O
103	MADDR2	3.3V	O
104	MADDR3	3.3V	O
105	RESERVED	ANALOG GND	
106	NC	No connect	O
107	NC	No connect	O
108	RESERVED	3.3V	I
109	NC	No connect	O
110	RESERVED	3.3V	I
111	RESERVED	3.3V ANALOG	
112	RESERVED	3.3V	I
113	DAI-LRCK	3.3V	I/O
114	DAI-BCK	3.3V	I/O
115	VDD_3.3	3.3V	
116	VSS	GROUND	
117	DAI-DATA	3.3V	I/O
118	DA-DATA3	3.3V	O
119	DA-DATA2	3.3V	O
120	DA-DATA1	3.3V	O
121	DA-DATA0	3.3V	O
122	DA-LRCK	3.3V	O
123	VDD_3.3	3.3V	
124	VSS	GROUND	
125	DA-XCK	3.3V	I/O
126	DA-BCK	3.3V	O
127	DA-IEC	3.3V	O
128	VDD_2.5	2.5V	
129	VSS	GROUND	
130	NC	No Connect	O
131	VSS_DAC	ANALOG GND	
132	VSS_VIDEO	ANALOG GND	
133	CVBS + sync	3.3V ANALOG	O
134	VDD DAC	3.3V ANALOG	O
135	VDD_VIDEO	3.3V ANALOG	
136	NC	No Connect	O
137	VSS_DAC	ANALOG GND	
138	VSS VIDEO	ANALOG GND	
139	CVBS/G/Y	3.3V ANALOG	O
140	VDD_DAC	3.3V ANALOG	
141	VDD_VIDEO	3.3V ANALOG	
142	NC	No Connect	O
143	VSS_DAC	ANALOG GND	

Pin No.	Pin Name	I/O Voltage	I/O Type
144	VSS VIDEO	ANALOG GND	
145	Y/B/U	3.3V ANALOG	O
146	VDD_DAC	3.3V ANALOG	
147	VDD_VIDEO	3.3V ANALOG	
148	NC	No Connect	O
149	VSS DAC	ANALOG GND	
150	VSS_VIDEO	ANALOG GND	
151	C/R/V	3.3V ANALOG	O
152	VDD_DAC	3.3V ANALOG	
153	VDD VIDEO	3.3V ANALOG	
154	VSS_RREF	ANALOG GND	
155	RREF	3.3V ANALOG	O
156	VDD RREF	3.3V ANALOG	
157	A VSS	GROUND	
158	SYSCLK	3.3V	I
159	VCLK	3.3V	I
160	A_VDD	3.3V ANALOG	
161	DVD-DATA0/CD-DATA	3.3V	I
162	DVD-DATA1/CD-LRCK	3.3V	I
163	DVD-DATA2/CD-BCK	3.3V	I
164	DVD-DATA3/CD-C2P0	3.3V	I
165	DVD-DATA4/CDG-SDATA	3.3V	I
166	VSS	GROUND	
167	VDD_3.3	3.3V	
168	DVD-DATA5/CDG-VFSY	3.3V	I
169	DVD-DATA6/CDG-S0S1	3.3V	I
170	DVD-DATA7/CDG-SCLK	3.3V	I
171	VDACK	3.3V	I
172	VREQUEST	3.3V	O
173	VSTROBE	3.3V	I
174	ERROR	3.3V	I
175	VDD_3.3	3.3V	
176	RESERVED	GROUND	
177	VDD 3.3	3.3V	
178	VSS	GROUND	
179	NC	No connect	O
180	NC	No connect	O
181	NC	No connect	O
182	HADDR0	3.3V	I
183	HADDR1	3.3V	I
184	HADDR2	3.3V	I
185	RESERVED	3.3V	I
186	RESERVED	3.3V	I
187	RESERVED	3.3V	I
188	VSS	GROUND	
189	VDD 2.5	2.5V	
190	RESERVED	3.3V	I

Pin No.	Pin Name	I/O Voltage	I/O Type
191	VSS	GROUND	
192	VDD_3.3	3.3V	
193	RESERVED	3.3V	I
194	RESERVED	3.3V	I
195	RESERVED	3.3V	I
196	RESERVED	3.3V	I
197	HDATA7	3.3V	I/O
198	VSS	GROUND	

Pin No.	Pin Name	I/O Voltage	I/O Type
199	HDATA6	3.3V	I/O
200	HDATA5	3.3V	I/O
201	HDATA4	3.3V	I/O
202	HDATA3	3.3V	I/O
203	HDATA2	3.3V	I/O
204	VDD_3.3	3.3V	
205	VSS	3.3V	
206	HDATA1	3.3V	I/O
207	HDATA0	3.3V	I/O
208	CS	3.3V	I

2-1-12 ZIC2/ZIC3 (KM416S1120D ; CMOS 16M SDRAM)

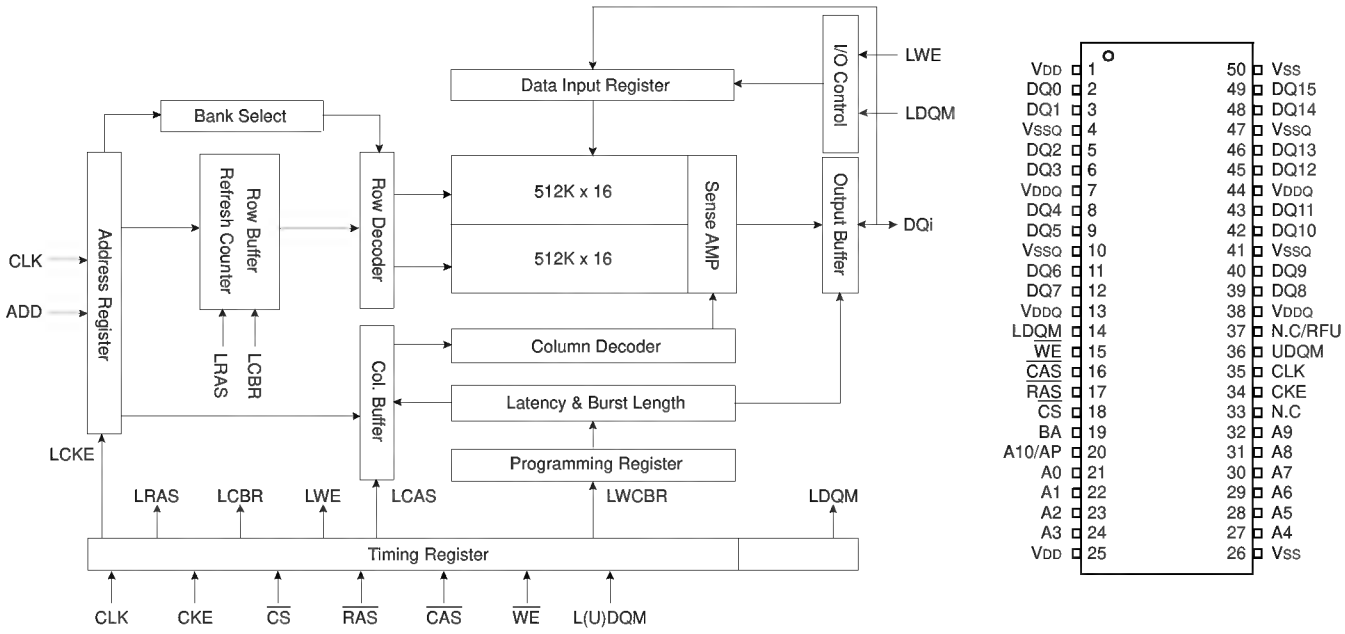

Pin	Name	InputFunction
CLK	System Clock	Active on the positive going edge to sample all inputs.
$\overline{CS}$	Chip Select	Disables or enables device operation by masking or enabling all inputs except CLK, CKE and L(U)DQM
CKE	Clock Enable	Masks system clock to freeze operation from the next clock cycle. CKE should be enabled at least one cycle prior to new command. Disable input buffers for power down in standby.
A_0 ~ A_{10}/AP	Address	Row / column addresses are multiplexed on the same pins. Row address : RA_0 ~ RA_{10}, column address : CA_0 ~ CA_7
BA	Bank Select Address	Selects bank to be activated during row address latch time. Selects bank for read/write during column address latch time.
$\overline{RAS}$	Row Address Strobe	Latches row addresses on the positive going edge of the CLK with $\overline{RAS}$ low. Enables row access & precharge.
$\overline{CAS}$	Column Address Strobe	Latches column addresses on the positive going edge of the CLK with $\overline{CAS}$ low. Enables column access.
$\overline{WE}$	Write Enable	Enables write operation and row precharge. Latches data in starting from $\overline{CAS}$, $\overline{WE}$ active.
L(U)DQM	Data Input/Output Mask	Makes data output Hi-Z, t_{SHZ} after the clock and masks the output. Blocks data input when L(U)DQM active.
$DQ_{0 \sim 15}$	Data Input/Output	Data inputs/outputs are multiplexed on the same pins.
V_{DD}/V_{SS}	Power Supply/Ground	Power and ground for the input buffers and the core logic.
V_{DDQ}/V_{SSQ}	Data Output Power/Ground	Isolated power supply and ground for the output buffers to provide improved noise immunity.
N.C/RFU	No Connection/ Reserved for Future Use	This pin is recommended to be left No Connection on the device.

MEMO

3. Product Specifications

GENERAL	Power Requirements	AC 120V, 60Hz
	Power Consumption	17W
	Weight	3.1kg
	Dimensions	W 430mm X D 280mm X 89mm
	Operating Temperature Range	+5°C ~ +35°C
	Operating Humidity Range	10% to 75%
DISC	DVD (Digital Versatile Disc)	Reading Speed : 3.49 m/sec
		Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.
	CD : 12Cm (Compact Disc)	Reading Speed : 1.2 to 1.4 m/sec
		Maximum Play Time : 74min.
	CD : 8Cm (Compact Disc)	Reading Speed : 1.2to 1.4 m/sec.
		Maximum Play Time : 20min.
	VCD : 12Cm	Reading Speed : 1.2 to 1.4 m/sec.
		Maximum Play Time : 74min. (Video + Audio)
Video Output	Composite Video	1 channel : 1.0Vp-p (75ohm load)
	Component Video	Y : 1.0Vp-p (75ohm load) ; DVD-611 Only
		Pr : 0.70Vp-p (75ohm load) ; DVD-611 Only
		Pb : 0.70Vp-p (75ohm load) ; DVD-611 Only
	S-Video	Luminance Signal : 1Vp-p (75ohm load)
		Color Signal : 0.286Vp-p (75ohm load)
Audio Output	2 Channel	L (1/L), R (2/R)
	* Frequency Response	48KHz Sampling : 4Hz to 22 KHz
		96KHz Sampling : 4Hz to 44KHz
	* S/N Ratio	115dB
	* Dynamic Range	105dB
	* Total Harmonic Distortion	0.003%

* : Nominal specification

MEMO

3. Product Specifications

GENERAL	Power Requirements	AC 120V, 60Hz
	Power Consumption	17W
	Weight	3.1kg
	Dimensions	W 430mm X D 280mm X 89mm
	Operating Temperature Range	+5°C ~ +35°C
	Operating Humidity Range	10% to 75%
DISC	DVD (Digital Versatile Disc)	Reading Speed : 3.49 m/sec
		Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.
	CD : 12Cm (Compact Disc)	Reading Speed : 1.2 to 1.4 m/sec
		Maximum Play Time : 74min.
	CD : 8Cm (Compact Disc)	Reading Speed : 1.2to 1.4 m/sec.
		Maximum Play Time : 20min.
	VCD : 12Cm	Reading Speed : 1.2 to 1.4 m/sec.
		Maximum Play Time : 74min. (Video + Audio)
Video Output	Composite Video	1 channel : 1.0Vp-p (75ohm load)
	Component Video	Y : 1.0Vp-p (75ohm load) ; DVD-611 Only
		Pr : 0.70Vp-p (75ohm load) ; DVD-611 Only
		Pb : 0.70Vp-p (75ohm load) ; DVD-611 Only
	S-Video	Luminance Signal : 1Vp-p (75ohm load)
		Color Signal : 0.286Vp-p (75ohm load)
Audio Output	2 Channel	L (1/L), R (2/R)
	* Frequency Response	48KHz Sampling : 4Hz to 22 KHz
		96KHz Sampling : 4Hz to 44KHz
	* S/N Ratio	115dB
	* Dynamic Range	105dB
	* Total Harmonic Distortion	0.003%

* : Nominal specification

MEMO

4. Disassembly and Reassembly

4-1 Cabinet and PCB

Note : Reassembly in reverse order.

4-1-1 Top Cabinet Removal

1) Remove 3 Screws ❶ on the back Top Cabinet.
2) Remove 2 Screws ❷, ❸ on the left and right side.
3) Lift up the Top Cabinet in direction of arrow.

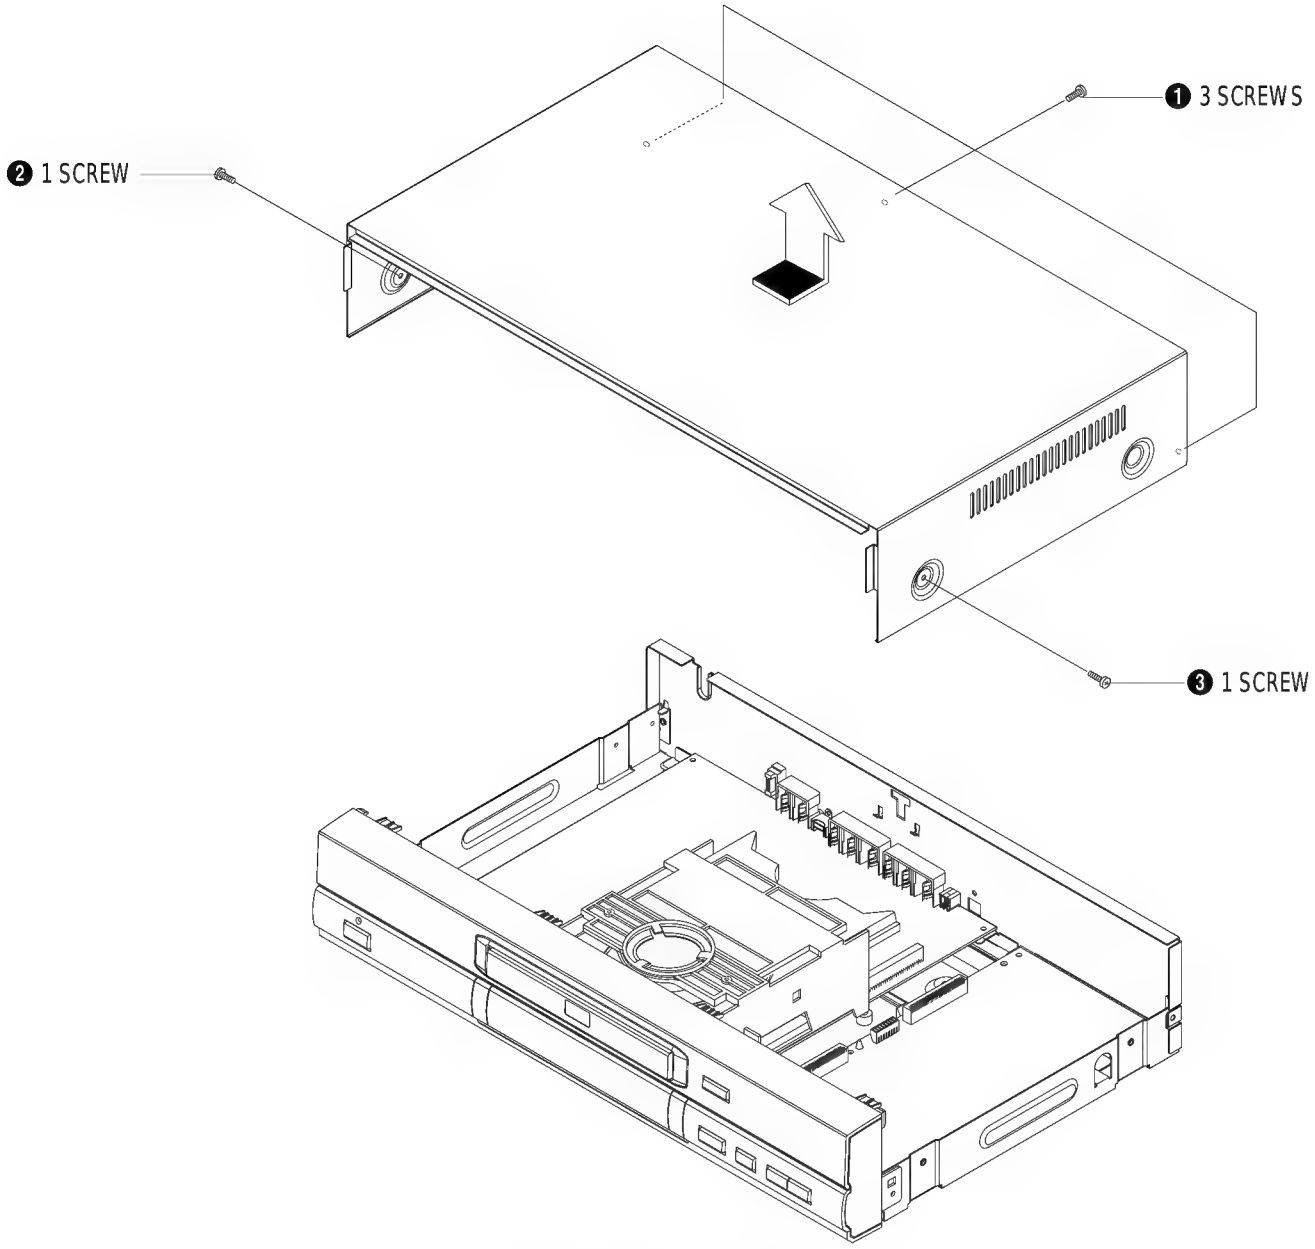

Fig. 4-1 Top Cabinet Removal

4-1-2 Door-Tray Removal

1) Supply power and open Tray ❶.
2) Disassemble the Door-Tray ❷ in direction of arrow "A".
3) Close Tray ❶ and power off.

Note : If Tray ❶ doesn't open, insert a Screw driver ❹ into the Emergency hole ❸ (as shown in detailed drawing) and then push it in the direction of arrow "B". Open Tray manually.

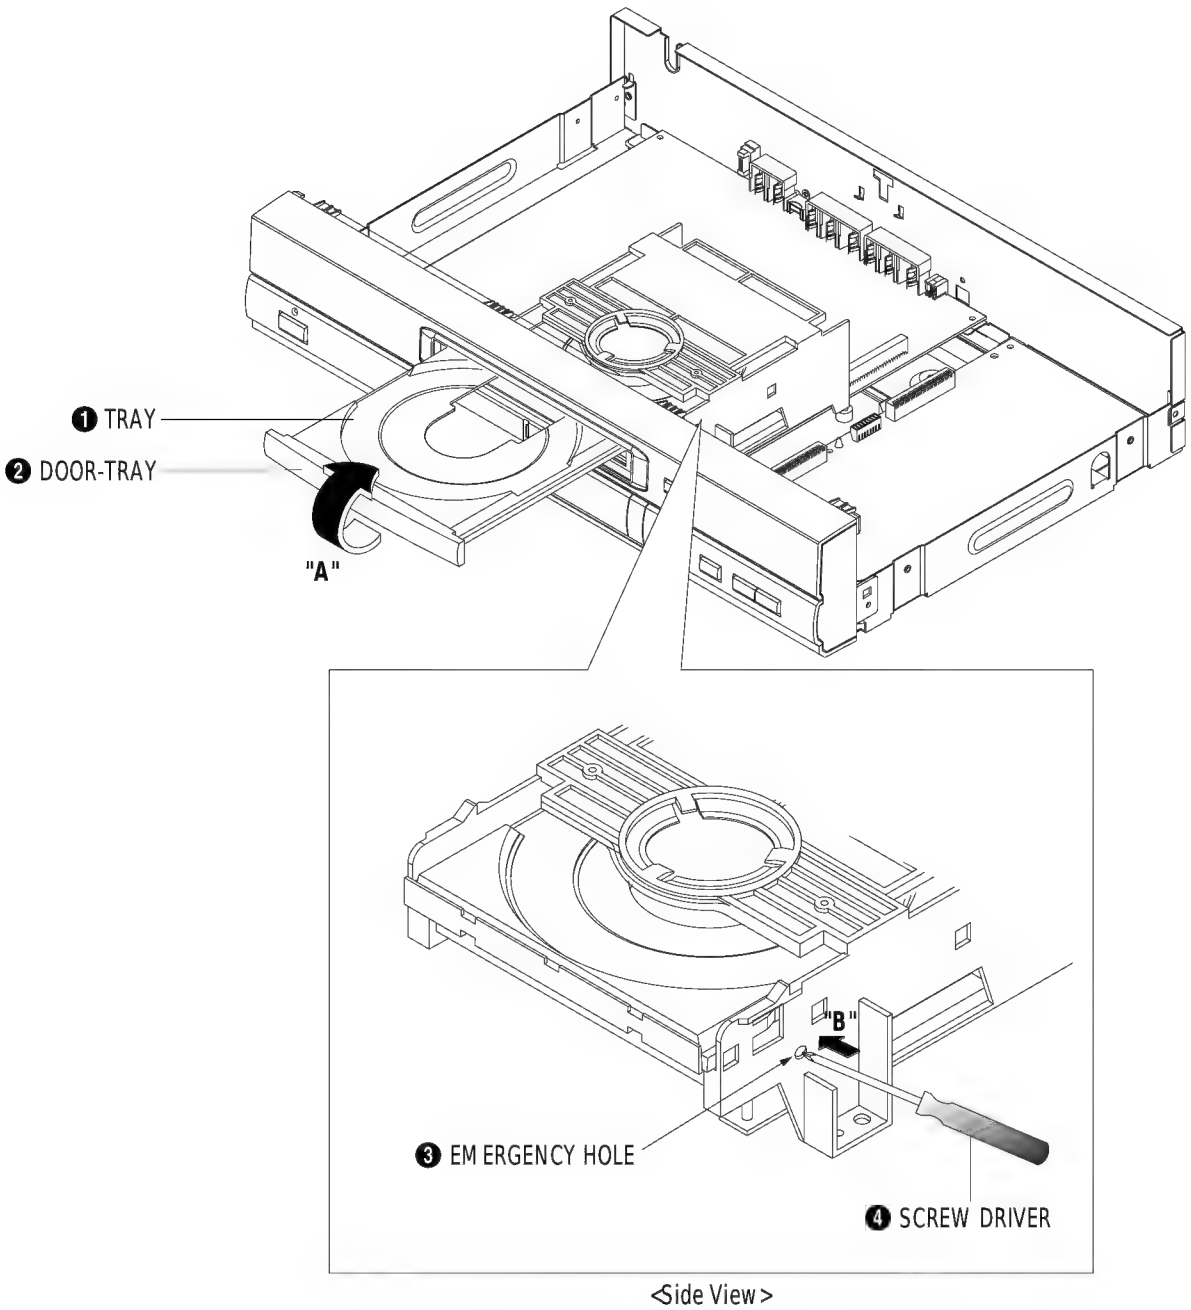

Fig. 4-2 Door-Tray Removal

4-1-3 Ass'y Front-Panel, Key PCB Removal

1) Remove Ass'y Front-Panel ❶.
2) Remove 5 Screws ❷ and Key PCB ❸.

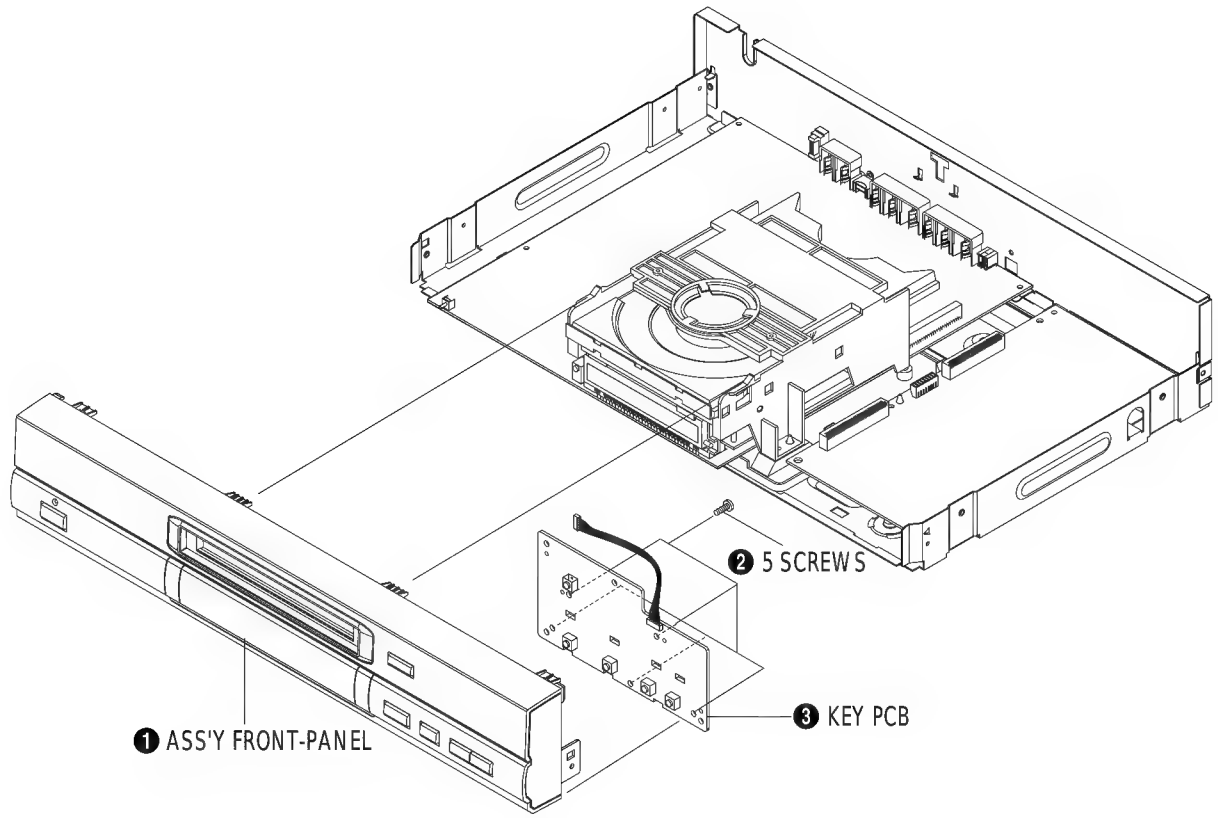

Fig. 4-3 Ass'y Front-Panel, Key PCB Removal

4-1-4 Ass'y Deck Removal

1) Remove 4 Screws ❶ from the Ass'y Deck and lift it up.

CAUTIONS ;
(1) When disassembling, switch the SW3 to "OFF" on the Deck PCB and remove the FPC connected to DCN1 on Main PCB.
(2) When assembling, insert the FPC into the DCN1 on Main PCB and switch SW3 to "ON" on the Deck PCB.

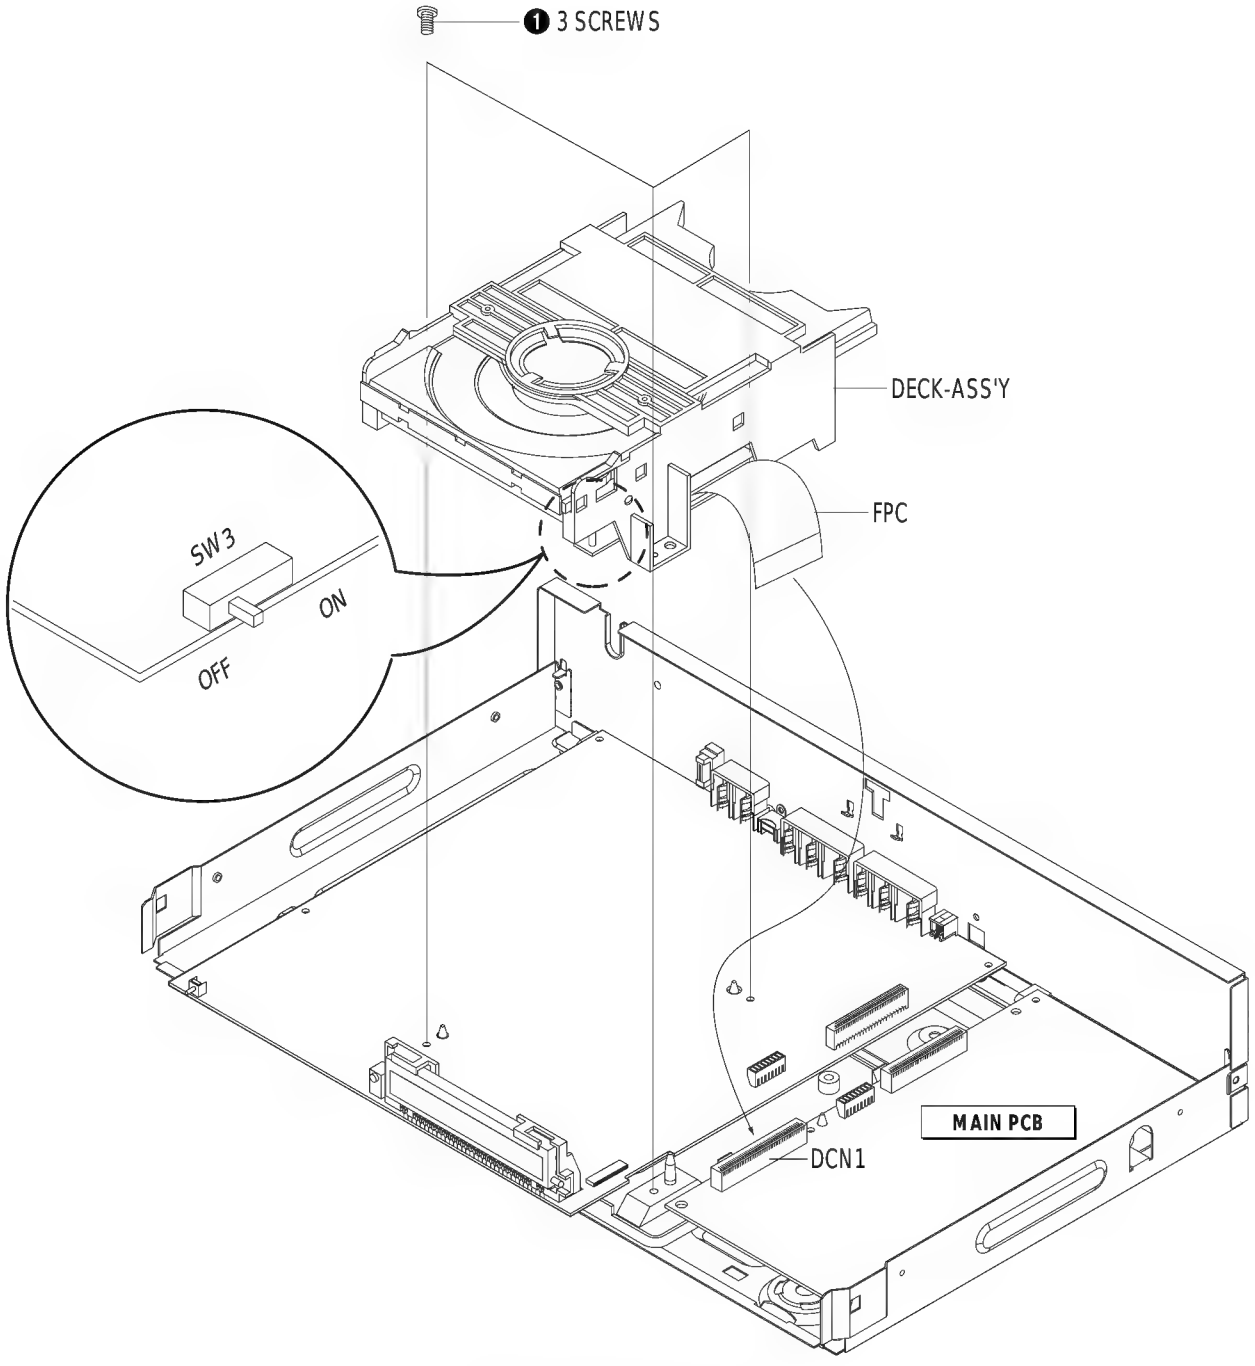

Fig. 4-4 Ass'y Deck Removal

4-1-5 Main PCB, Jack PCB Removal

1) Remove 1 Screw ❶.
2) Remove 2 Screws ❷ and lift up the Jack PCB ❸.
3) Remove 3 Screws ❹ and lift up the Main PCB ❺.

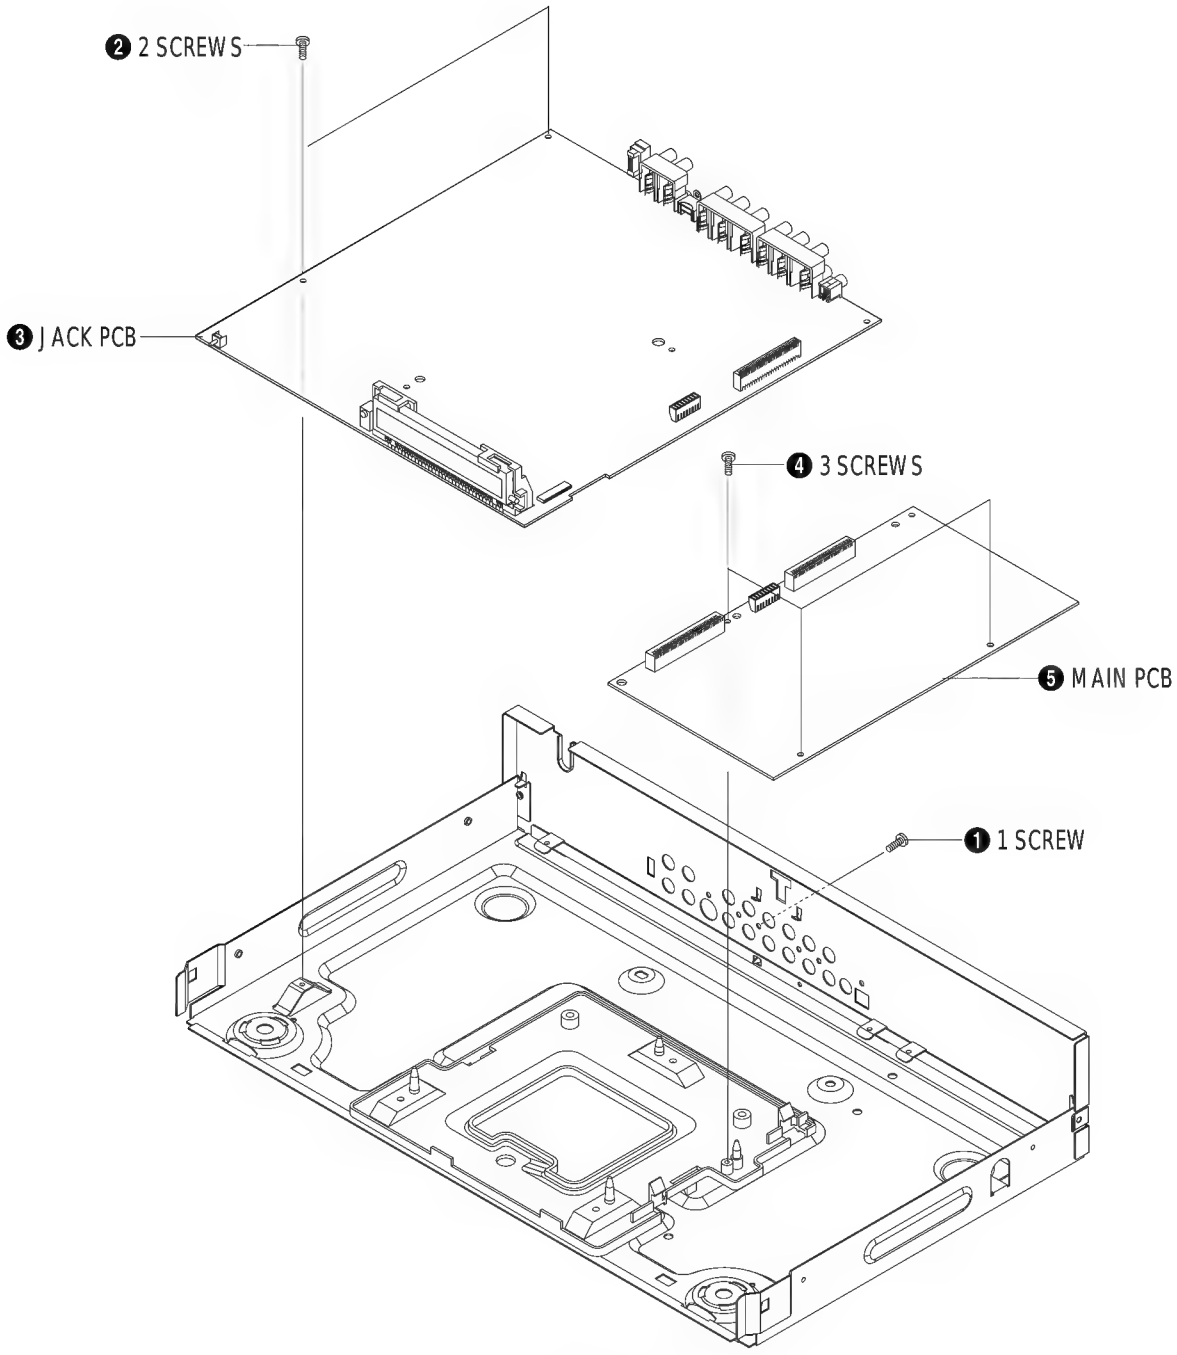

Fig. 4-5 Main PCB, Jack PCB Removal

4-2 PCB Location

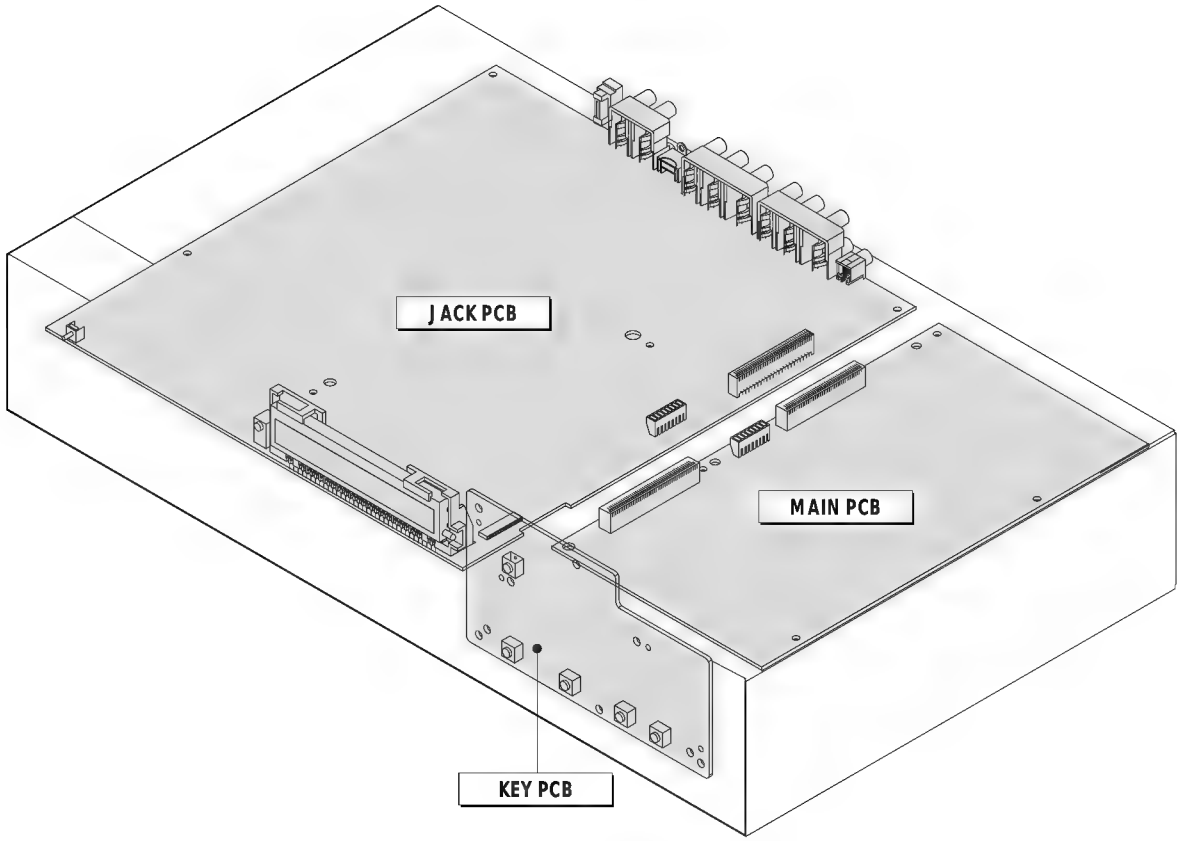

Fig. 4-6 PCB Location

4-3 Connector Diagram

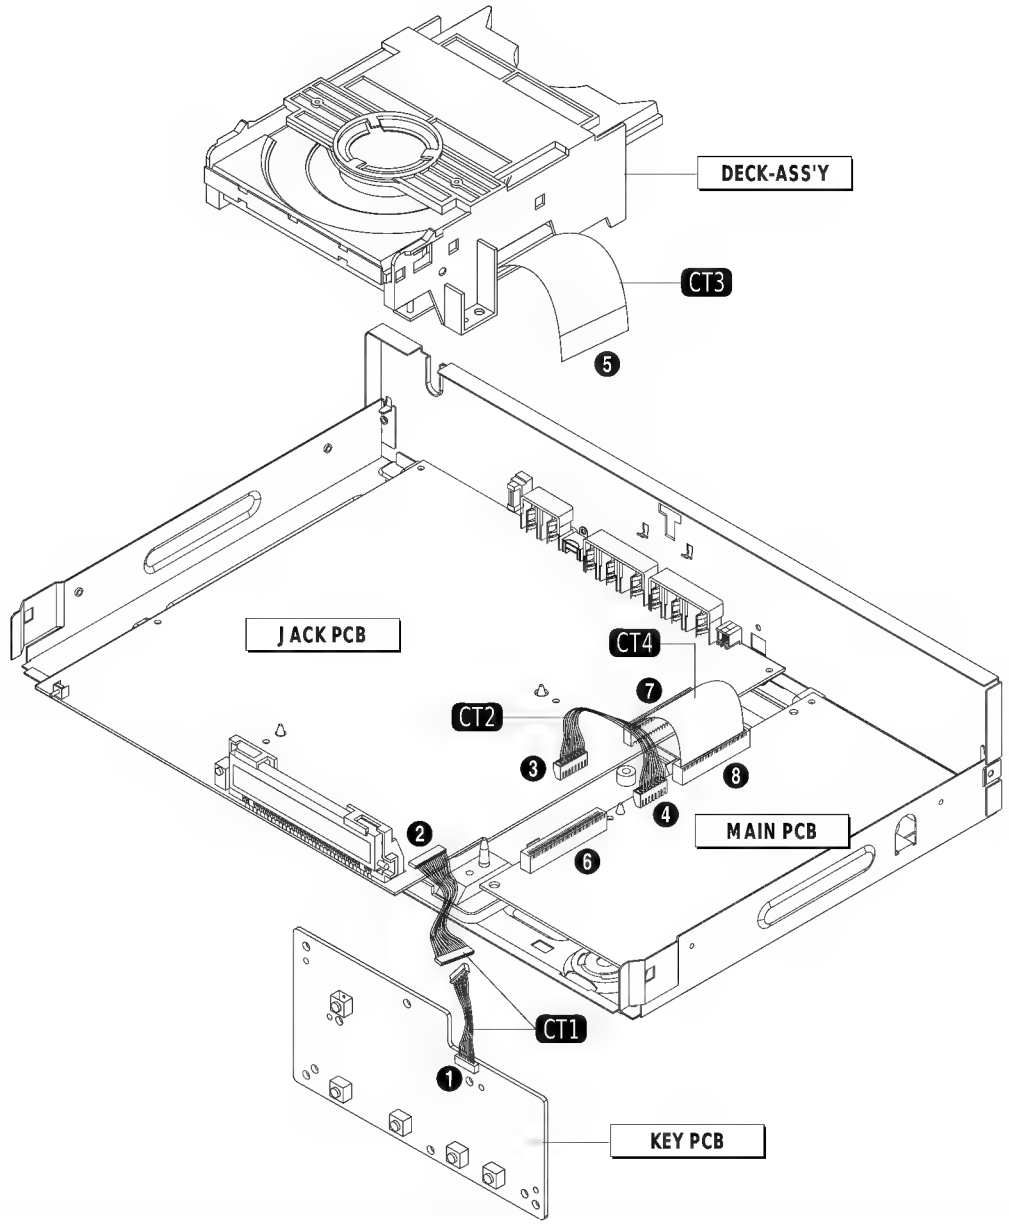

NO.	CONNECTOR NO.	DIRECTION	CONNECTOR NO.	NO.
❶	CON21	KEY PCB ◄ CT1 ► JACK PCB	CN2	❷
❸	PCNS1	JACK PCB ◄ CT2 ► MAIN PCB	PCN1	❹
❺	FPC	DECK-ASS'Y ◄ CT3 ► MAIN PCB	DCN1	❻
❼	CN1	JACK PCB ◄ CT4 ► MAIN PCB	CN8	❽

Fig. 4-7 Connector Diagram

4-4 Deck

4-4-1 PCB Deck Ass'y and Ass'y P/U Deck Removal

1) Remove the soldering of SLED+, SLED- ❶ and TM+, TM- ❷.
2) Disconnect CN3 ❸, CN2 ❹.
3) Remove 1 Screw ❺ and lift up the PCB Deck ❻.
4) Remove 1 Screw ❼.
5) Push the Hook ❽ in the direction of arrow "A" and lift up the Ass'y P/U Deck ❾ in direction of arrow "B".

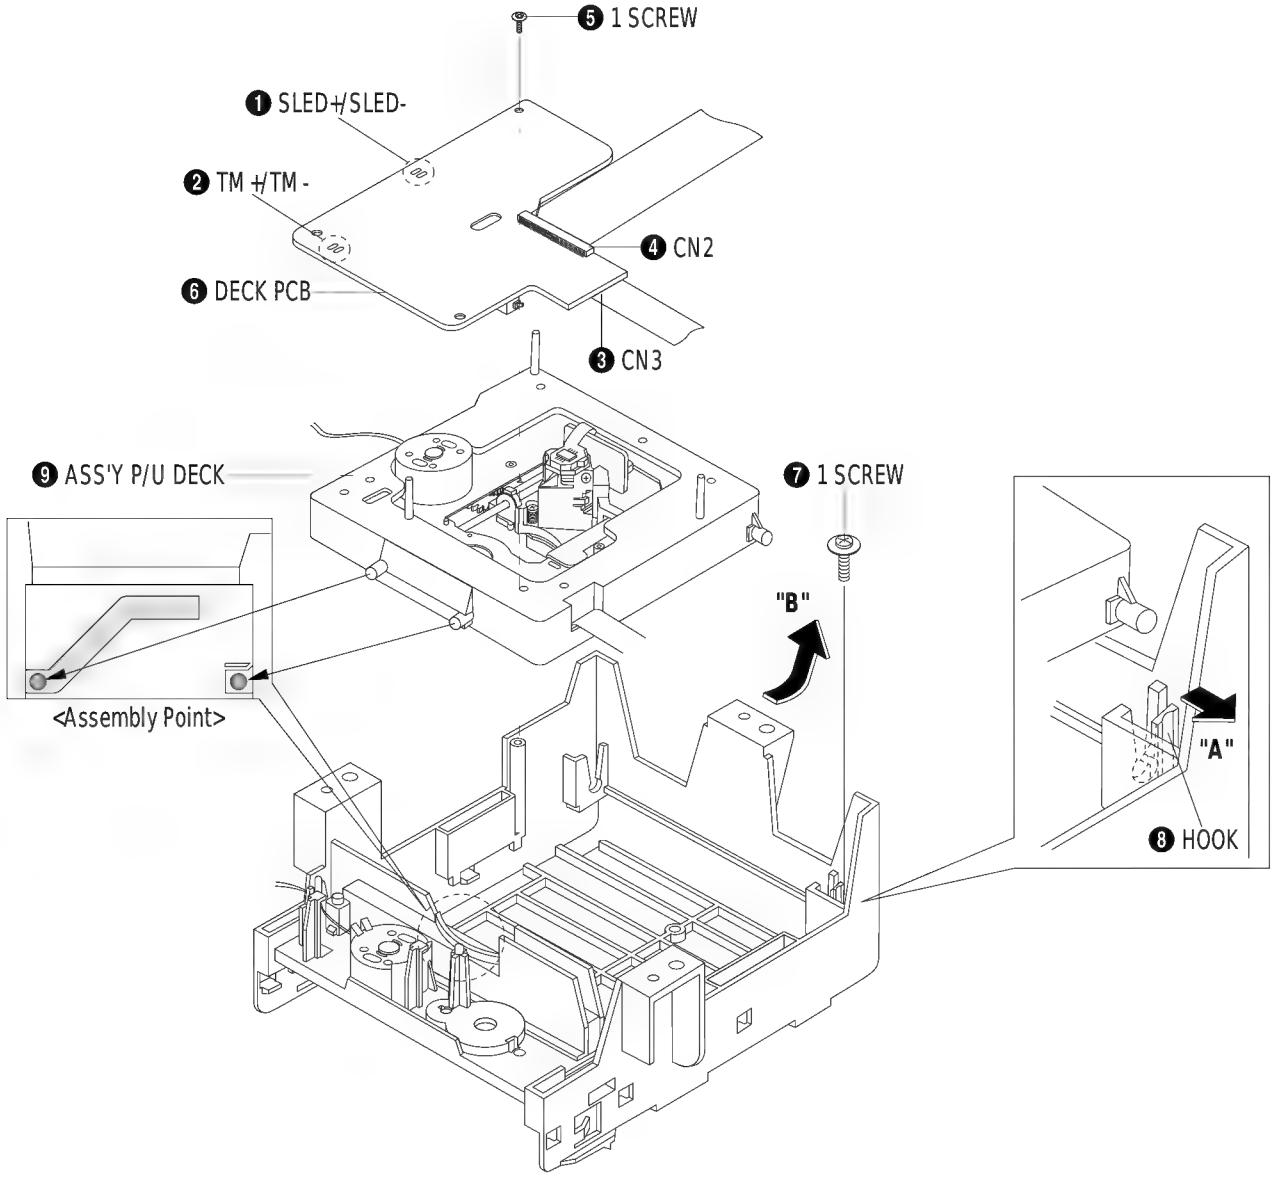

Fig. 4-8 PCB Deck Ass'y and Ass'y P/U Deck Removal

4-4-2 Tray Disc Removal

1) Insert a Screw Driver ❶ into Emergency Hole ❷ and push the Sider Housing ❸ in the direction arrow "A".
2) When the Tray Disc ❹ comes out little, pull it in the direction arrow "B" by hand.
3) Pull the Tray Disc ❹ to disassemble , while simultaneously pushing 2 Stoppers ❺ (left, right) in the direction arrow "C", "D".

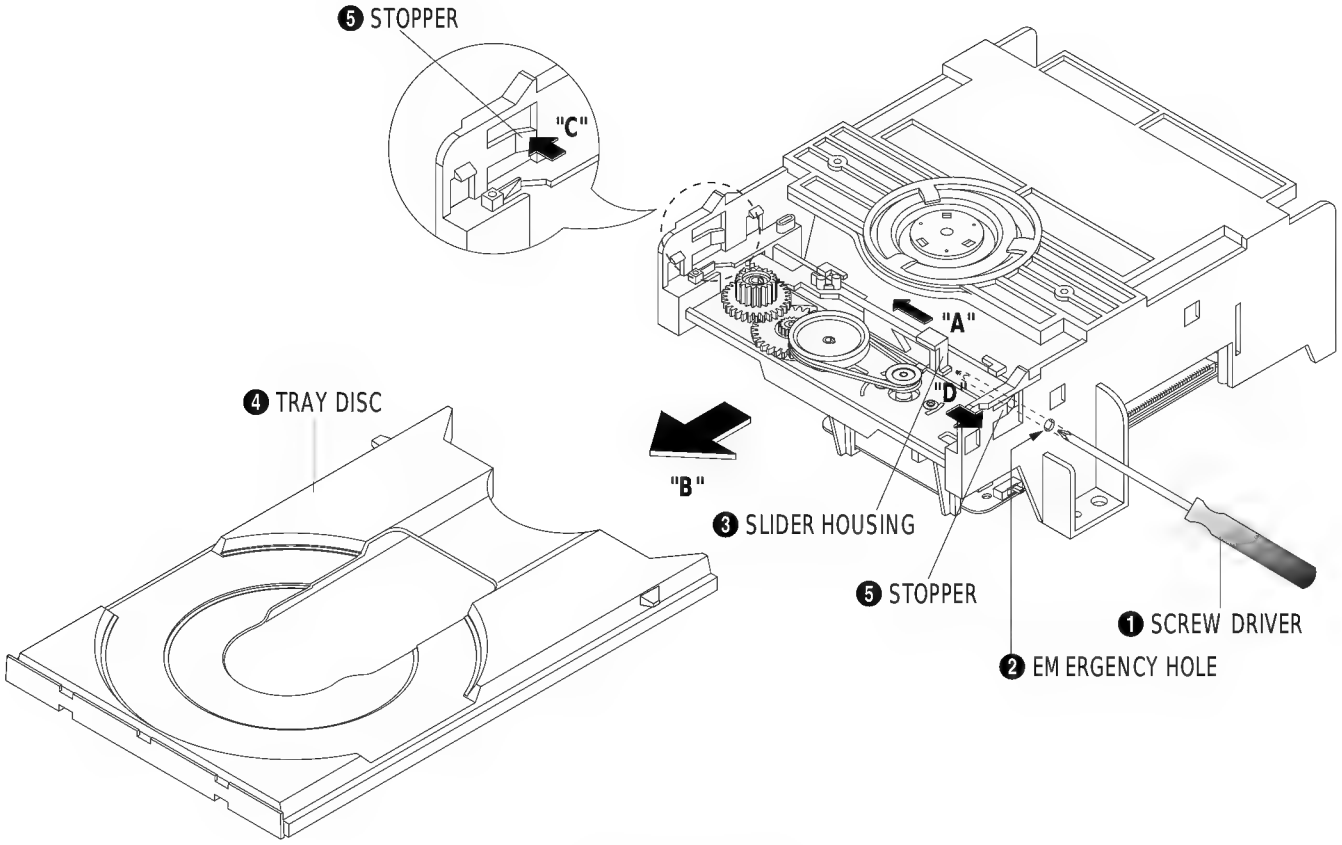

Fig. 4-9 Tray Disc Removal

4-4-3 Slider Housing Removal

1) Push the Slider Housing ❶ in the direction arrow "A".
2) Lift up the Slider Housing ❶.

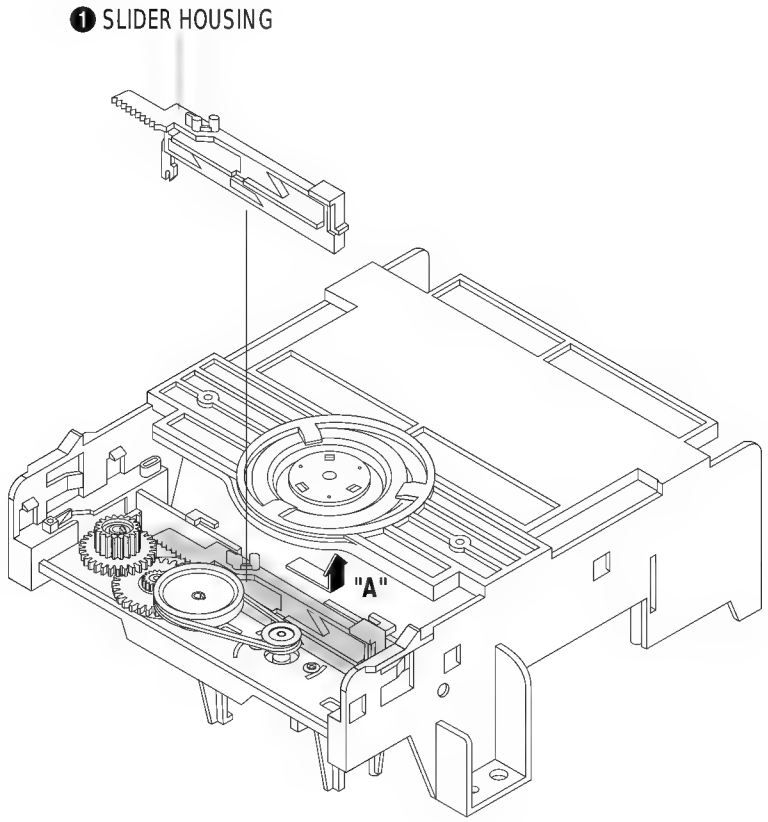

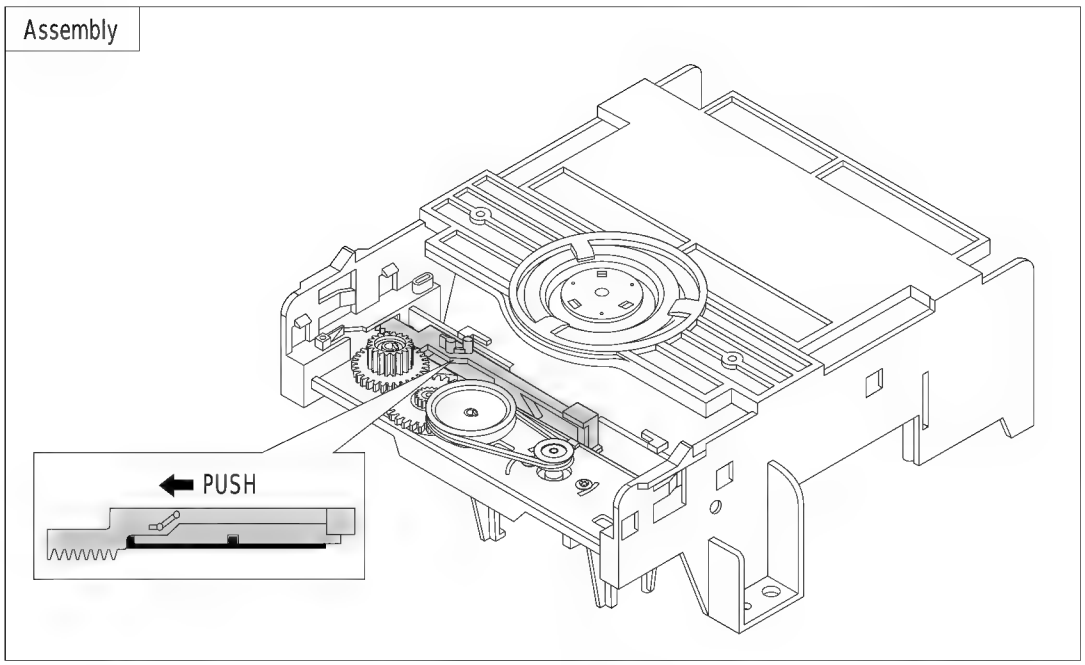

Fig. 4-10 Slider Housing Removal

4-4-4 Housing Ass'y Removal

1) Remove Belt ❶ and 1 Screw ❷.
2) Remove 1 Screw ❸ and lift up the Pulley Gear ❹.
3) Push the Hook ❺ in the direction arrow "A" and lift up Gear Tray ❻, Gear Housing ❼.
4) Push the 4 Hooks ❽ bottom side in the direction arrow "B" and lift up the Motor Load Ass'y ❾.
5) Remove Clamper Ass'y ❿.

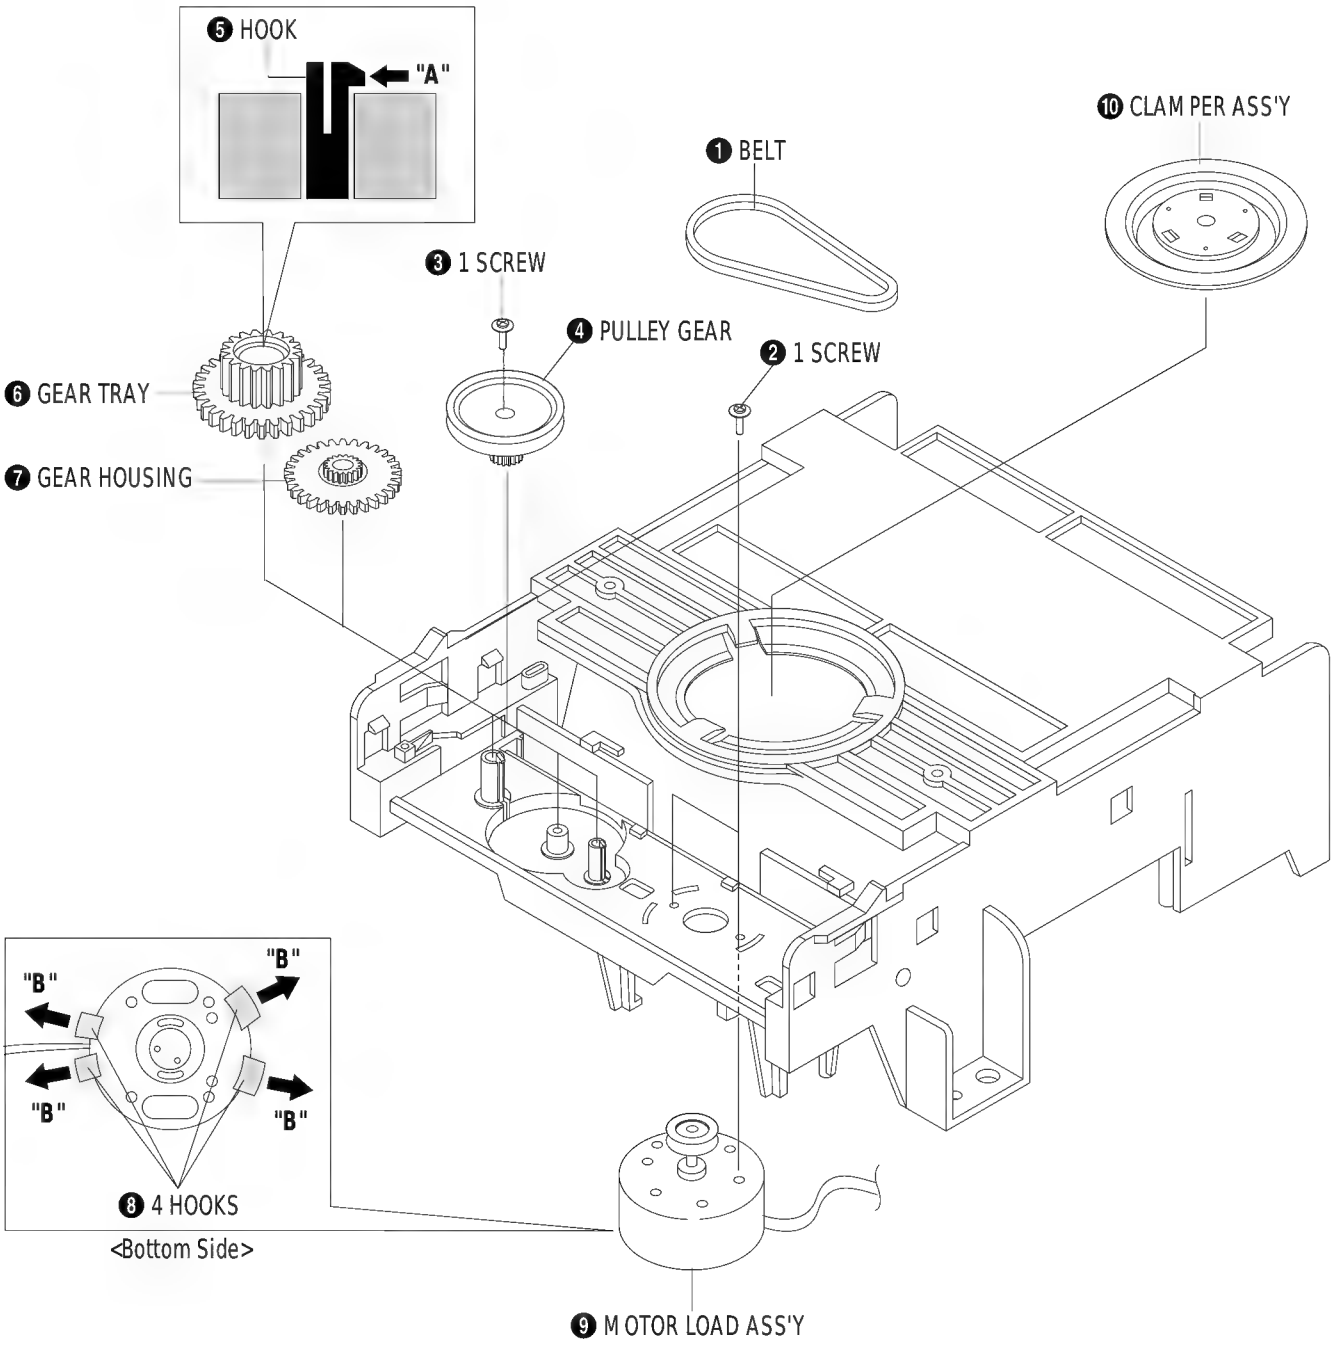

Fig. 4-11 Housing Ass'y Removal

4-4-5 Sub Chassis Removal

1) Remove the 4 Screws ❶.
2) Lift up the Ass'y Brkt Deck ❷.

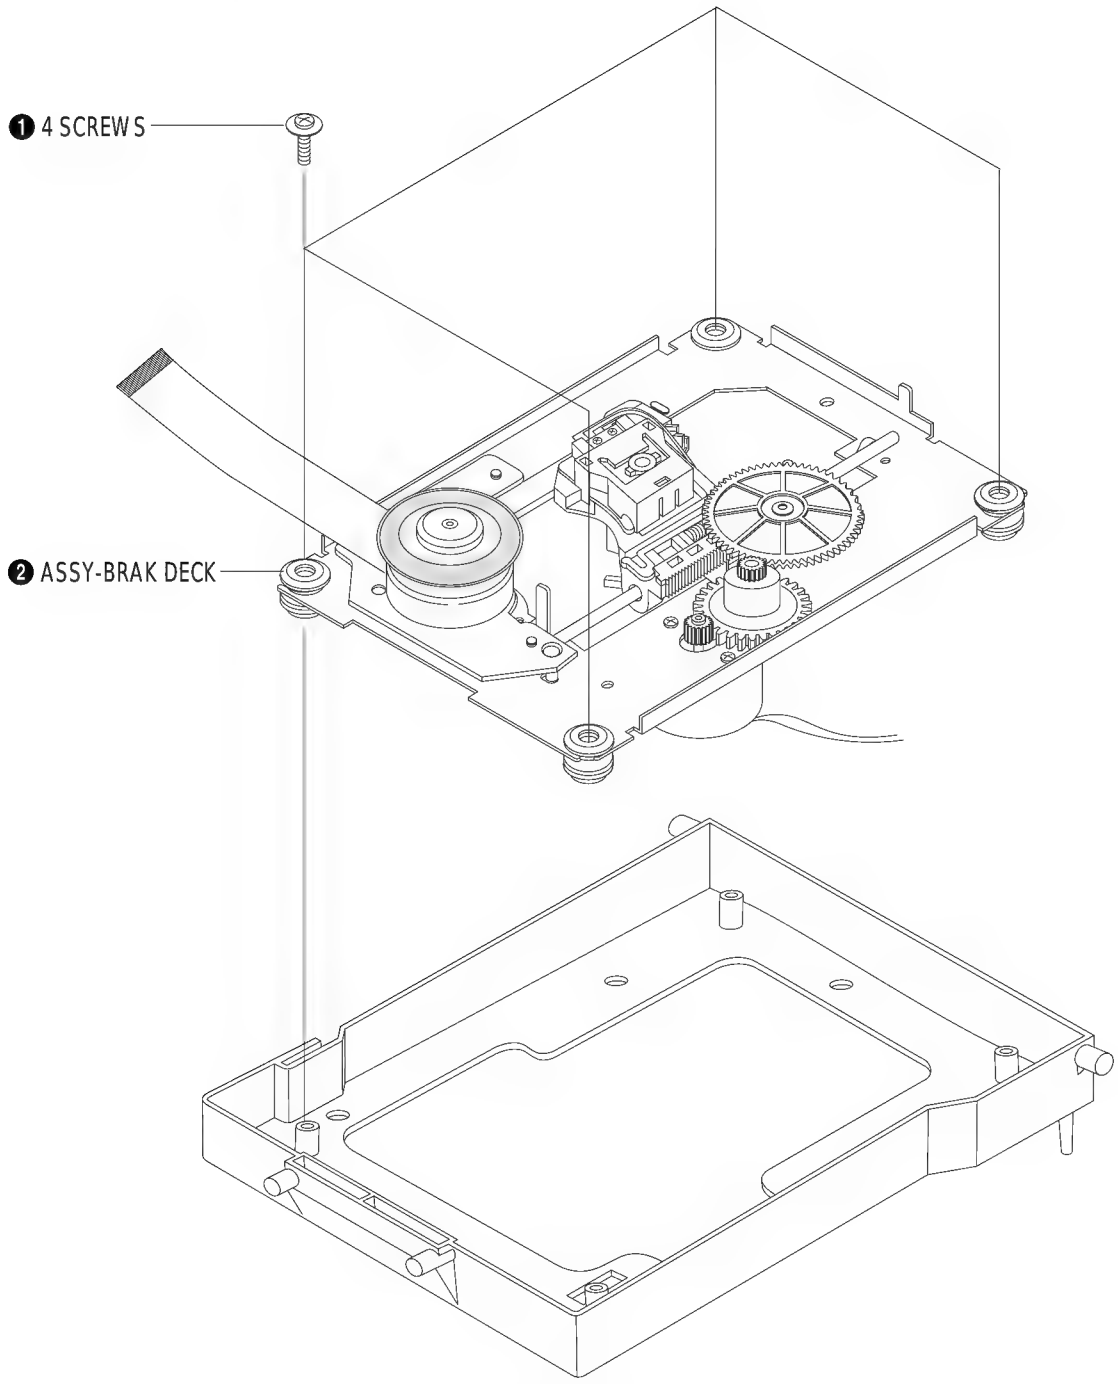

Fig. 4-12 Sub Chassis Removal

4-4-6 Ass'y Brkt Deck Removal

1) Remove Washer ❶.
2) Remove Gear Feed B ❷ , Gear Feed A ❸.
3) Remove 2 Screws ❹.
4) Remove Shaft Pick-Up ❺ and Pick-Up Assy ❻.
5) Remove 1 Screw ❼.
6) Remove 2 Screws ❽.
7) Remove 3 Spring Spindle ❾ and Motor Spindle Ass'y ❿.

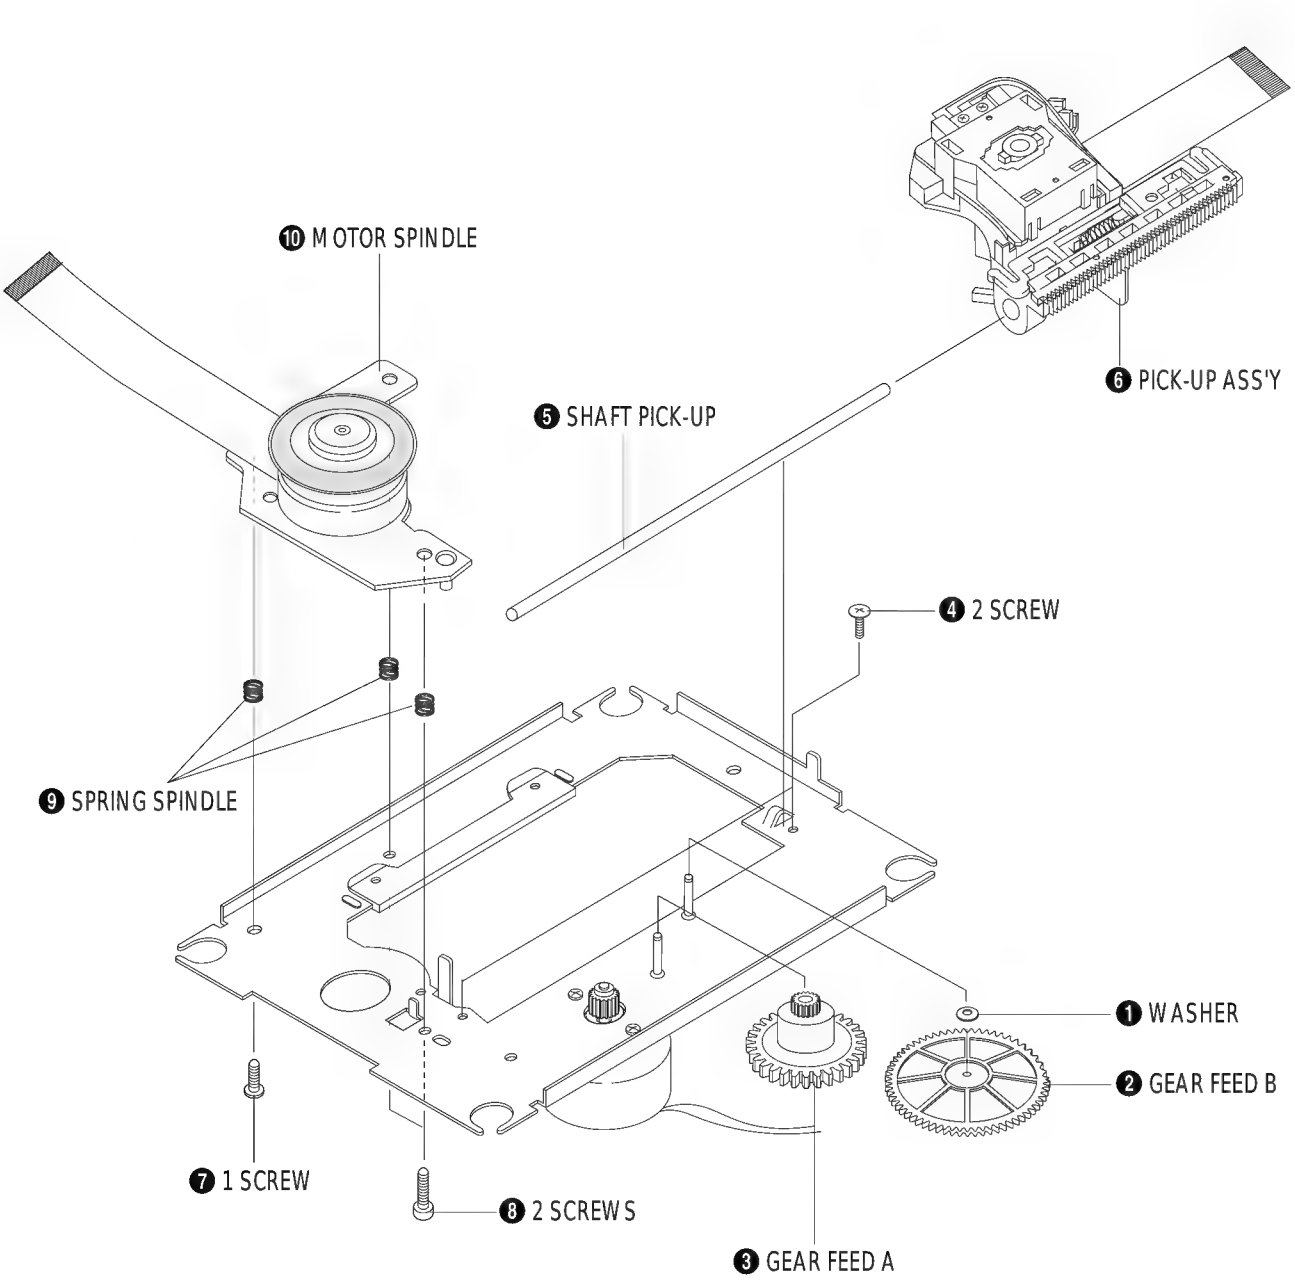

Fig. 4-13 Ass'y Brkt Deck Removal

MEMO

5. Circuit Descriptions

5-1 S.M.P.S.

5-1-1 Comparsion between Linear Power Supply and S.M.P.S.

5-1-1 (a) Linear

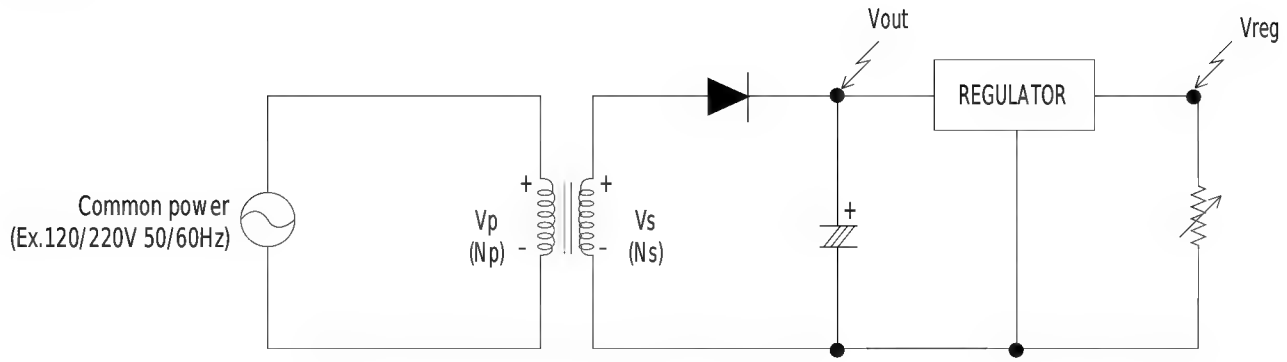

Fig. 5-1 Linear Power Supply

◆ Waveform/Description

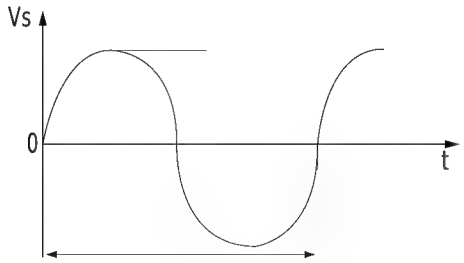

Fig. 5-2

Input : Common power to transformer (Vp).

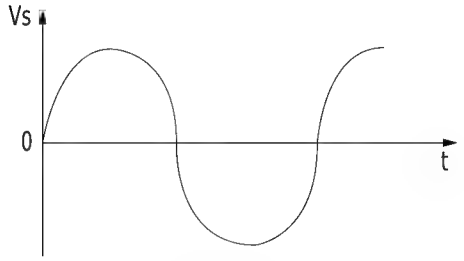

Fig. 5-3

The output Vs of transformer is determined by the ratio of 1st Np and 2nd Ns.
Vs = (Ns/Np) x Vp

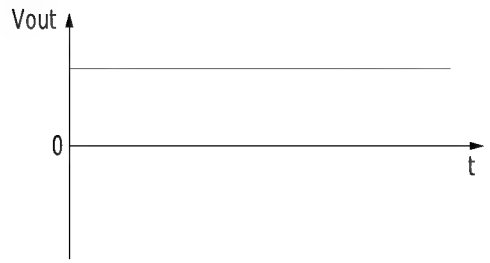

Fig. 5-4

Vout is output (DC) by diode and condensor.

◆ Advantages and disadvantages of linear power supply

1) Advantages : Little noise because the output waveform of transformer is sine wave.

2) Disadvantages :
- ❶ Additional margin is required because Vs is changed (depending on power source). (The regulator loss is caused by margin design).
- ❷ Greater core size and condensor capacity are needed, because the transformer works on a single power frequency.

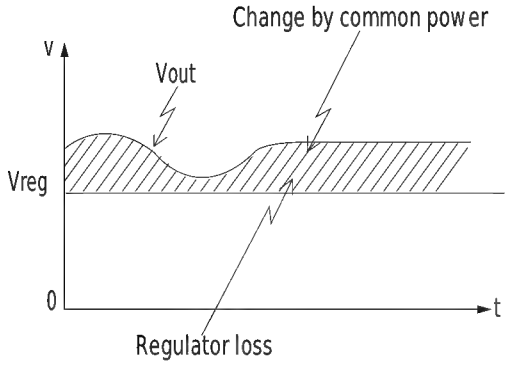

Fig. 5-5

5-1-1 (b) S.M.P.S. (Pulse width modulation method)

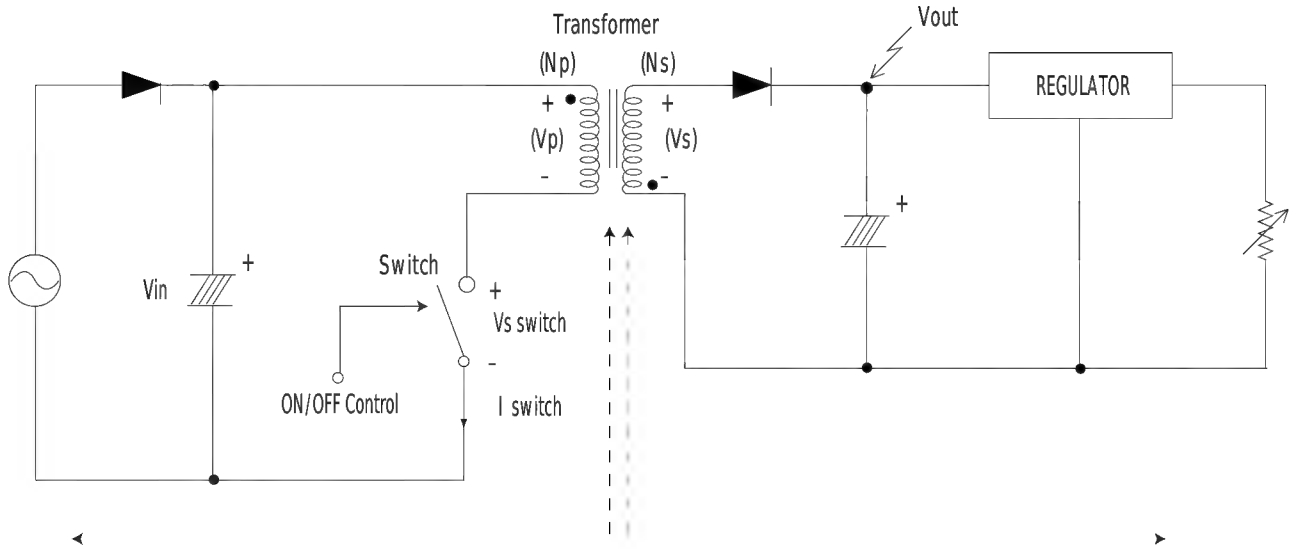

Fig. 5-6

◆ Terms

1) 1st : Common power input to 1st winding.
2) 2nd : Circuit followings output winding of transformer.
3) F (Frequency) : Switching frequency (T : Switching cycle)
4) Duty : (Ton/T) x 100

5-1-2 Circuit description (FLY-Back Control)

5-1-2 (a) AC Power Rectification/Smoothing Terminal

1) PDS01, PDS02, PDS03, PDS04 : Convert AC power to DC(Wave rectification).
2) PE3 : Smooth the voltage converted to DC.
3) PCR01, PCR02, PCD01, PCD02, PCD03, PLS01, PBS01 : Noise removal at power input/output.
4) PVA1 : SMPS protection at power surge input (PVA1 pattern open is to remove noise).

5-1-2 (b) SNUBBER Circuit : PER11, PDS11, PCR11, PCD12, PRS11, PRS12

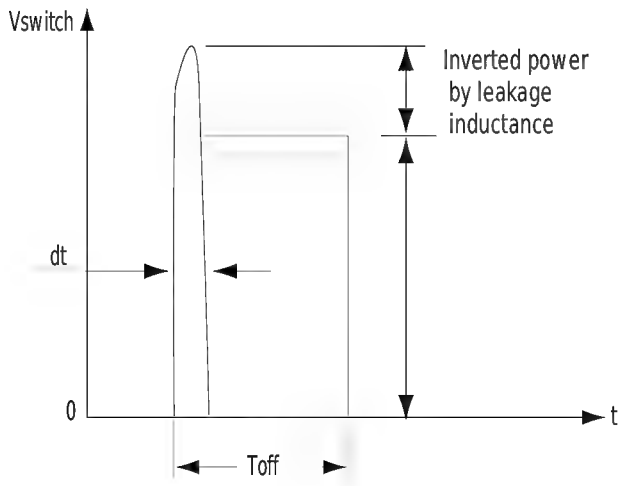

Fig. 5-7

1) Prevent residual high voltage at the terminals of switch during switch off/Suppress noise.
High inverted power occurs at switch (PIC1) off, because of the 1st winding of transformer :
(V= LI xdi/dt. LI : Leakage Induction)
A very high residual voltage exists on both terminals of PQR11 because dt is a very short.

2) SNUBBER circuit protects PIC1 from damage through leakage voltage suppression by RC, (Charges the leakage voltage to PER11, PDS11, PCR11, PCD12, and discharges to PR15 and PR16).

5-1-2 (c) Driving circuit

When Vin supplied, driving current Ig occurs throuhg the PRR11. By this IC (=HfexIg) occurs throug the PQR11 and the Vb is inducted to base winding coil NB of PQR11. By inducted Vb, Ib start flow and the PQR11 is saturated (S/W ON). Ib is constant and Ic increases in propotion to time. After constant time passed Ib become to shotage and PQR11 is cut OFF (S/W OFF).

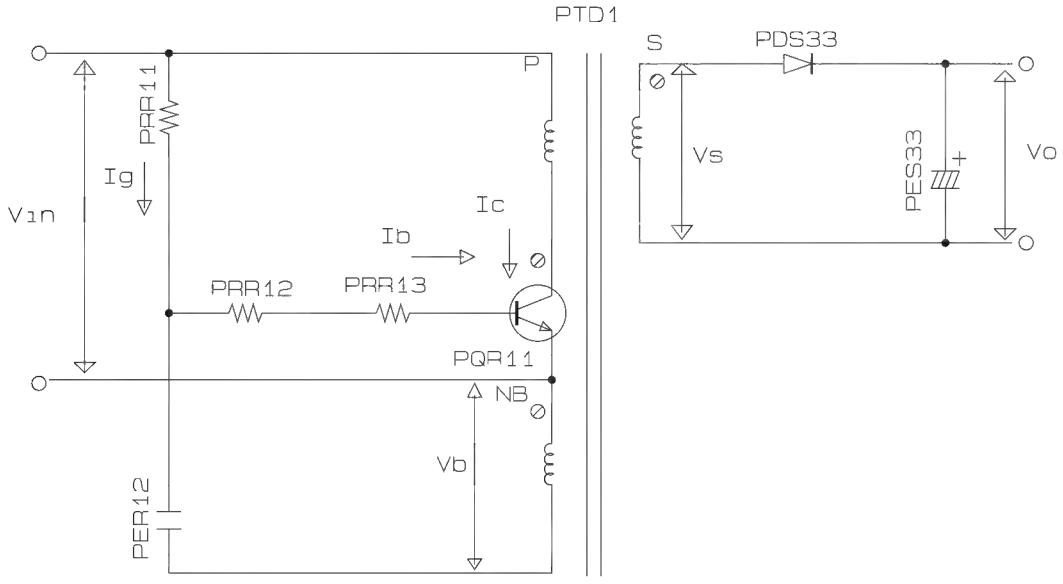

Fig. 5-8 Driving Circuit

5-1-2 (d) Feedback Control Circuit

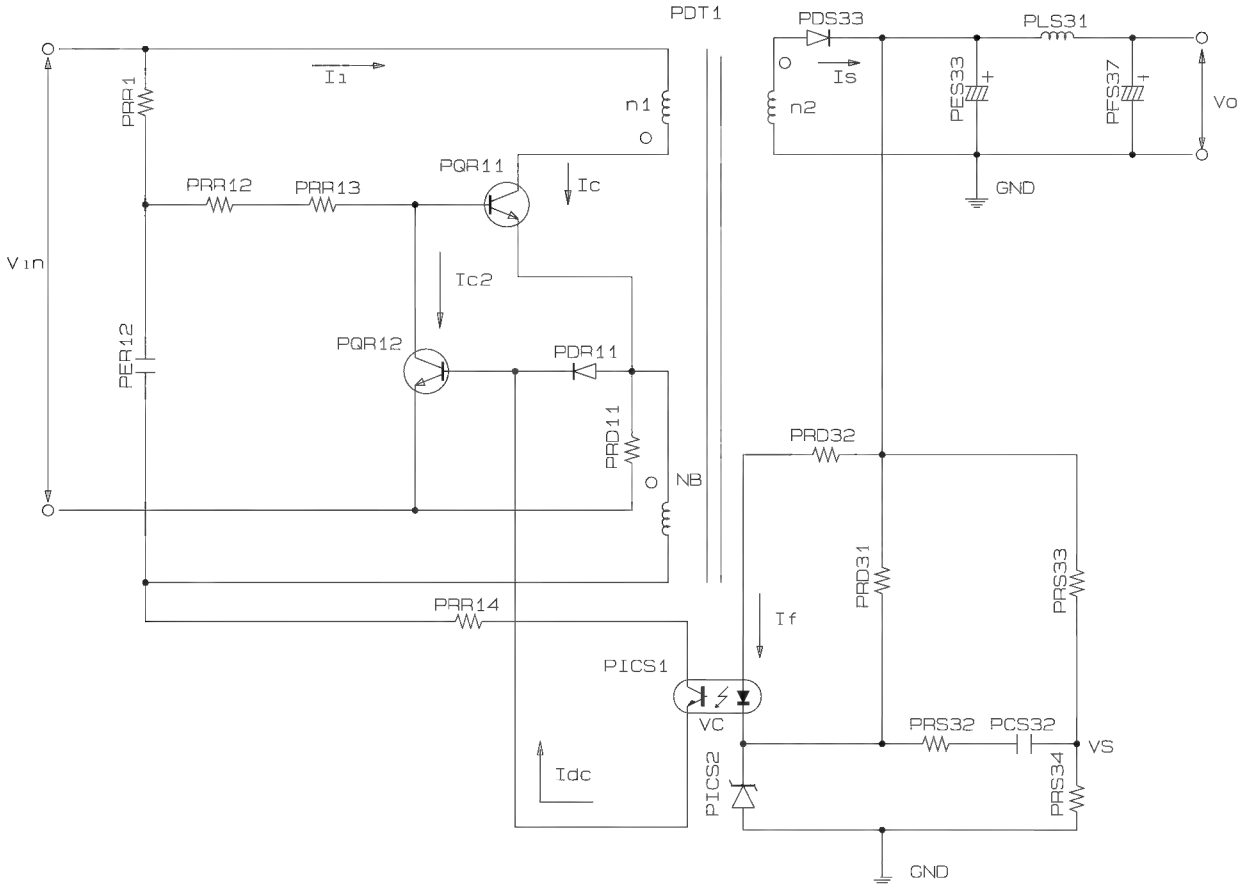

Fig. 5-9

◆ Operation descriptions

1) Internal OP-Amp '+' base potential of PICS2 is 2.5V and external "-" input potential is connected with PRS33 and PRS34 to maintain Vout of 5.8V.
2) If load of 5.8V terminal decreses (or AC inout voltage increases) and Vout increases over 5.8V,
   Then : PICS2 Vs potential up over 2.5V --> PICS2 Vc down --> PICS1 A-K potential down --> PICS1 C-E current up --> PQR12 base current up --> PQR11 base current down --> Vout down --> Maintain 5.8V

   - PRD31, PRD32 : Reduce 5.8V overshoot.
   - PRS32, PCS32 : Prevent PICS2 oscillation (for phase correction).

5-1-3 Internal Block Diagram

◆ Internal Block Diagram

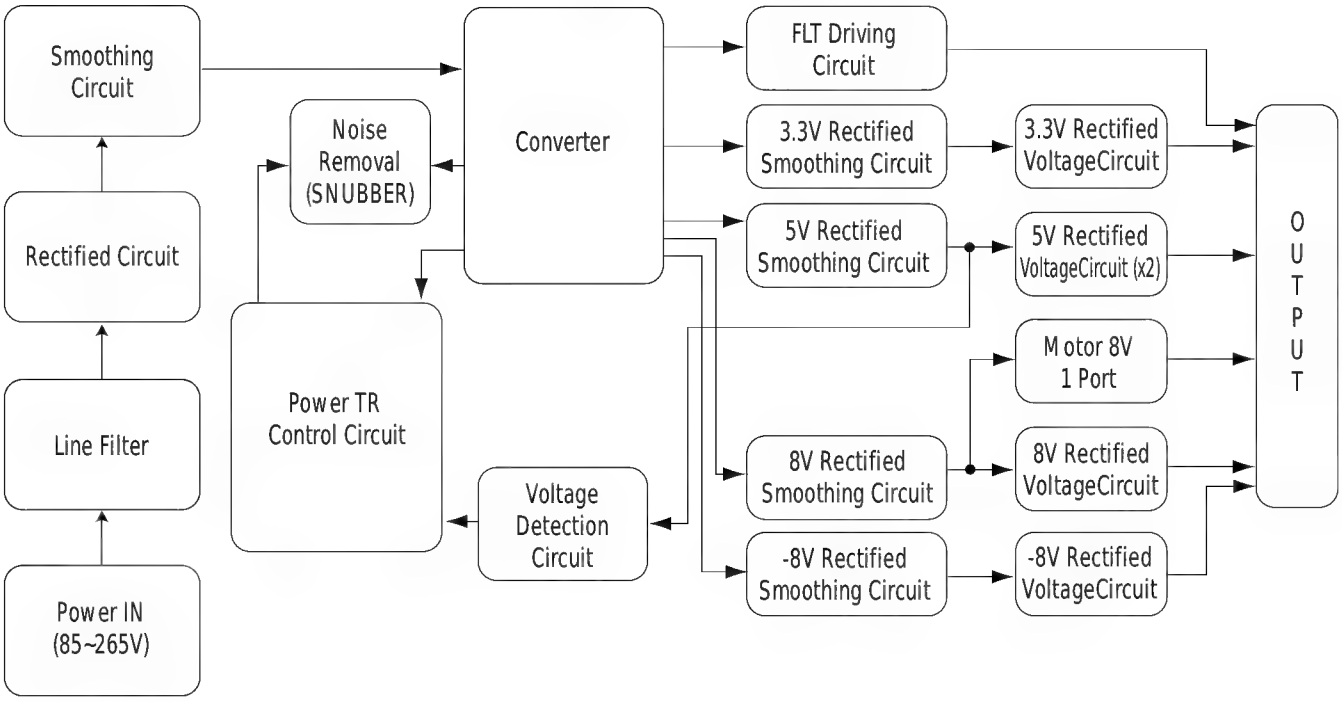

Fig. 5-10

5-2 RF

5-2-1 RIC1 (KS1461)

KS1461 is combined with KS1452 and KS1453 as bipolar IC developed for DVD SERVO system.
Main features include DVD waveform equalizing, CD waveform equalizing, focus error signal generation, 3-beam tracking error signal generation, DPD 1-beam tracking error, defect, envelope, MIRR output, etc. after receiving the pick-up output converted into I/V.

5-2-1 (a) Basic Potentiometer

KS1461 uses a single power method and each circuit is based on V of 2.5V.
V (Pin 12, 20, 24, 67) terminal is needed for IC, which uses the peripheral V.

5-2-1(b) RF signal

Fig. 5-11 shows the flow of signal generated by the pick-up.
A, B, C, D signals detected from pick-up are converted in to RF signal(A+B+C+D) via RF summing AMP.

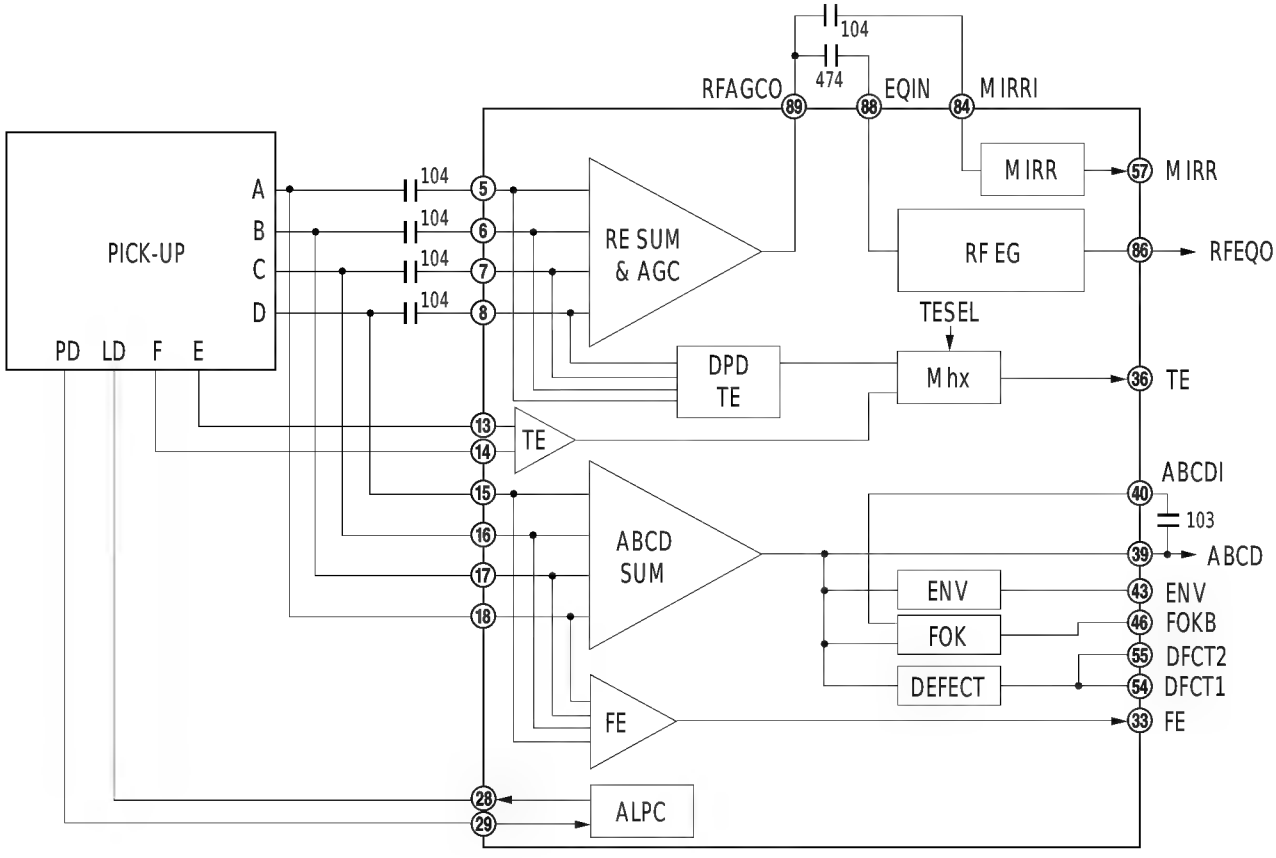

Fig. 5-11

Fig. 5-12 shows the waveform-equalizing block diagram for the RF signal.
It outputs to EQout (Pin 86) terminal by initially changing switching AMP gain of DVD and CD, and then adjusting the level in RF SUM & AGC. It controls RF SUM & AGC gain by means of Pin 89-95 and interfaces with PWM signal, (output from PWM terminal of KS1453, via low-pass filter to adjust boost gain and peak frequency.

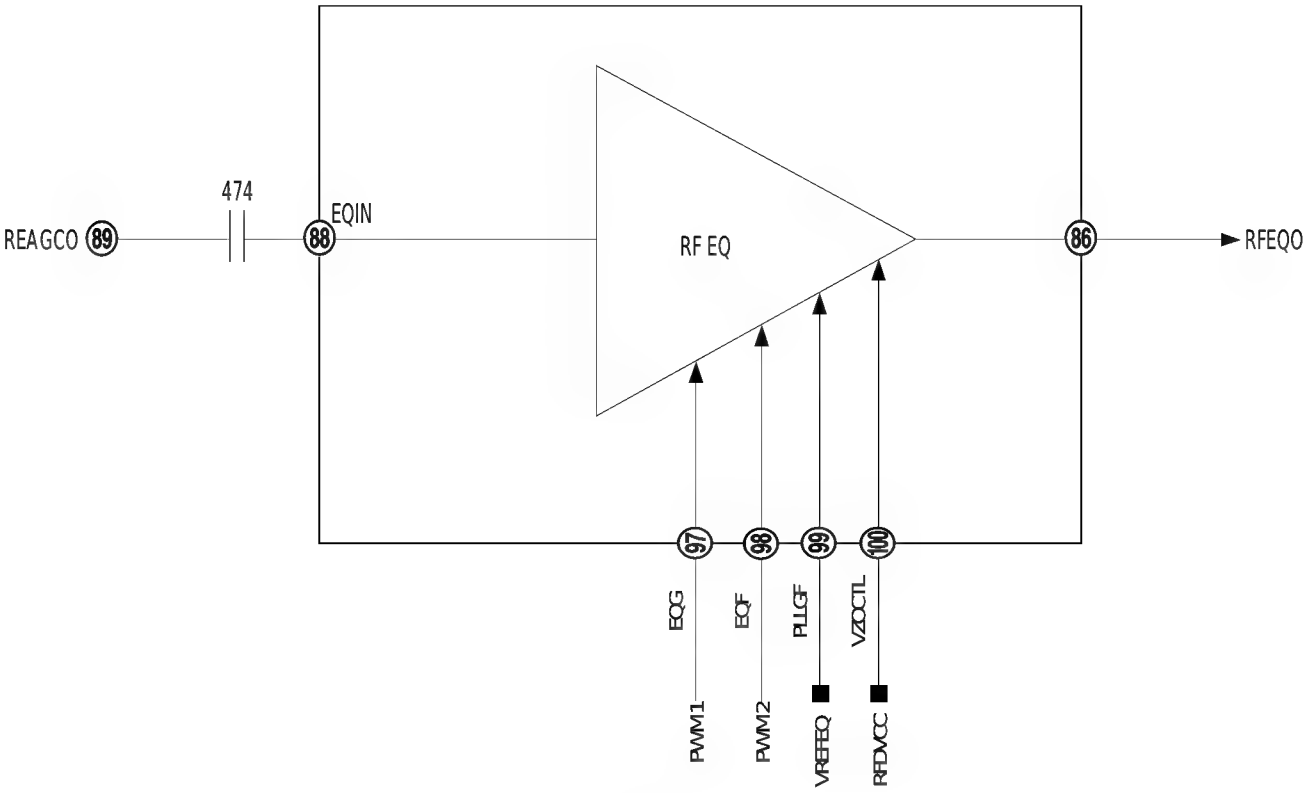

Fig. 5-12

The control parameters of DVD EQ and CD EQ are as follows.

1) DVD CD EQ control parameter

❶ EQG (Pin 97) : Changes the gain of peak frequency with EQ frequency characteristic. Convert PWM signal, output from KS1453, into DC via low-pass filter.

❷ EQF (Pin 98) : Changes the peak frequency with EQ frequency characteristic. Convert PWM signal, output from KS1453, into DVD via low-pass filter.

5-3 System Control

5-3-1 Outline

The main micom peripheral circuit is composed of 16bit Micom (MIC1 ; TMP95C265), 8M EPROM (MIC2 ; M27C801) for Microcode and data save, 256 byte EE-PROM (MIC4 ; KS24C020) for permanent storage of data needed at power off.
The Micom (MIC1 ; TMP95C265) mounted in main board analizes the key commands of front panel or instructions of remote control through communication with Micom (FIC1 ; LC86P6232) of front and controls the devices on board to execute the corresponding commands after initializing the devices connected with micom on board at power on.

5-3-2 Block Diagram

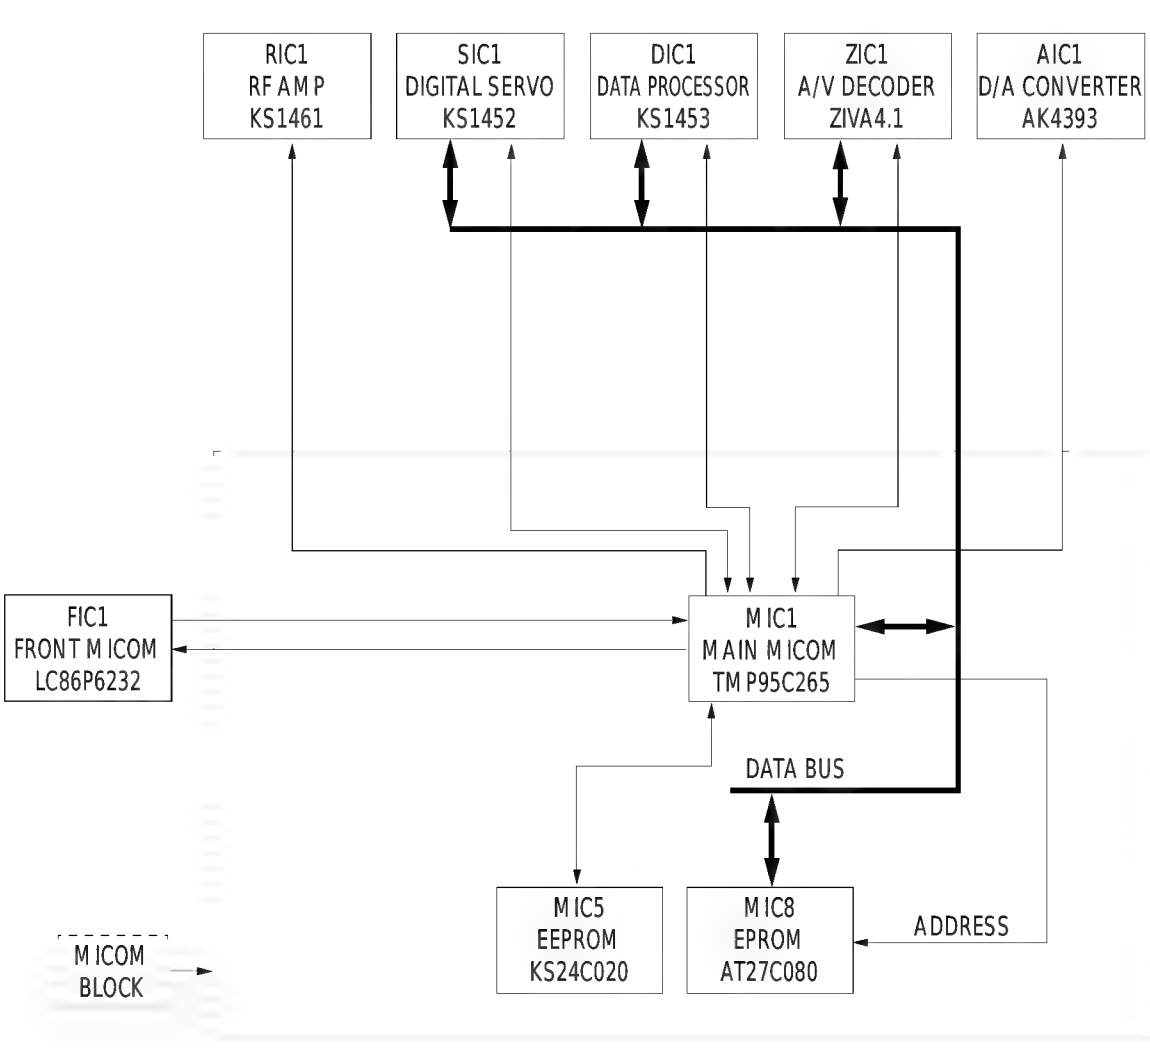

Fig. 5-13

5-3-3 Waveform Description

When micom accesses each device sharing bus, it falls the chip select signal of corresponding chip to (/CS1:MIC3-22, /CS2:MIC2-22, /DSPCS:DIC1-2, /DVD1CS:ZIC1-208, CSB:SIC1-10) 0 (Low) before trial.
So to speak, the bus is used by time-division as shown in Fig 5-14, 5-15, 5-16.
Two and more devices can't be accessed simultaneously.

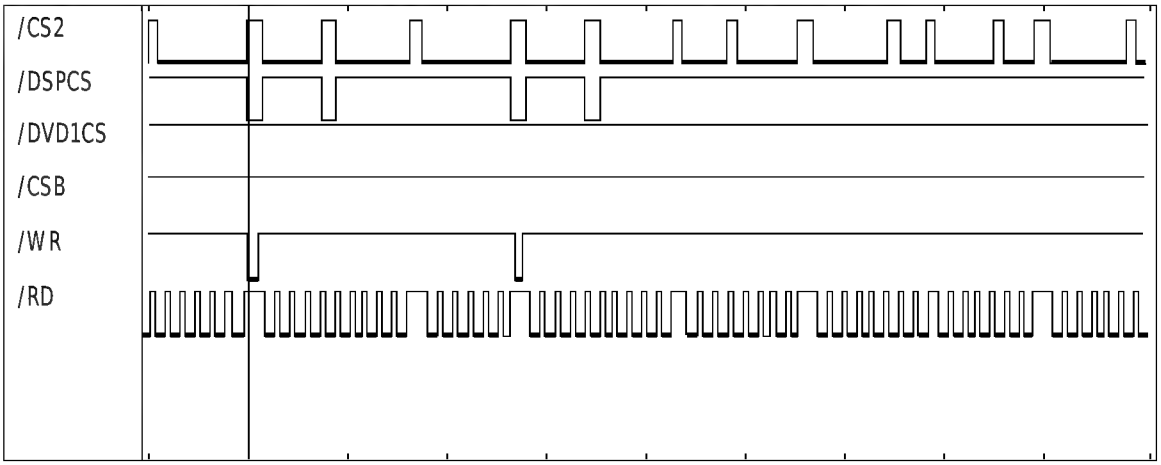

Fig. 5-14

- CH1 : CS2 (MIC2-22, EPROM CHIP SELECT)
- CH2 : DSPCS (DIC1-2, DATA PROCESSOR CHIP SELECT)
- CH3 : DVD1CS (ZIC1-208, A/V DECODER CHIP SELECT)
- CH4 : SRVCS (SIC1-10, DIGITAL SERVO CHIP SELECT)
- CH5 : WR (MIC1-89, MICOM OUTPUT WRITE SIGNAL)
- CH6 : RD (MIC1-88, MICOM OUTPUT READ SIGNAL)

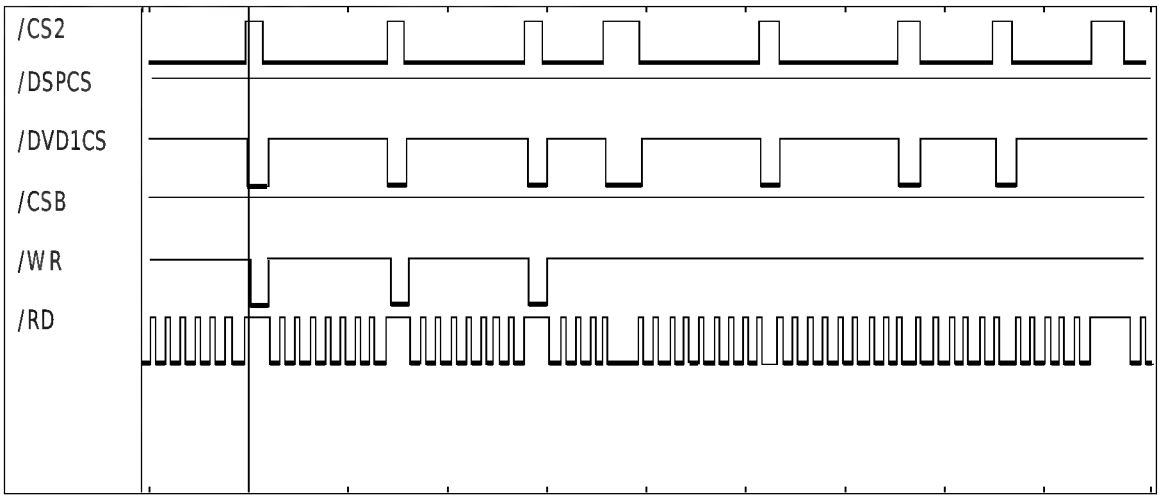

Fig. 5-15 DSP Access

- CH1 : CS2 (MIC2-22, EPROM CHIP SELECT)
- CH2 : DSPCS (DIC1-2, DATA PROCESSOR CHIP SELECT)
- CH3 : DVD1CS (ZIC1-208, A/V DECODER CHIP SELECT)
- CH4 : SRVCS (SIC1-10, DIGITAL SERVO CHIP SELECT)
- CH5 : WR (MIC1-89, MICOM OUTPUT WRITE SIGNAL)
- CH6 : RD (MIC1-88, MICOM OUTPUT READ SIGNAL)

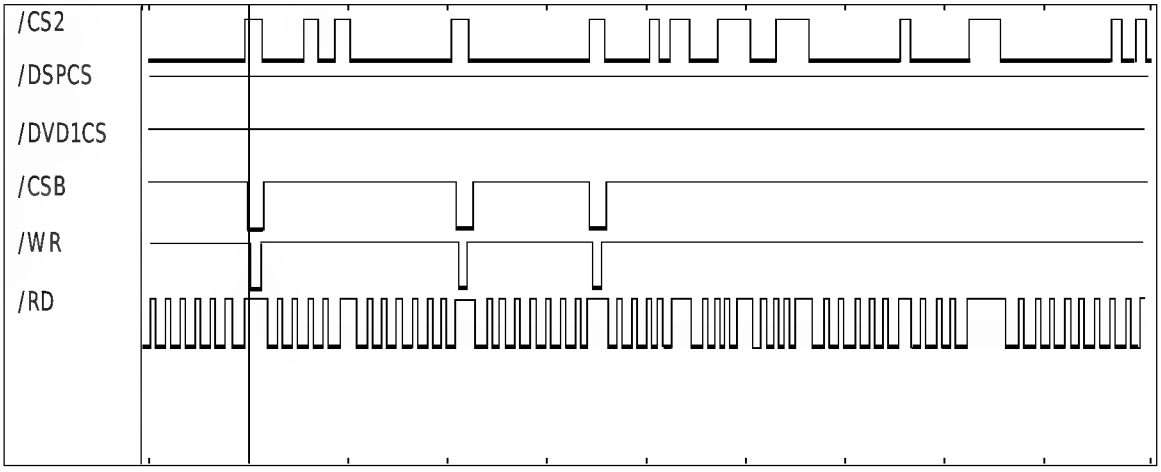

Fig. 5-16 Servo Access

- CH1 : CS2 (MIC2-22, EPROM CHIP SELECT)
- CH2 : DSPCS (DIC1-2, DATA PROCESSOR CHIP SELECT)
- CH3 : DVD1CS (ZIC1-208, A/V DECODER CHIP SELECT)
- CH4 : SRVCS (SIC1-10, DIGITAL SERVO CHIP SELECT)
- CH5 : WR (MIC1-89, MICOM OUTPUT WRITE SIGNAL)
- CH6 : RD (MIC1-88, MICOM OUTPUT READ SIGNAL)

5-4 Servo

5-4-1 Outline

SERVO system of DVD is divided into Focusing SERVO, Tracking SERVO, SLED Linked SERVO and CLV SERVO (DISC Motor Control SERVO).

1) Focusing SERVO
Focuses the optical spot output from object lens onto the disc surface. Maintains a uniform distance between object lens of Pick-up and disc (for surface vibration of disc).

2) Tracking SERVO
Make the object lens follow the disc track in use of tracking error signal (created from Pick-up).

3) SLED Linked SERVO
When the tracking actuator inclines outwardly as the object lens follows the track during play, the SLED motor moves slightly (and counteracts the incline).

4) CLV SERVO (DISC Motor Control SERVO)
Controls the disc motor to maintain a constant linear velocity (necessary for RF signal).

5-4-2 Block Diagram

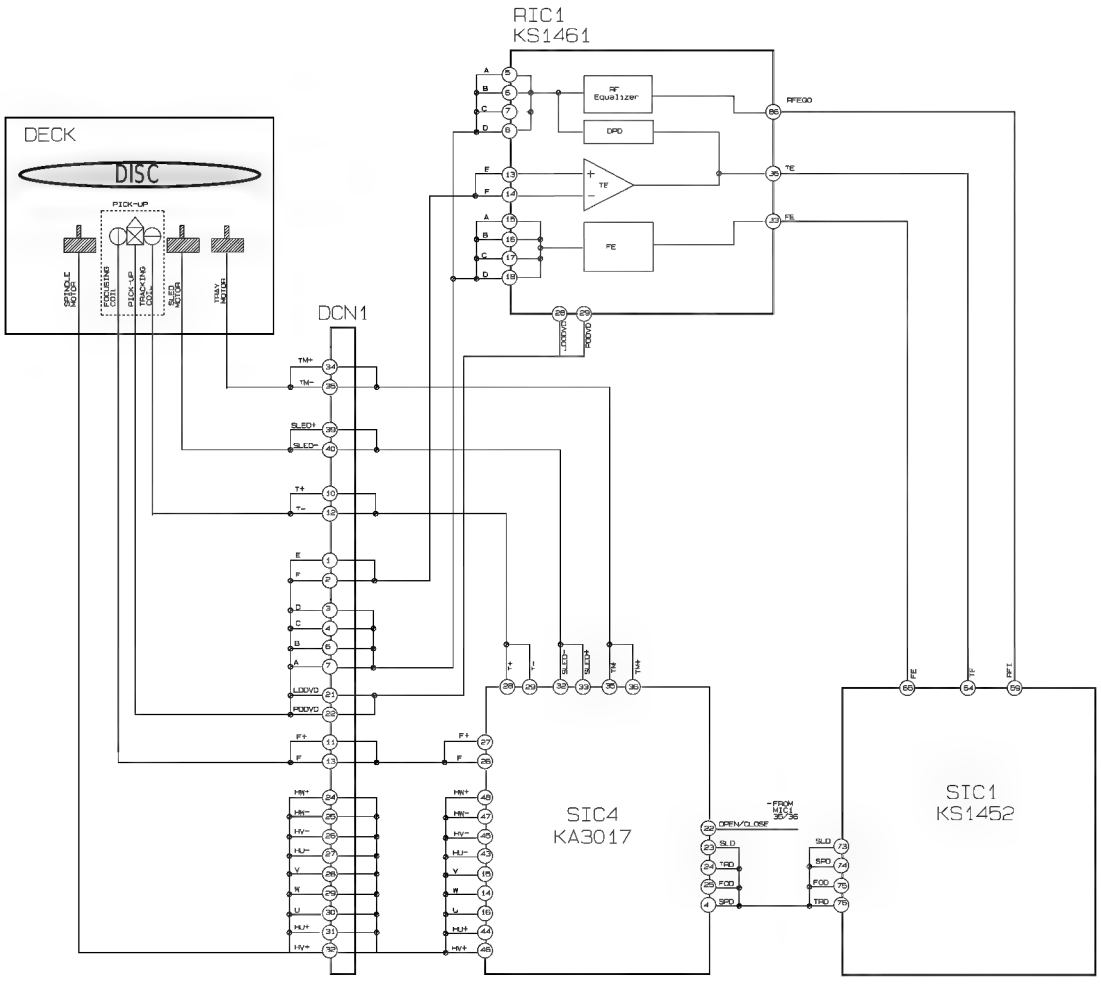

Fig. 5-17

5-4-3 Operation

1) FOCUSING SERVO

(1) FOCUS INPUT

The focus loop is changed from open loop to closed loop, and the triangular waveform moves the object lens up and down (at pin 75 of SIC1 during Focus SERVO ON.) At that time, S curve is input to pin 65 of SIC1.

ABAD (pin 39 of RIC1) signal, summing signal of PD A, B, C, D, is generated, and zero cross(2.5V) point occurs when S curve is focused and ABAD signal exceeds a preset,constant value. The focus loop is changed to closed loop, and the object lens follows the disc movement, maintaining a constant distance from the disc. (these operations are same in CD and DVD).

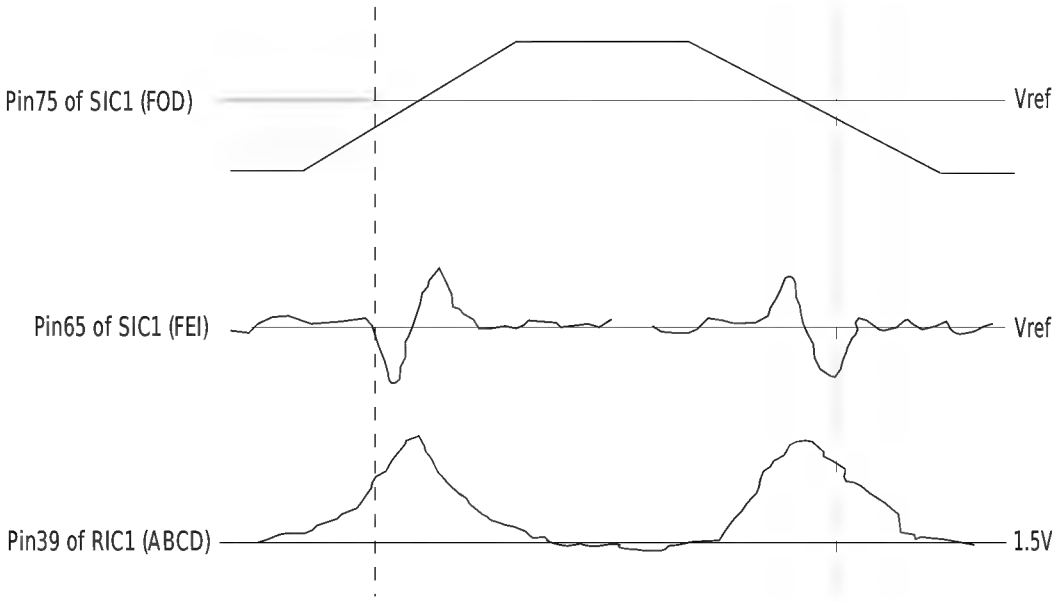

Fig. 5-18

(2) PLAY

When focus loop closes the loop during focus servo on, both pin 65 and pin 75 of SIC1 are controlled by VREF voltage (approx. 2.5V), and pin 26, 27 of SIC4 are approximately 4.5V.

2) TRACKING SERVO

(1) NORMAL PLAY MODE

❶ For DVD

Composite : The signal output from PD A, B, C, D of Pick-up, the tracking error signal (pin36 of RIC1) uses the phase difference of A+C and B+D in RIC1, and inputs to terminal 64 of SIC1. Then, it is output to SIC1 pin 76 via digital equalizer, and applied to the tracking actuator through SIC4.

Pins 76 of SIC1 is controlled by VREF(approx. 2.5V) during normal play.

Meanwhile, DVD repeats the track jump from 1 to 4 in inner direction at normal play (because data- read speed from disc is faster than data output speed on screen).

❷ For CD, VCD

Receive the signal output through E, F of Pick-up, from RIC1. The tracking error signal is similar to DVD.

(2) SEARCH Mode :

Search mode : Fine seek,(Moving the tracking actuator slightly little below 255 track) and coarse search, moving much in use of sled motor. The coarse search will be described in sled linked servo and now, the fine seek is explained shortly.
If the object lens is located near target, cut off the tracking loop and give the control signal as many as desired count to move the tracking actuator via SIC1 pin 76 terminal(TRD).

3) SLED LINKED SERVO

- Normal play mode
  Move SLED motor slightly by means of PWM signal in SIC1 pin 73, as the tracking actuator moves along with track during play. Control to move the entire Pick-up as the tracking actuator moves.

- Coarse serach mode
  In case of long-distance search (such as chapter serach), SIC1 uses MIRR and TZC signal of SIC1-38, 52.
  Then, read ID and compute the existing track count after input of next
  track. If the existing track count is within fine seek range, tracking begins using fine seek.

4) CLV SERVO(DISC MOTOR CONTROL SERVO)

Input RF signal (from Pick-up) to SIC1 pin59. Detect SYNC signal from RF in SIC1, and output PWM signal to SIC1 pin 55 for constant linear velocity.

5-5 DVD Data Processor

5-5-1 Outline

DIC1(KS1453) performs Sync detection, EFM demodulation and error correction and Spindle motor control (CLV control) after inputting sliced EFM signal of RF signal at disc playback and EFM read clock (PLCK) signal generated from PLL. Outputs data which converted to the last audio and video from A/V decoder (ZIC1). KS1453 uses external memory(4M DRAM) as buffer as well as for error correction and carries out Variable Bit Rate transfer function. VBR function uses the external buffer as buffer to absorb the difference of transfer rate occurring because the transfer rate of disc playback is faster than data transfer rate demanded by A/V decoder(Video/Audio Signal Process Chip).
In case of general disc refresh, the memory is almost filled up periodically. It is because Write rate to memory after disc playback and signal process is faster than Read of A/V decoder. When the memory is filled, this status is reported by interrupt to main micom, which controls the servo to kick back the pick-up to the previous track after memorizing the last data read from disc until now. It takes some times to jump to the previous track and return to the original(jump location) again. The memory will have an empty space because A/V decoder reads out data of memory.
When the memory has an empty space, where data can be processed and written and the pick-up correctly gets to the original location(before kick back location) again, it reads data again avoids the interrupt of data read previously. The basic operation repeats to perform as described above.

5-5-2 Block Diagram

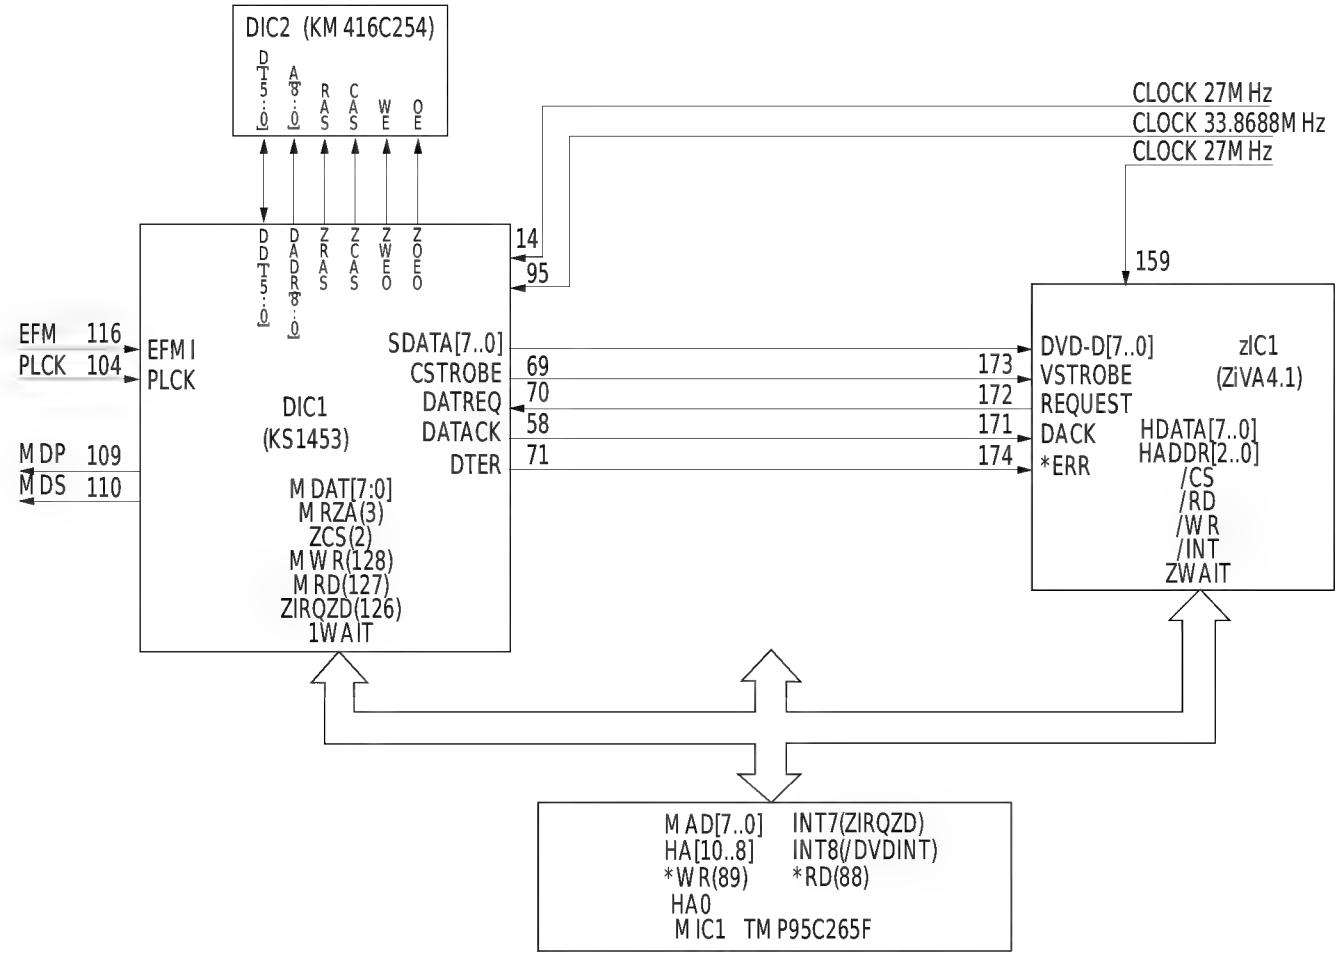

Fig. 5-19

5-5-3 Waveform Description

It measures the timing that data processed in DIC1 at DVD playback.

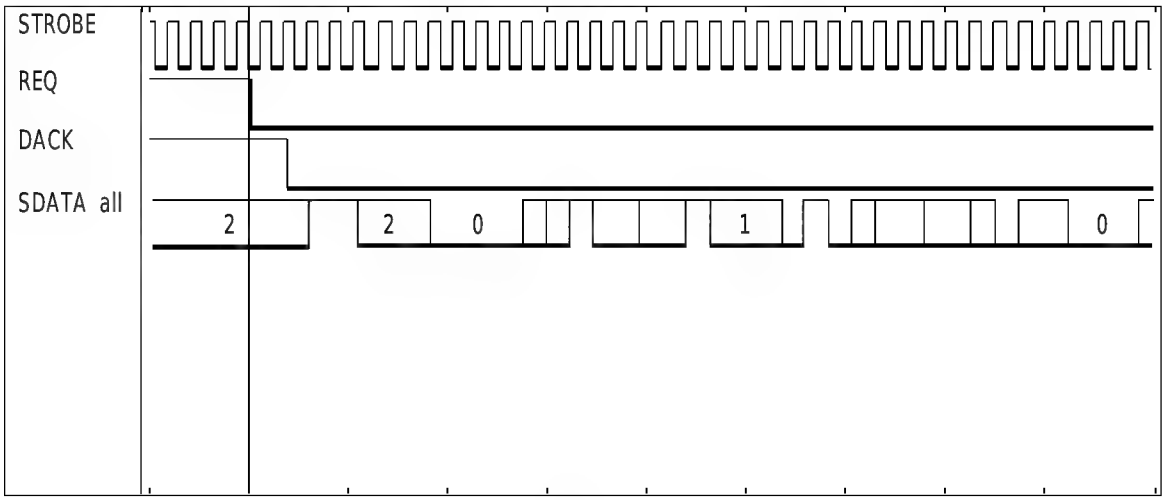

Fig. 5-20

- CH1 : STROBE (DIC1-69, CLOCK)
- CH2 : REQ (DIC1-70, DATA REQUEST)
- CH3 : DACK (DIC1-58, DATA ACKNOWLEDGE)
- CH4 : SDATA (DIC1-60~67, DATA)

5-6 Video

5-6-1 Outline

ZIC1(A/V decoder with video encoder) diverges from the 27MHz crystal, then generates VHSYNC and HSYNC.
ZIC1(A/V decoder with video encoder) does RGB encoding, copy guard processing and D/A conversion of 8bit video data internally inputted from video decoder block by MIC1(Micom).
Video signal converted into analog signal is outputted via amplifier of analog part.

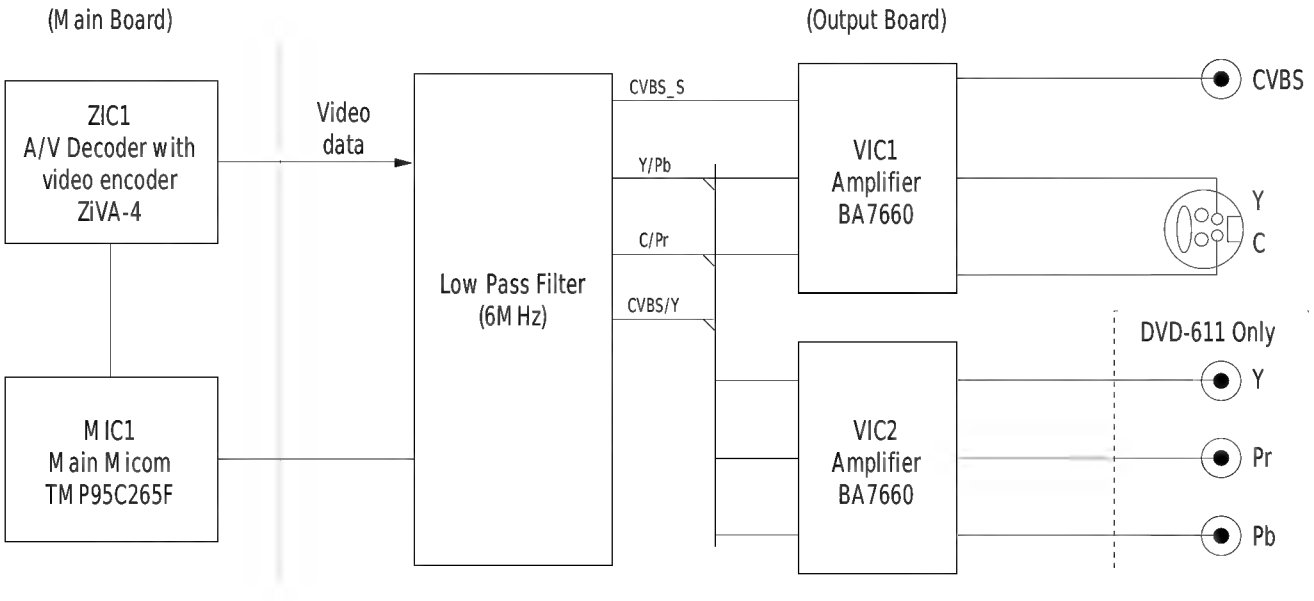

Fig. 5-21 Video Output Block Diagram

5-6-2 NTSC Digital Encoder (ZIVA-4.1 ; Buit in video encode)

ZIC1 inputted from pin159 with 27MHz generates HSYNC and VSYNC which are based on video signal.
ZIC1 is synchronous signals with decoded video signal and control the output timing of 8bit video signal of ITU-R601 format.
The inputted 8bit data which decoded from video decoder block is demuxed with each 8bit of Y, R-Y, B-Y. The separate signal is encoded to NTSC by control of MIC1.
The above signals, which are CVBS(Composite Video Burst Synchronized)/G(GREEN)/Y[PIN139], Y(S_VIDEO)/B(BRUE)/Pb[PIN145] and C(S_VIDEO)/R(RED)/Pr[PIN151], are selectively outputted CVBS +S_VIDEO, Y+Pr+Pb by the rear switch.
In Course of encoding,8bit data can extend to 10bit or more. To convert the extended data to quantization noise as possible,ZIC1 adopts 10bit D/A converter. ZIC1 perform video en-coding as well as copy protection.

5-6-3 Amplifier (VIC1, VIC2 : BA7660)

VIC1 and VIC2 are 6dB amplifier. Based on CVBS signal, the final output level must be 2Vpp without 75ohm terminal resitance. Because the level of video encoder output is only 1.1Vpp, the level is adjusted with the special amplifier. When mute of pin 1 is high active, if the pin is floating and connecte to power, the output isgnal is never outputted. CVBS,Y,C,Y,Cr,Cb outputted from video encoder are inputted to VIC1(Pin 7,Pin2,Pin4),and VIC2(Pin7,Pin4,Pin2) respectively and outputted from VIC1(Pin15,Pin13,Pin10) and VIC2(Pin15,Pin13,Pin10). Pin9, Pin12, Pin14 of VIC1, VIC2 are feedback pin to SAG compensation(DC characteristic compensation of siganl).
The signal to which gain is adjusted by amplifier is outputted from jack via 75ohm Resistance(VR10~VR13, VR22~24).

5-7 Audio

5-7-1 Outline

The four data (Data 0~3) outputted from A/V decoder (ZIC1 ; ZiVA4.1) are supplied to DATA 0 for 2-channel mixed audio output and to DATA 1~3 for Analog audio output (5.1-channel).
The audio data (0~3) transmitted from A/V decoder (ZIC1 ; ZiVA4.1) are converted into analog signal via audio D/A converter and outputted via post filter and amplifier.
CD and VCD are outputted with only 2 channels audio data and transmit them to Data 0 and Data 1.
Front L/R channel is outputted in mixed audio output (L/R output) and analog audio output and surround L/R, center and subwoofer aren't outputted.
If DVD of 2 channels source disc is used, it is outputted by the same way with CD and VCD.
If 5.1-channel source disc, front L/R channel is outputted in Data 1, Surround L/R in Data 2 and Center/Subwoofer in Data 3. At that time, 5.1 channel can be downmixed in 2 channel in Data 0.

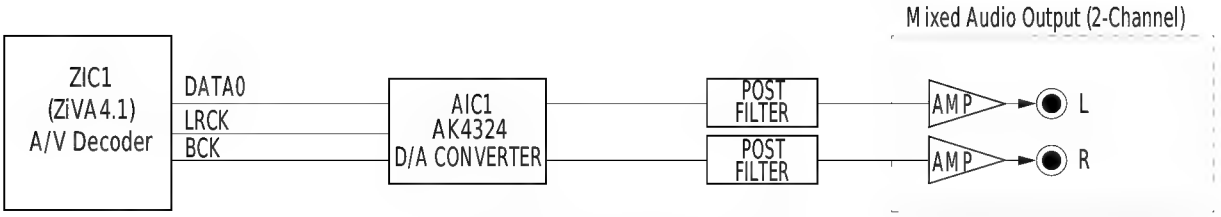

Fig. 5-22 Audio Output Block Diagram

5-7-2 DVD Audio Output

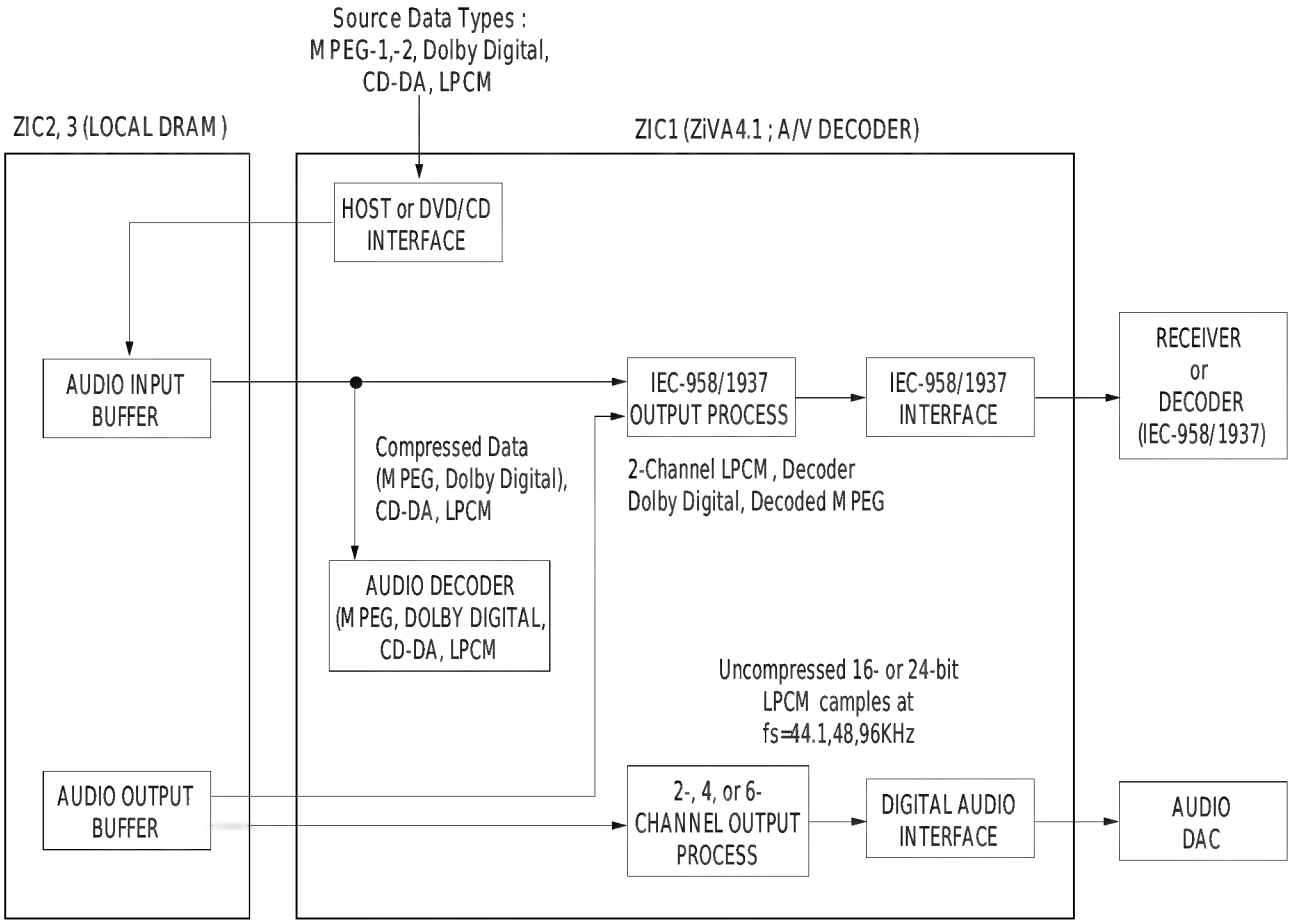

Fig. 5-23 Audio Decoder and Output Interface Datapath

1) Compressed Data

The audio data inputted to ZIC1 (ZiVA4.1) A/V decoder is divided into compressed data and uncompressed data. It is compressed data that is compressed with multi-channel audio data such as Dolby digital, MPEG, DTS, etc. The compressed data inputted to ZIC1 (ZiVA4.1) is converted into the uncompressed data of 2, 4, and 6 channels through ZiVA4.1 built-in audio decoder and is outputted to Data 0, 1, 2, and 3 through digital audio interface. The compressed data is transmitted to external AC-3 amplifier or MPEG/DTS amplifier as IEC-958/1937 transmission data format compressed by ZiVA4.1 built-in IEC-958 output process.

2) Uncompressed Data

The uncompressed data is that data isn't compressed, so it is called CD-DA, LPCM data.
The 2 channels data is converted through audio decoder 2-channel data and Data 0 and Data 1 are outputted in digital audio interface.Via IEC-958 output process, they is transmitted to digital amplifier or AC-3/MPEG/DTS amplifier built in the external digital input source with IEC-958/1937 transmission format.

MEMO

6. Troubleshooting

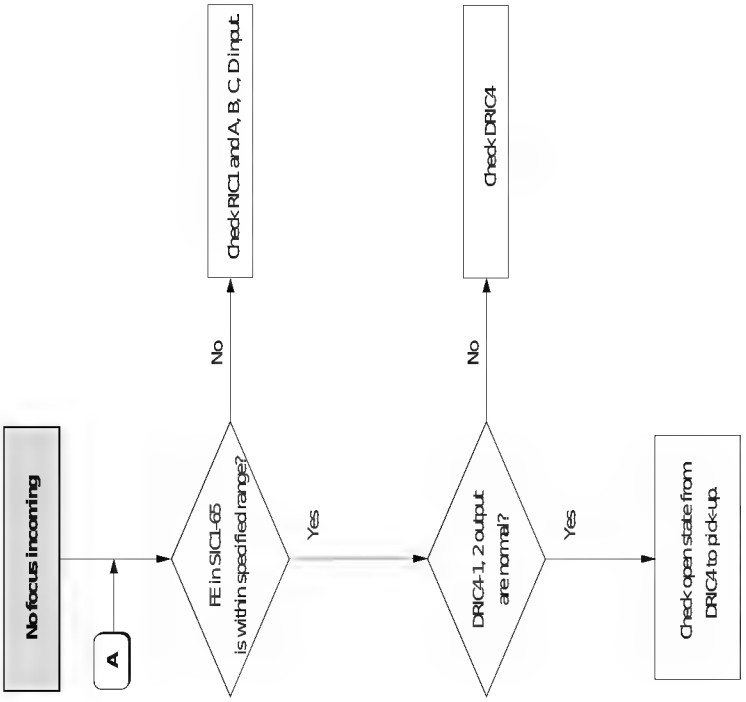

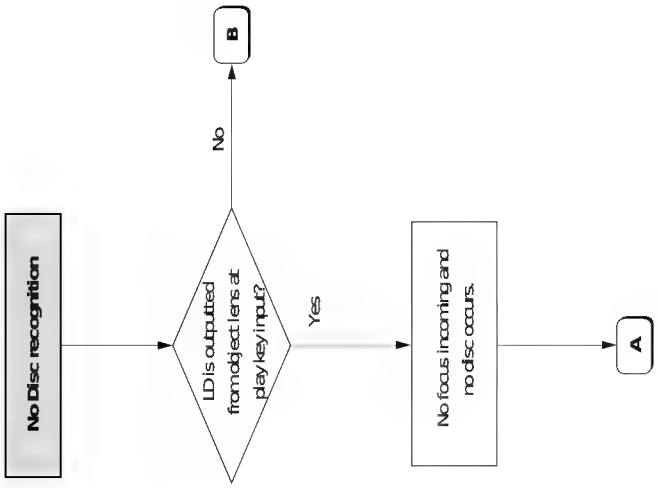

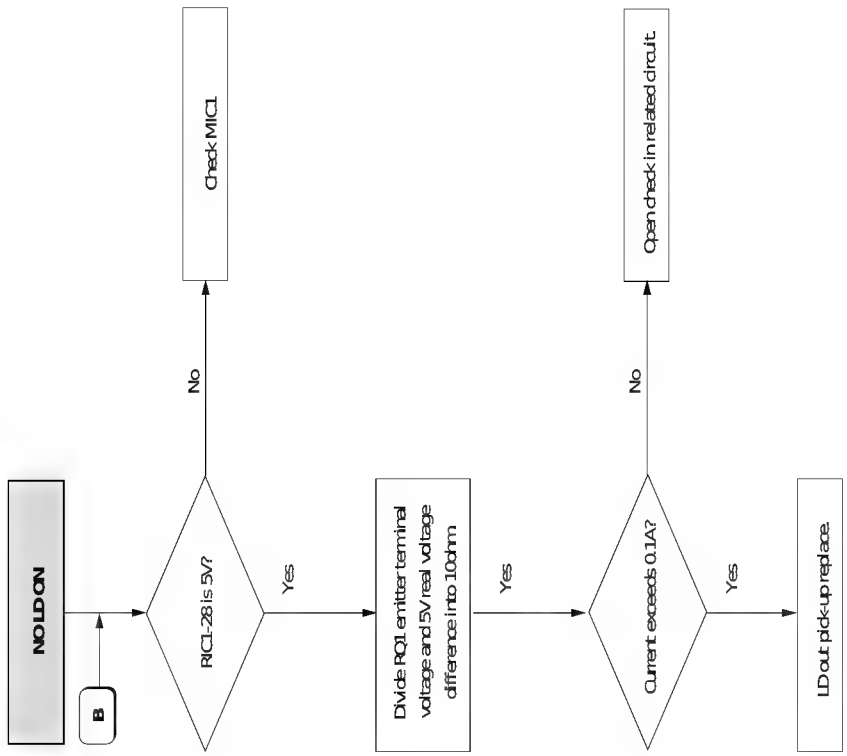
NO LD ON
B
RICL-28 is 5V?
No
Check MICL
Yes
Divide RQ1 emitter terminal voltage and 5V real voltage difference into 10ohm
Yes
Current exceeds 0.1A?
No
Open check in related circuit.
Yes
LD out pick-up replace.

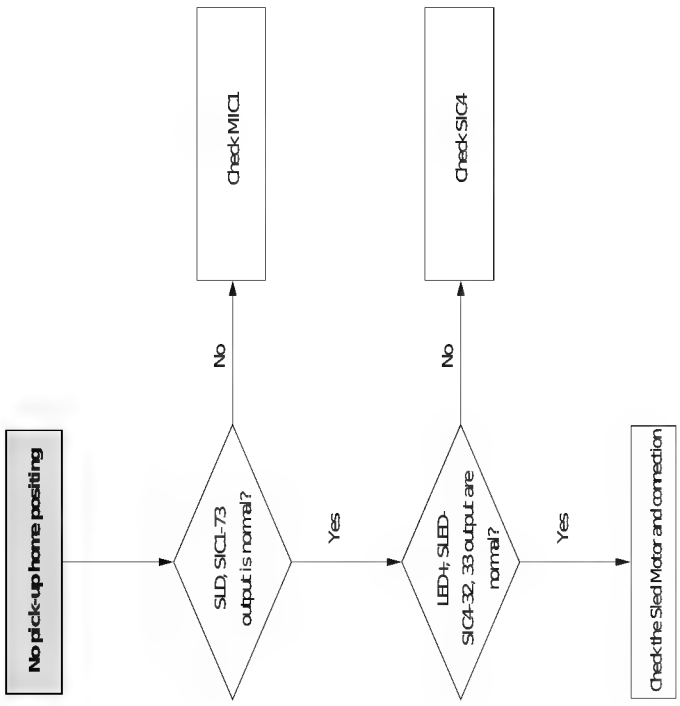
No pick-up home positing
SLD, SICL-73 output is normal?
No
Check MICL
Yes
LED+, SLED-SIC4-32, 33 output are normal?
No
Check SIC4
Yes
Check the Sled Motor and connection

No Search Operation
MIRR, SIC1-38 output is nmal?
No
Yes
RFAGCO, RIC1-89 output level is normal?
No
Check pick-up.
Yes
Check RIC1 peripheral circuit.
Actual velocity occurs at SIC1-73 terminal?
No
Yes
Check SIC1 peripheral circuit.
Actual velocity occurs at ISC4-32, 33 terminal?
No
Yes
Check SIC4 peripheral circuit.
TE occurs in search range?
No
Yes
Focus On?
No
A
See "Time Seek Check"
FINE SEEK Check
FINE SEEK MIRR signal (RIC1-57) is missing?
Yes
Check RIC1 Peripheral circuit.
No
TZCO signal (SIC1-52) is occurs?
No
Yes
Check SIC1 Peripheral circuit.
Track incomming is delayed?
No
Yes
Time out due to many jump counts.
TE is within 2V and 3V?
No
Yes
SIC1-76 output is normal?
No
Yes
Check RIC1-36 terminal.
Pick-up transfer smooth
No
Yes
Check MECHA.
SIC4-28, 29 terminal outputs are normal?
No
Yes
Check SIC4 peripheral circuit.
Check SIC1 peripheral circuit.
Check DCN1 and pick-up.

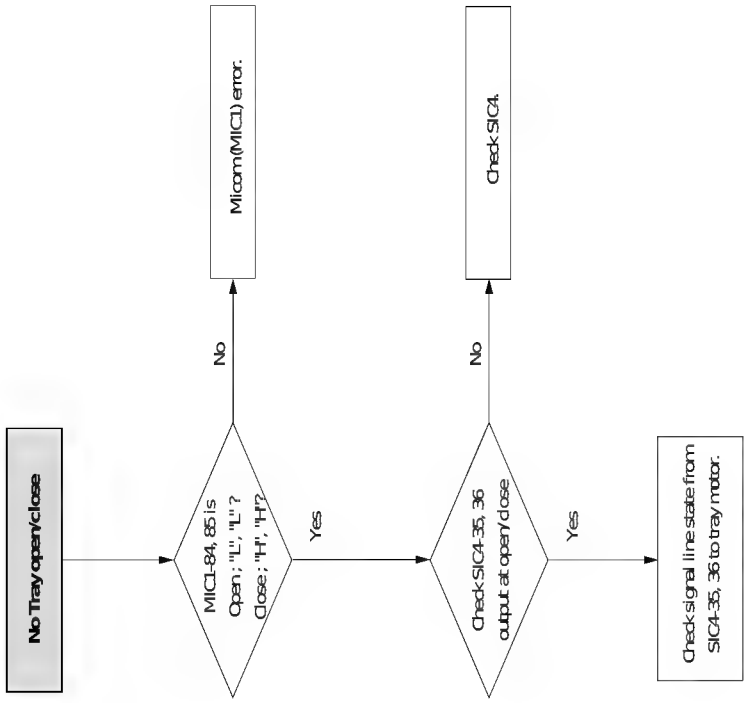
No Tray open/close
MIC1-84, 85 is Open : "L", "L" ? Close : "H", "H"?
No
Micom(MIC1) error.
Yes
Check SIC4-35, 36 output at open/close
No
Check SIC4.
Yes
Check signal line state from SIC4-35, 36 to tray motor.

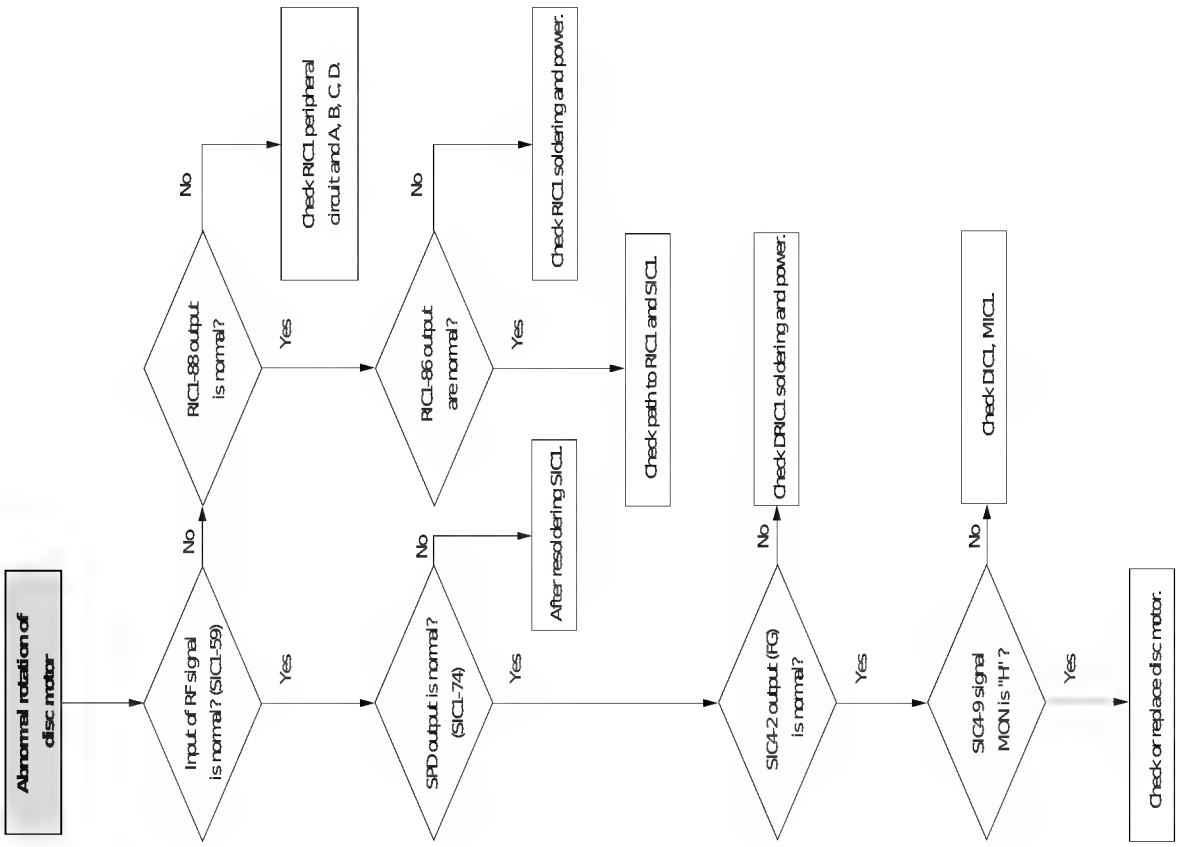
Abnormal rotation of disc motor
Input of RF signal is normal? (SIC1-59)
No
Check RIC1 peripheral circuit and A, B, C, D.
Yes
RIC1-88 output is normal?
No
Check RIC1 soldering and power.
Yes
RIC1-86 output are normal?
No
After resoldering SIC1.
Yes
Check path to RIC1 and SIC1.
SPD output is normal? (SIC1-74)
No
Check DRIC1 soldering and power.
Yes
SIC4-2 output (FG) is normal?
No
Check DIC1, MIC1.
Yes
SIC4-9 signal MON is "H" ?
No
Check or replace disc motor.
Yes

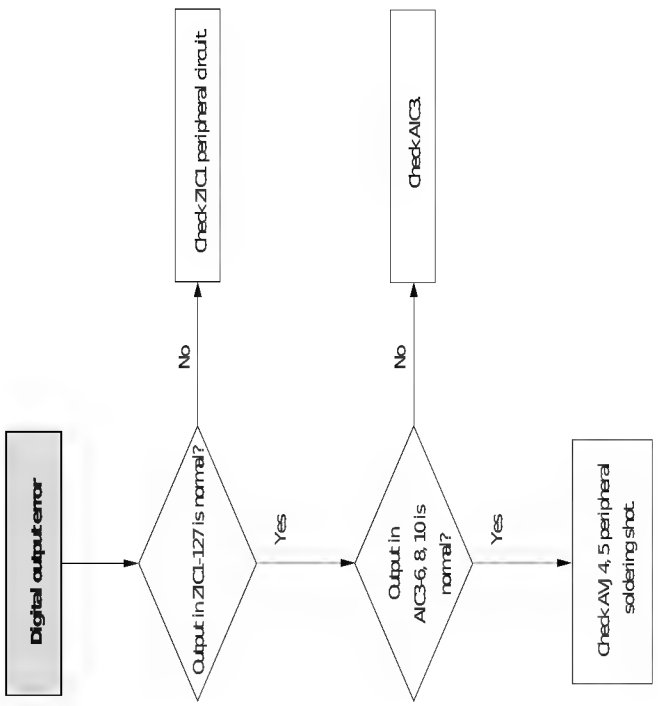
Digital output error
Output in ZIC1-127 is normal?
No
Check ZIC1 peripheral circuit.
Yes
Output in AIC3-6, 8, 10 is normal?
No
Check AIC3.
Yes
Check AVJ 4, 5 peripheral soldering shot.

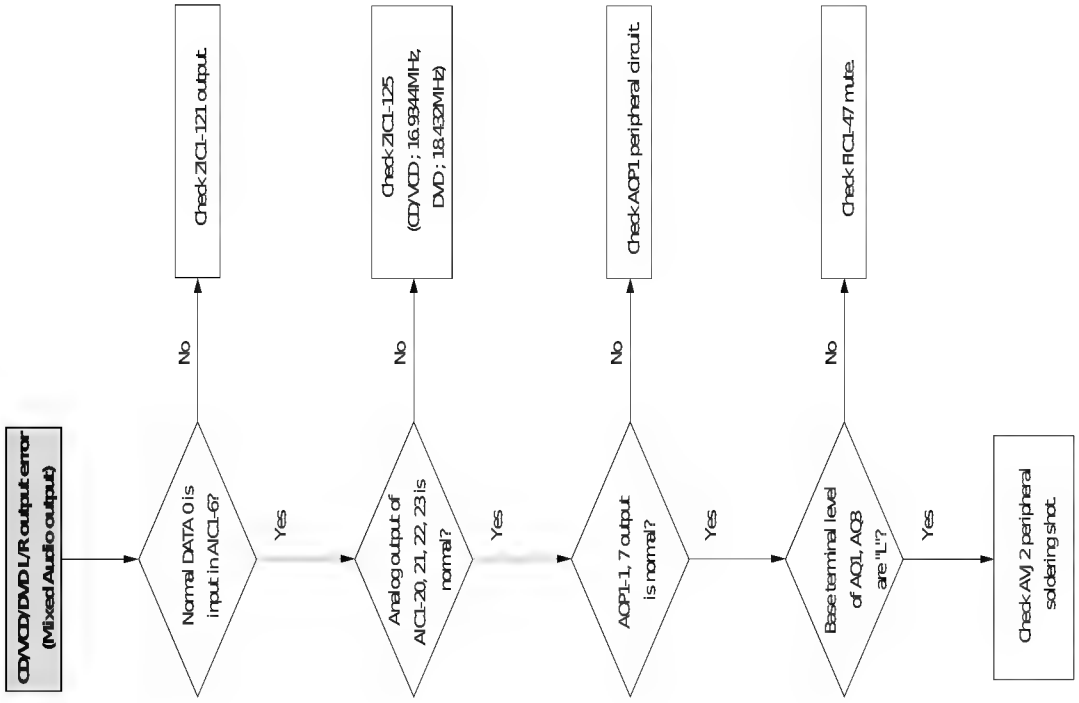
CD/VCD/DMD L/R output error (Mixed Audio output)
Normal DATA 0 is input in AIC1-6?
No
Check ZIC1-121 output.
Yes
Analog output of AIC1-20, 21, 22, 23 is normal?
No
Check ZIC1-125 (CD/VCD : 16.9344MHz, DVD : 18.432MHz)
Yes
AOP1-1, 7 output is normal?
No
Check AOP1 peripheral circuit.
Yes
Base terminal level of AQ1, AQ3 are "L"?
No
Check RC1-47 mute.
Yes
Check AVJ 2 peripheral soldering shot.

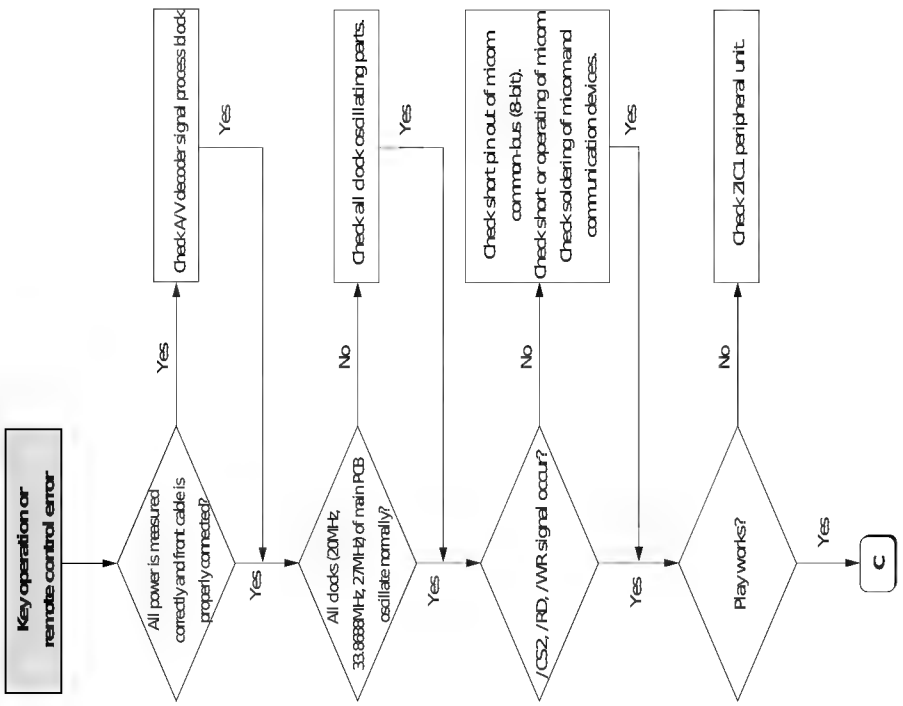
Key operation or remote control error
All power is measured correctly and front cable is properly connected?
Yes
Check A/V decoder signal process block
Yes
All clocks (20MHz, 33.8688MHz, 27MHz) of main PCB oscillate normally?
No
Check all clock oscillating parts.
Yes
/CS2, /RD, /WR signal occur?
No
Check short pin out of micom common-bus (8-bit).
Check short or operating of micom
Check soldering of micom and communication devices.
Yes
Play works?
No
Check ZIC1 peripheral unit.
Yes
C

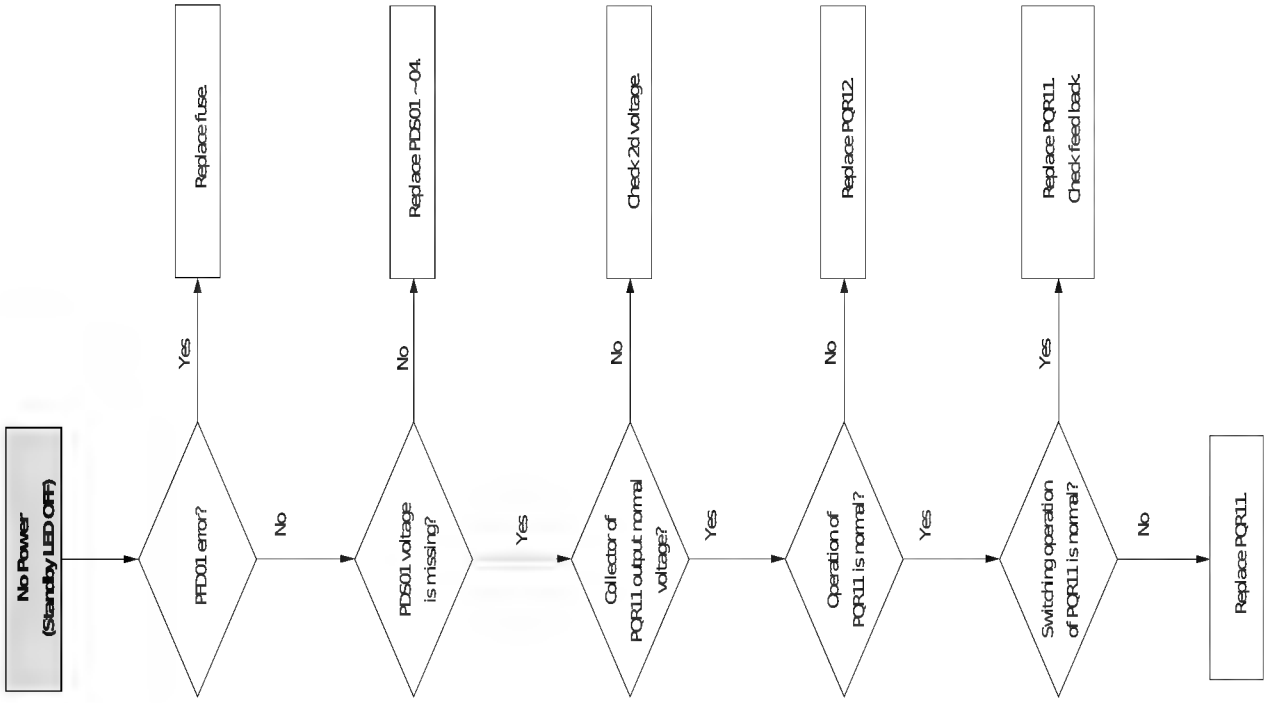
No Power (Standby LED OFF)
PFD01 error?
Yes
Replace fuse.
No
PDS01 voltage is missing?
No
Replace PDS01 ~ 04.
Yes
Collector of PQR11 output normal voltage?
No
Check 2d voltage.
Yes
Operation of PQR11 is normal?
No
Replace PQR12.
Yes
Switching operation of PQR11 is normal?
Yes
Replace PQR11. Check feed back.
No
Replace PQR11.

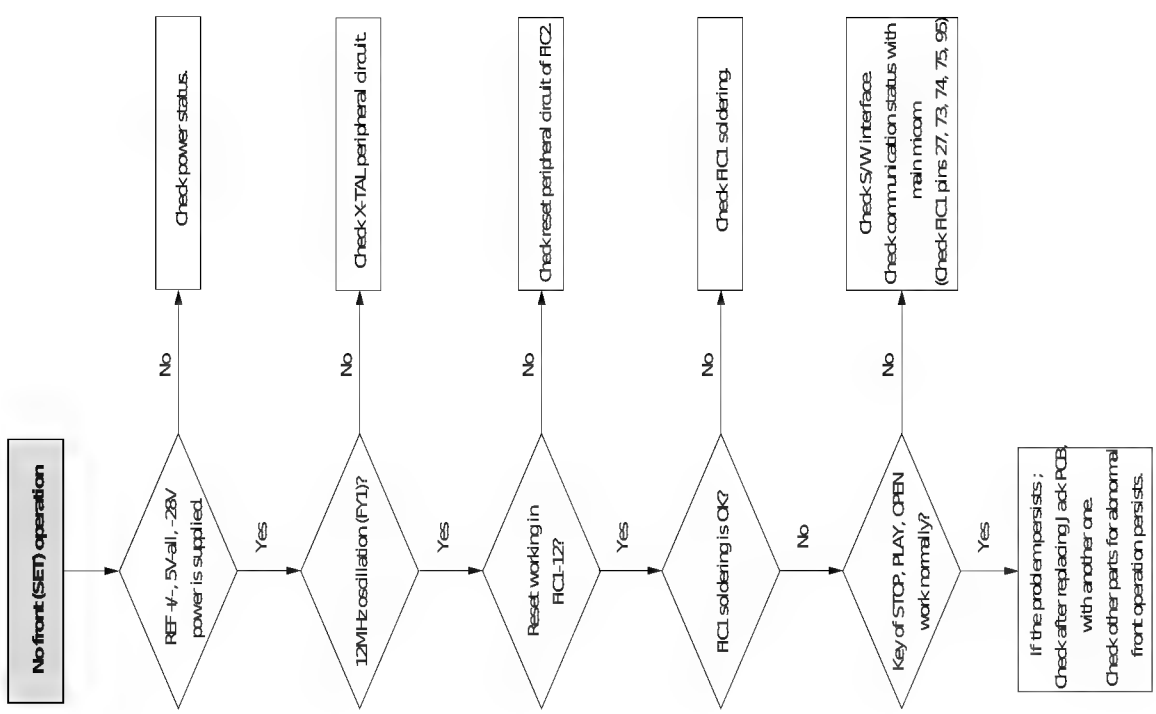
No front (SET) operation
REF +/-, 5V-all, -28V power is supplied.
No
Check power status.
Yes
12MHz oscillation (FR1)?
No
Check X-TAL peripheral circuit
Yes
Reset working in RIC1-12?
No
Check reset peripheral circuit of RIC2
Yes
RIC1 soldering is OK?
No
Check RIC1 soldering.
Key of STOP, PLAY, OPEN work normally?
No
Check S/W interface
Check communication status with main micom
(Check RIC1 pins 27, 73, 74, 75, 95)
Yes
If the problem persists ;
Check after replacing J ack PCB with another one.
Check other parts for abnormal front operation persists.

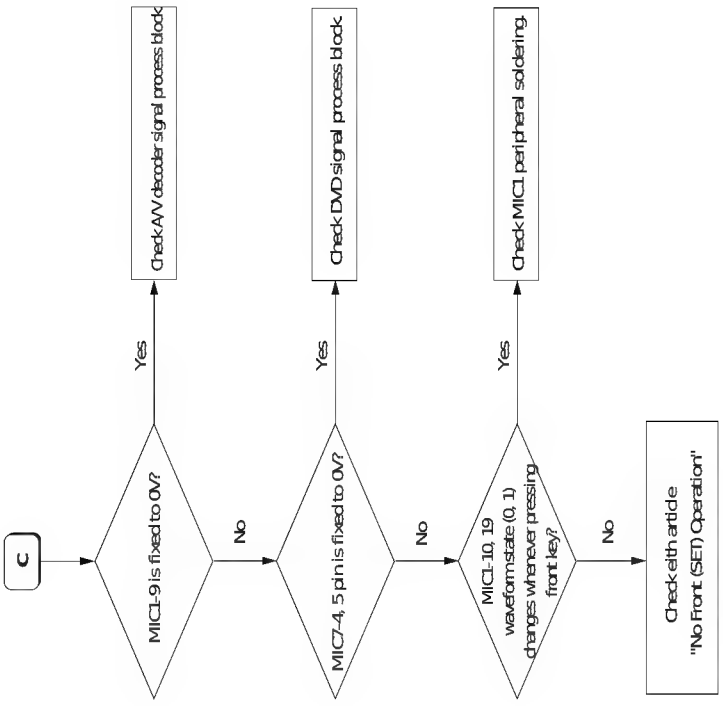
C
MIC1-9 is fixed to 0V?
Yes
Check A/V decoder signal process block
No
MIC7-4, 5 pin is fixed to 0V?
Yes
Check DVD signal process block
No
MIC1-10, 19 waveform state (0, 1) changes whenever pressing front key?
Yes
Check MIC1 peripheral soldering
No
Check with article "No Front (SET) Operation"

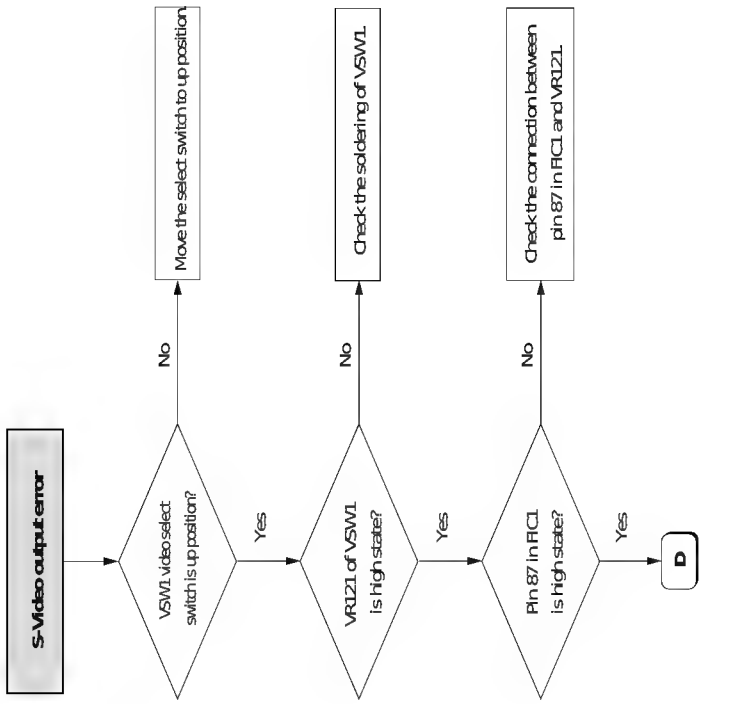
S-Video output error
VSW1 video select switch is up position?
No
Move the select switch to up position
Yes
VR121 of VSW1 is high state?
No
Check the soldering of VSW1
Yes
Pin 87 in RIC1 is high state?
No
Check the connection between pin 87 in RIC1 and VR121
Yes
D

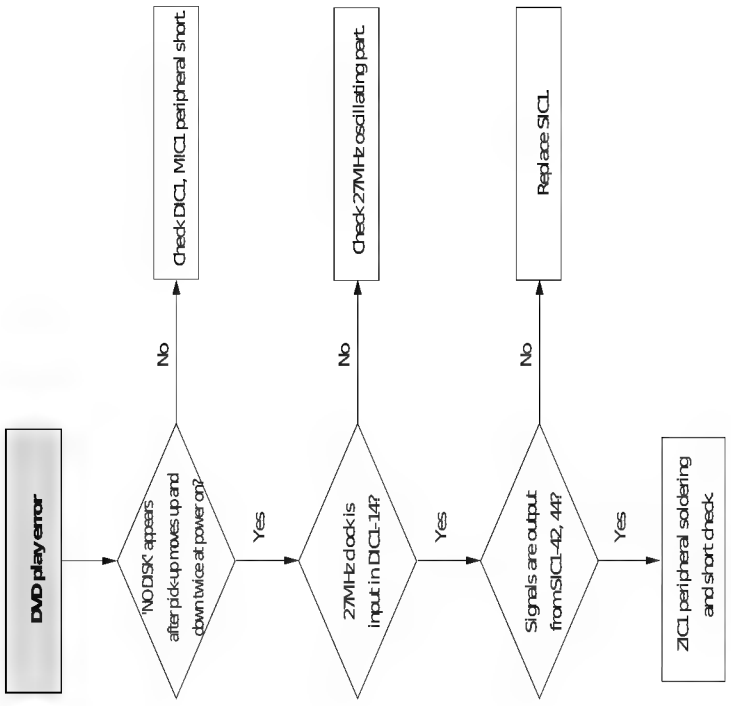
DVD play error
'NO DISK' appears after pick-up moves up and down twice at power on?
No
Check DIC1, MIC1 peripheral short
Yes
27MHz clock is input in DIC1-14?
No
Check 27MHz oscillating part
Yes
Signals are output from SIC1-42, 44?
No
Replace SIC1
Yes
ZIC1 peripheral soldering and short check

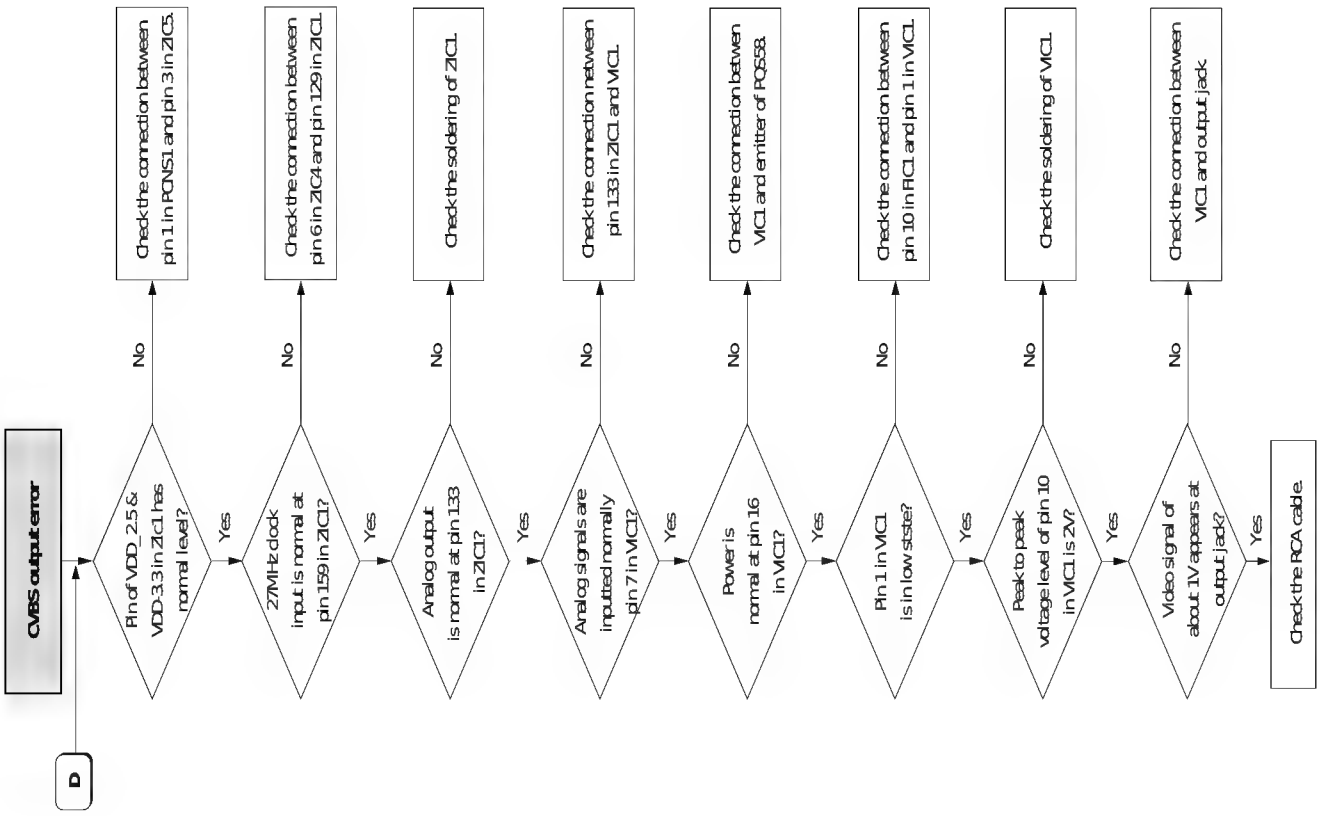
CVBS output error
D
Pin of VDD_2.5 & VDD-3.3 in ZIC1 has normal level?
No
Check the connection between pin 1 in PCN51 and pin 3 in ZIC5.
Yes
27MHz clock input is normal at pin 159 in ZIC1?
No
Check the connection between pin 6 in ZIC4 and pin 129 in ZIC1.
Yes
Analog output is normal at pin 133 in ZIC1?
No
Check the soldering of ZIC1.
Yes
Analog signals are inputted normally pin 7 in VIC1?
No
Check the connection netween pin 133 in ZIC1 and VIC1.
Yes
Power is normal at pin 16 in VIC1?
No
Check the connection between VIC1 and emitter of PQ558.
Yes
Pin 1 in VIC1 is in low stste?
No
Check the connection between pin 10 in RIC1 and pin 1 in VIC1.
Yes
Peak to peak voltage level of pin 10 in VIC1 is 2V?
No
Check the soldering of VIC1.
Yes
Video signal of about 1V appears at output jack?
No
Check the connection between VIC1 and output jack.
Yes
Check the RCA cable.
Y/Pr/Pb output error
VSW1 video select switch is down position?
No
Move the select switch to down position.
Yes
VR121 of VSW1 is low state?
No
Check the soldering of VSW1.
Yes
Pin 87 in RIC1 is High state?
No
Check the connection between pin 87 in RIC1 and VR121.
Yes
D

MEMO

7. Exploded View and Parts List

Page

7-1 Cabinet Assembly (DVD-611) - 7-2

7-2 Cabinet Assembly (DVD-511) - 7-4

7-3 Deck Assembly - 7-6

7-1 Cabinet Assembly (DVD-611)

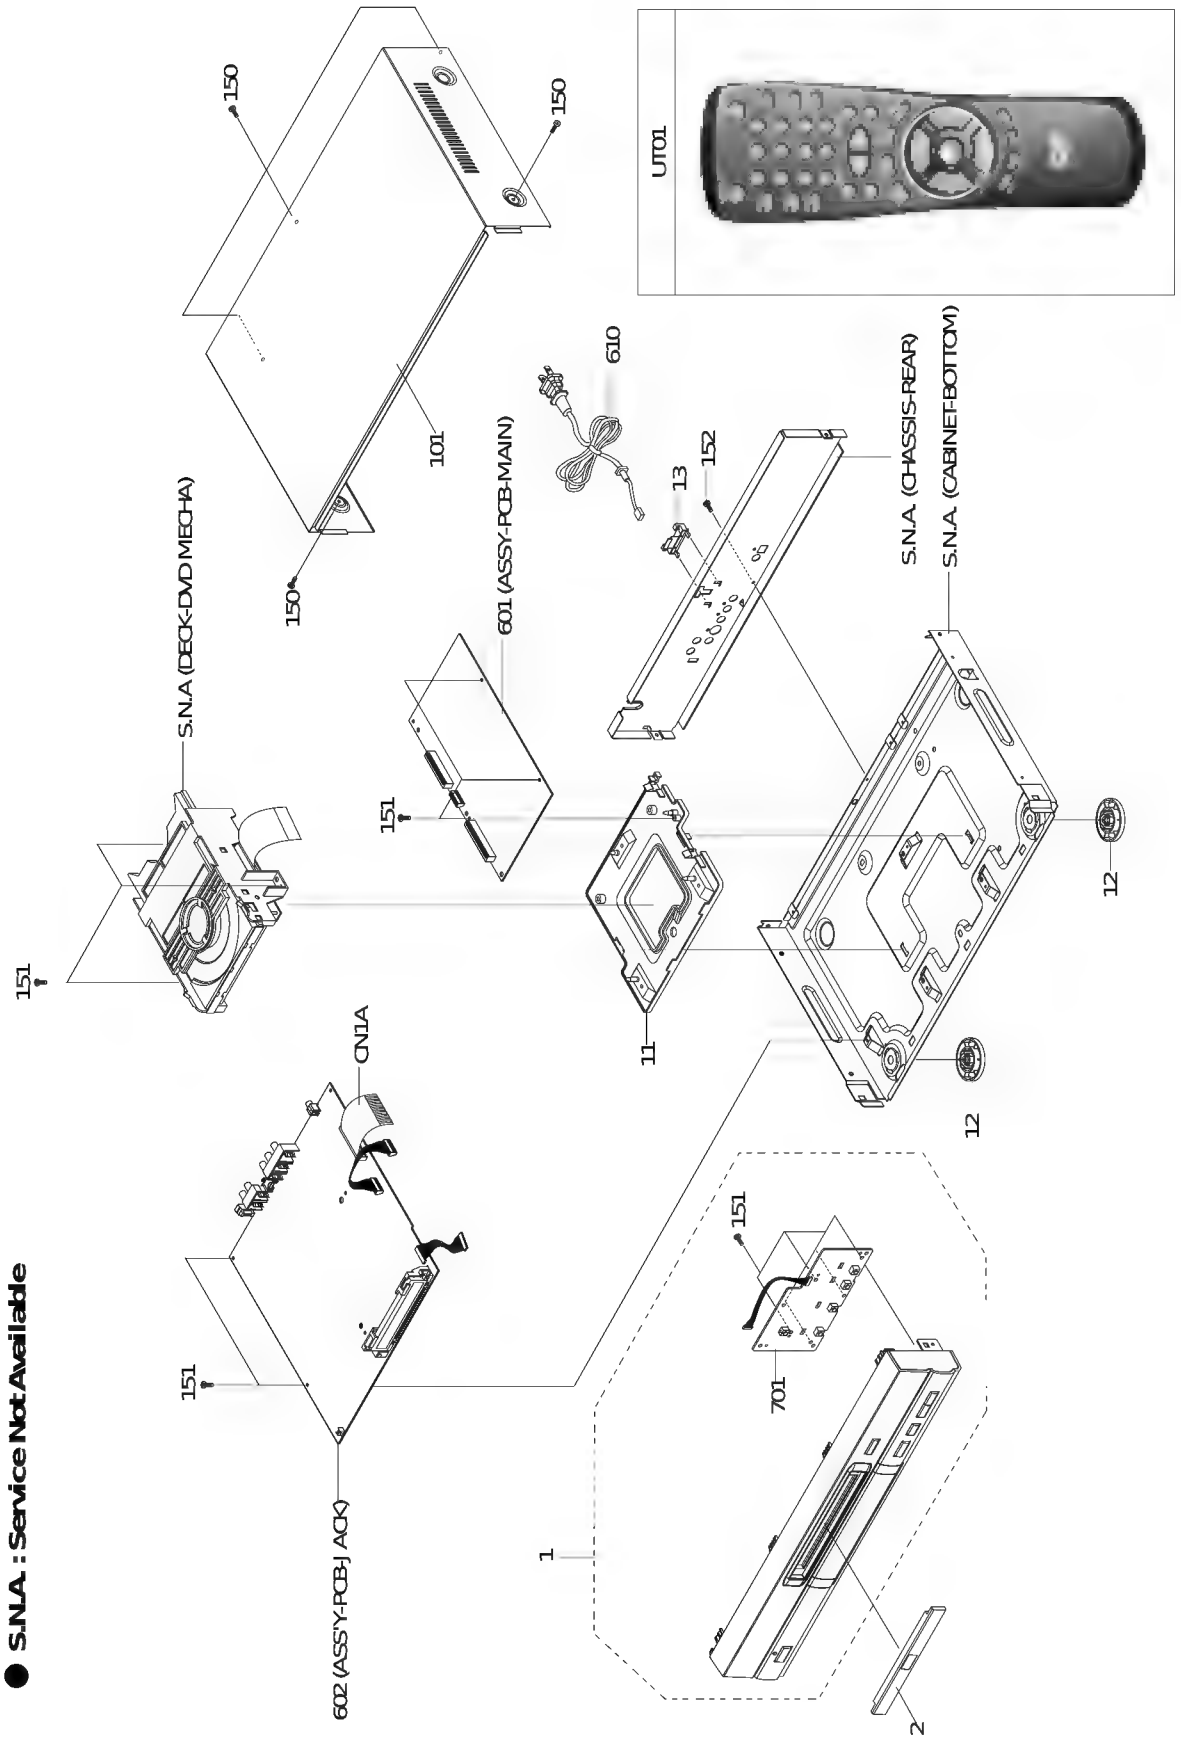

Loc. No	Parts No.	Description ; Specification	Remark
1	AH97-00359A	ASSY FRONT CABINET;DVD-611/XAA,ASSY,XAA	
2	AH97-00364A	ASSY-DOOR;DVD-611,ASS'Y,-	
11	AH61-00301A	HOLDER-DECK;-,HIPS94V2,-,BLK,-,DVD-811	
12	AH64-80001E	FOOT-FRONT;-,ABS94,HB,T2,SIL,H/STAMP,DVD	
13	AH61-00303A	HOLDER-CORD POWER;-,ABS 94HB,-,BLK,-,DVD	
101	AH64-00489A	CABINET TOP;-,PCM T0.65,-,-,-,BLK,-,DVD-	
150	6003-000275	SCREW-TAPTITE;BH,+,B,M3,L10,BLK,SWCH1018	
151	6003-000276	SCREW-TAPTITE;BH,+,B,M3,L10,ZPC(YEL),SWC	
152	6003-000282	SCREW-TAPTITE;BH,+,B,M3,L8,ZPC(BLK),SWCH	
601	AH92-00337B	ASSY PCB-MAIN;DVD-611/XAA,MAIN PCB	
602	AH92-00338D	ASSY PCB-JACK;DVD-611/XAA,JACK PCB	
610	AC39-10200N	POWER-CORD;EP2,SPT-2,AWG#18,1.8MT,WAFER,	
701	AH92-00583A	ASSY PCB-KEY;DVD-611/XAA,KEY PCB	
CN1A	3809-001180	CABLE-FLAT;30V,-30to+80C,80mm,35P,1.25mm	
UT01	AH59-00056A	REMOCON-ASS'Y;-,-,-,-,DVD-611,XAA	

7-2 Cabinet Assembly (DVD-511)

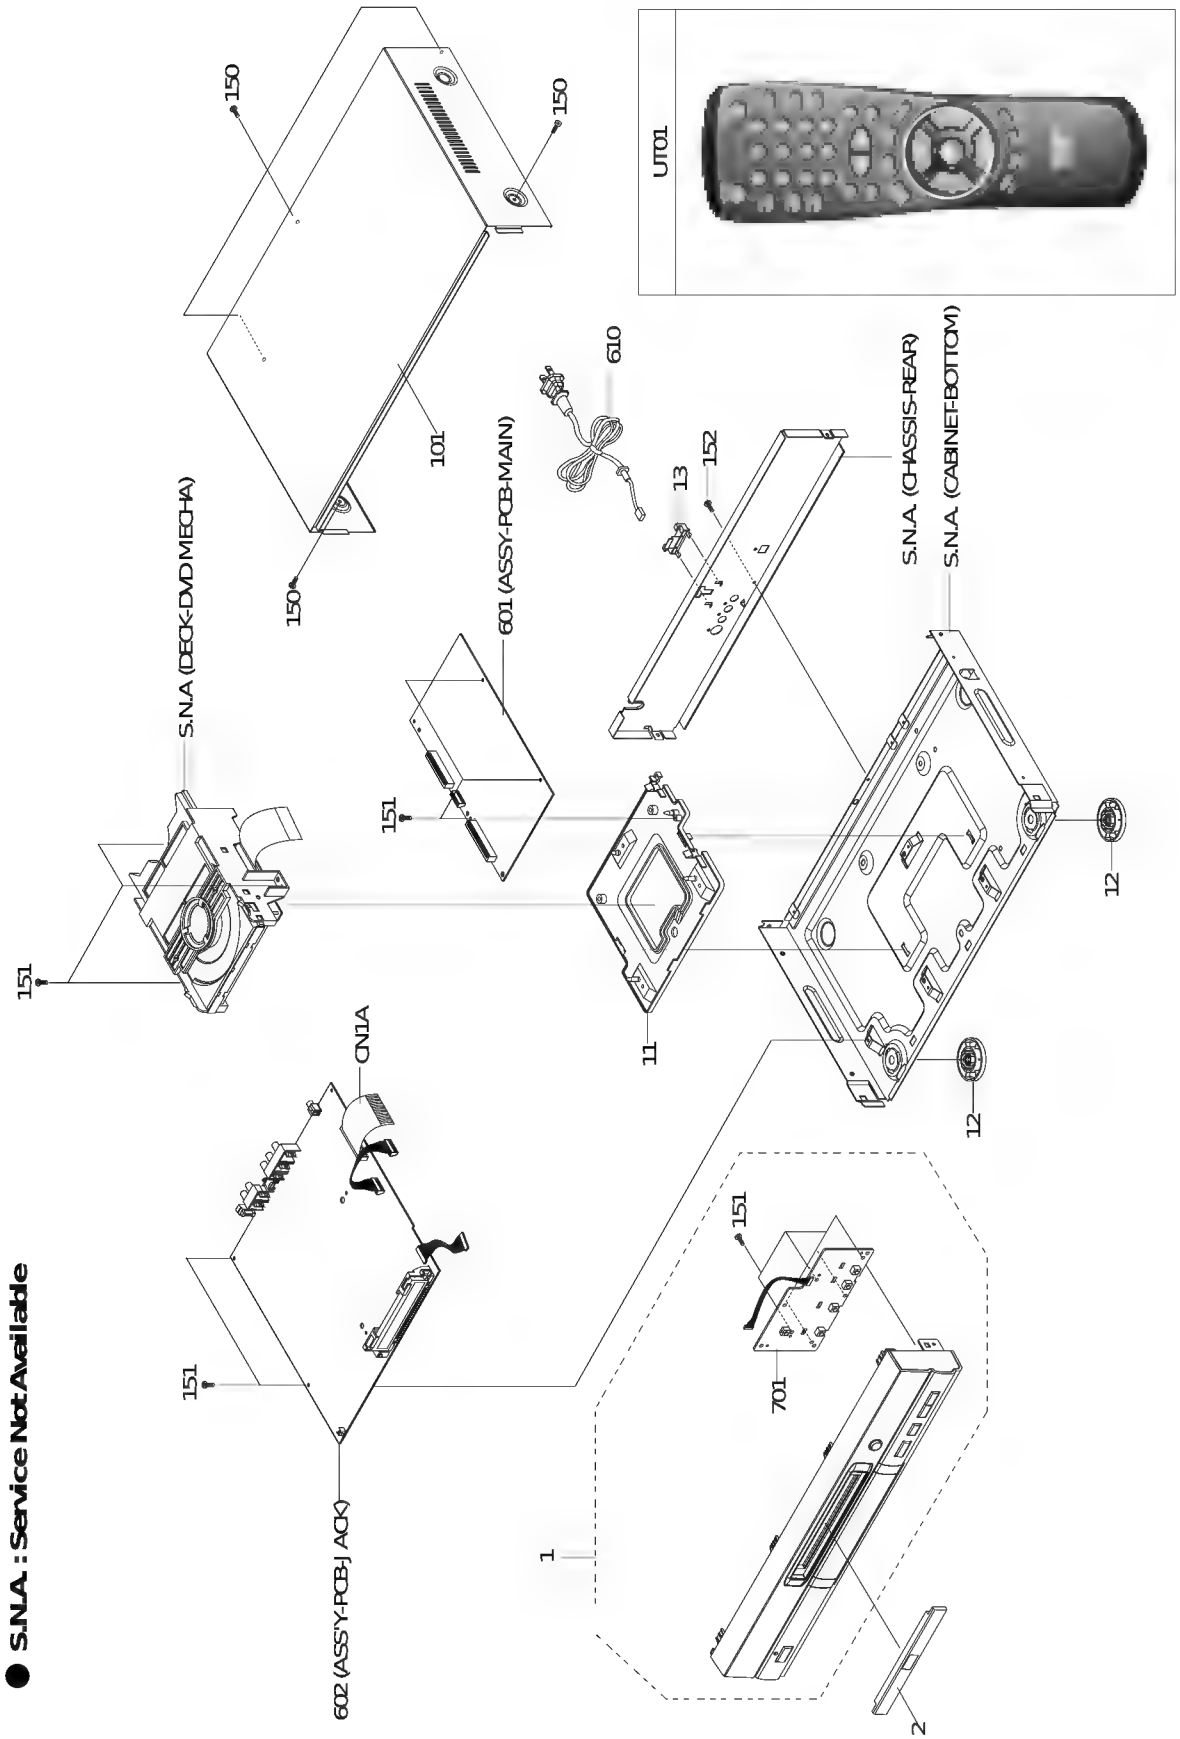

Loc. No	Parts No.	Description ; Specification	Remark
1	AH97-00360A	ASSY FRONT CABINET;DVD-610/XAA,ASSY,XAA	
2	AH97-00365A	ASSY-DOOR;DVD-610,ASS'Y,-	
11	AH61-00301A	HOLDER-DECK;-,HIPS94V2,-,BLK,-,DVD-811	
12	AH64-80001E	FOOT-FRONT;-,ABS94,HB,T2,SIL,H/STAMP,DVD	
13	AH61-00303A	HOLDER-CORD POWER;-,ABS 94HB,-,BLK,-,DVD	
101	AH64-00489A	CABINET TOP;-,PCM T0.65,-,-,-,BLK,-,DVD-	
150	6003-000275	SCREW-TAPTITE;BH,+,B,M3,L10,BLK,SWCH1018	
151	6003-000276	SCREW-TAPTITE;BH,+,B,M3,L10,ZPC(YEL),SWC	
152	6003-000282	SCREW-TAPTITE;BH,+,B,M3,L8,ZPC(BLK),SWCH	
601	AH92-00337B	ASSY PCB-MAIN;DVD-611/XAA,MAIN PCB	
602	AH92-00338E	ASSY PCB-JACK;DVD-511/XAA,JACK PCB	
610	AC39-10200N	POWER-CORD;EP2,SPT-2,AWG#18,1.8MT,WAFER,	
701	AH92-00582A	ASSY PCB-KEY;DVD-511/XAA,KEY PCB	
CN1A	3809-001180	CABLE-FLAT;30V,-30to+80C,80mm,35P,1.25mm	
UT01	AH59-00056A	REMOCON-ASS'Y;-,-,-,-,DVD-611,XAA	

7-3 Deck Assembly

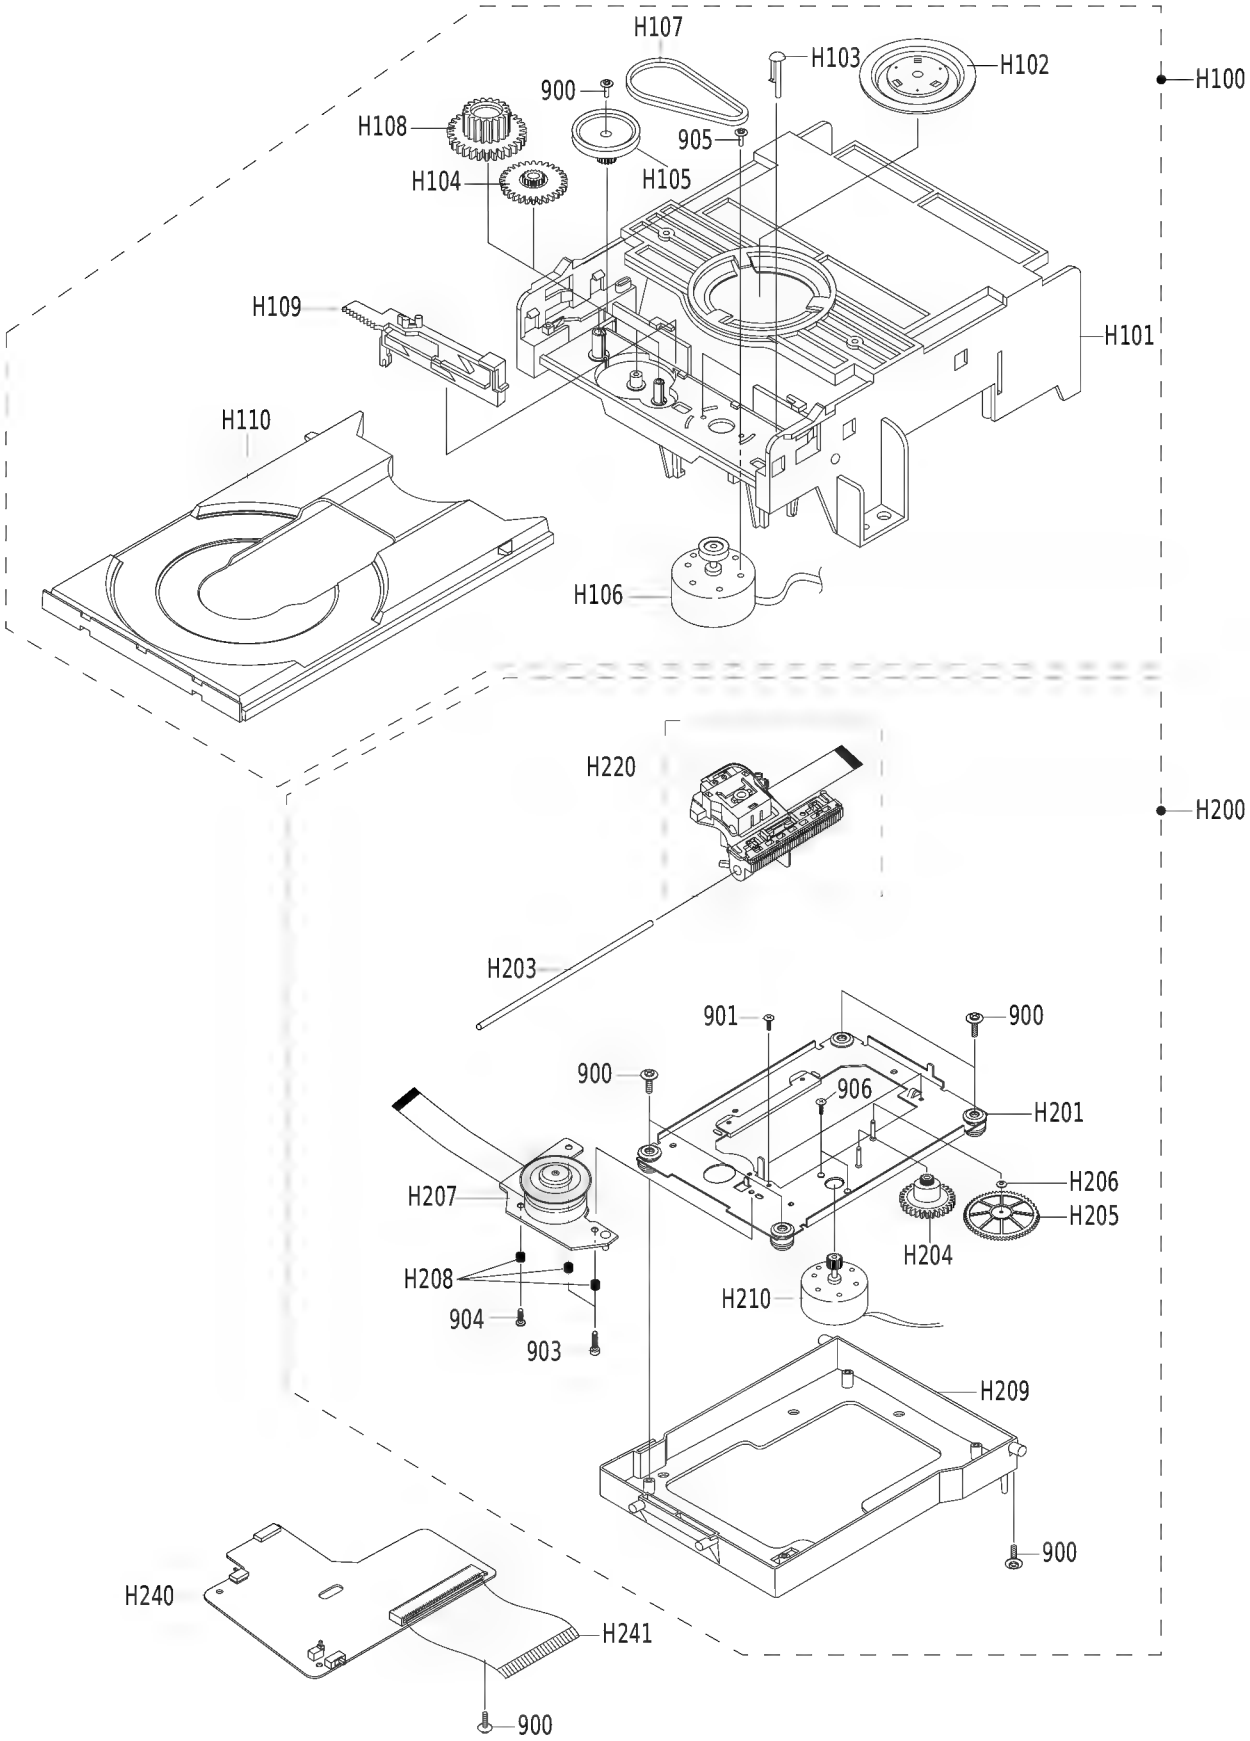

Loc. No	Parts No.	Description ; Specification	Remark
900	6003-001157	SCREW-TAPTITE;PW H,+,B,M 2,L6,ZPC(YEL),SW R	
901	6001-001332	SCREW-M ACHINE;FH,+,M 2,L8,ZPC(YEL),SW RCH1	
903	6001-001333	SCREW-M ACHINE;SOCKET,HEX,M 2.6,L8,ZPC(YEL	
904	6001-001196	SCREW-M ACHINE;BH,+-,M 2,L4,ZPC(YEL),SW RCH	
905	BG60-10020A	SCREW-SP M OTOR;-,BHW TOOTH,-,-M 1.7,L3-	
906	AH60-00010A	SCREW-M ACHINE-M OTOR;-,+SW CH18AK,M 1.7,L2	
H100	AH61-00391A	HOUSING-ASSY;DP-5,ABS+POM ,-,-,-,-,-,-,-,	
H101	AH61-00272A	CHASSIS-HOUSING;-,ABS(SR-0320),-,-,-,-,B	
H102	AH66-00111A	CLAM PER-ASSY;DP-5,POM +M AGNET,-,-,-,DP-5	
H103	AH66-00080A	LEVER-S/W ;W HITE,-,-,-,-,-,-,-	
H104	AH66-00074A	GEAR-HOUSING;-,POM M 90-44,-,-,-,-,-,-,-,	
H105	AH66-00072A	PULLEY-GEAR;-,POM M 90-44,-,-,-	
H106	AH31-00015A	M OTOR-LOAD ASSY;-,DP-5,-,-	
H107	AH66-00112A	BELT-PULLEY;-,CR,T1.5,ID30,-,-,DP-5	
H108	AH66-00073A	GEAR-TRAY;-,POM M 90-44,-,-,-,-,-,-,-,-	
H109	AH66-00079A	SLIDER-HOUSING;DP-5,-,-,-,PBT #2002K,-	
H110	AH66-00081A	TRAY-DISC;-,ABS(GF) VG4820,-,BLK,-,DP-5	
H200	AH97-00369A	ASSY-P/U DECK;DP-5,-,-	
H201	AH97-00410A	ASSY-BRKT-SUB;SECC+RUBBER+M OTOR,DP-5,-	
H203	AH61-50327A	SHAFT-P/U;DP,SUS420J 2,OD3,L84.7,S/FINISH	
H204	AH66-00075A	GEAR-FEED A;-,POM M 90-44,-,-,-,-,-,-,-,-	
H205	AH66-00076A	GEAR-FEED B;-,POM M 90-44,-,-,-,-,-,-,-,-	
H206	AC60-30306A	W ASHER-SLIT;-,-,ID2.1,OD5.0,T0.5,-,POLYS	
H207	AH31-00017A	M OTOR-SPINDLE ASSY;-,DP-5,-,-	
H208	AH61-00403A	SPRING-SPINDLE;-,SW PB,-,CS,PI4.9,PI0.7,-	
H209	AH61-00273A	CHASSIS-SUB;-,ABS(SR-0320),-,-,-,-,BLK,-	
H210	AH31-00016A	M OTOR-FEED ASSY;-,DP-5,-,-	
H220	AH30-00008A	PICK UP-ASSY;VALINO(1LD)	
H240	AH92-00608A	ASSY PCB-DECK;VALINO DECK 1L	
H241	3809-001181	CABLE-FLAT;30V,-30to+80C,80mm,40P,1.25mm	

MEMO

8. Electrical Parts List

Loc.No	Part No	Description ; Specification	Remark
601	**AH92-00337B**	**ASSY PCB-MAIN;DVD-611,MAIN PCB**	**DVD-611/511**
CN8	3708-001364	CONNECTOR-FPC/FC/PIC;35P,1.25MM,STRAIGHT	
DC1	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
DC10	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC12	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC13	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC14	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC15	2203-001640	C-CERAMIC,CHIP;0.39nF,10%,50V,X7R,TP,160	
DC16	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC2	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
DC23	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC24	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC3	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC4	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC5	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC7	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DCN1	3708-001085	CONNECTOR-FPC/FC/PIC;40P,1.25mm,STRAIGHT	
DIC1	AH13-10030P	IC-ASIC;-,KS1453,TQFP,128P,DATA PRO.I	
DIC2	1105-001233	IC-DRAM;416C256,256KX16BIT,SOJ,40P,400MI	
DIC3	0801-002097	IC-CMOS LOGIC;7SET08,AND GATE,SOP,5P,110	
DR1	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR16	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR17	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR18	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
DR19	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
DR2	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR20	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
DR21	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
DR22	2007-000109	R-CHIP;1Mohm,5%,1/16W,DA,TP,1608	
DR3	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR4	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR5	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR7	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR8	2011-000816	R-NETWORK;100ohm,5%,63mW,L,CHIP,8P,TP	
DR9	2011-000816	R-NETWORK;100ohm,5%,63mW,L,CHIP,8P,TP	
MC1	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC10	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC11	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
MC12	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC13	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC14	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC15	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC16	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC17	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC2	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC3	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
MC4	2203-000426	C-CERAMIC,CHIP;0.018nF,5%,50V,NP0,TP,160	
MC5	2203-000426	C-CERAMIC,CHIP;0.018nF,5%,50V,NP0,TP,160	
MC6	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC7	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
MC8	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC9	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MIC1	0903-001185	IC-MICROCONTROLLER;95C265,16Bit,LQFP,100	
MIC2	1102-001090	IC-EPROM;27C081,1MX8BIT,DIP,32P,600MIL,1	
MIC3	1106-000401	IC-SRAM;681000,128Kx8BIT,SOP,32P,525MI	
MIC4	1103-001133	IC-EEPROM;24C020,256x8BIT,SOP,8P,150MIL,	
MIC5	0801-002097	IC-CMOS LOGIC;7SET08,AND GATE,SOP,5P,110	
MIC6	0801-000411	IC-CMOS LOGIC;74HC32,OR GATE,SOP,14P,150	
MIC7	0801-002517	IC-CMOS LOGIC;7SET00,NAND GATE,SOP,5P,63	
MIC8A	3704-000472	SOCKET-IC;32P,DIP,SN,2.54mm	
MR1	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
MR10	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR11	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR12	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR13	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR14	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR15	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR2	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR3	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR4	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR5	2007-000109	R-CHIP;1Mohm,5%,1/16W,DA,TP,1608	
MR6	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
MR7	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
MR8	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
MR9	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MY1	2801-000199	CRYSTAL-UNIT;20MHz,50ppm,28-AAA,16pF,50o	
PC1	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
PC2	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
PC3	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
PC4	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
PCN1	3711-003358	CONNECTOR-HEADER;BOX,8P,1R,2.5mm,STRAIGH	
PE1	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
PE2	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
PE3	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
PE4	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
RC1	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC10	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
RC11	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC12	2203-000560	C-CERAMIC,CHIP;220nF,+80-20%,25V,Y5V,TP,	
RC13	2203-000560	C-CERAMIC,CHIP;220nF,+80-20%,25V,Y5V,TP,	
RC14	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC16	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC17	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC2	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC20	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC21	2203-000384	C-CERAMIC,CHIP;0.015nF,5%,50V,NP0,TP,160	
RC22	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC23	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC24	2203-001697	C-CERAMIC,CHIP;0.082nF,5%,50V,NP0,TP,160	
RC25	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC26	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC27	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC28	2203-001052	C-CERAMIC,CHIP;0.56nF,10%,50V,X7R,TP,160	
RC29	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC3	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC30	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC32	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC33	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC34	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC35	2203-000236	C-CERAMIC,CHIP;0.1nF,5%,50V,NP0,TP,1608	
RC36	2203-000140	C-CERAMIC,CHIP;1.5nF,10%,50V,X7R,TP,1608	
RC39	2203-000531	C-CERAMIC,CHIP;2.7nF,10%,50V,X7R,TP,1608	
RC40	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
RC41	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC42	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC43	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC44	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
RC45	2203-001652	C-CERAMIC,CHIP;470nF,+80-20%,16V,Y5V,TP,	
RC46	2203-001652	C-CERAMIC,CHIP;470nF,+80-20%,16V,Y5V,TP,	
RC47	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC48	2203-001652	C-CERAMIC,CHIP;470nF,+80-20%,16V,Y5V,TP,	
RC50	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC51	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	

Loc.No	Part No	Description ; Specification	Remark
RC52	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC53	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC54	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC55	2203-000888	C-CERAMIC,CHIP;4.7nF,10%,50V,X7R,TP,1608	
RC56	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
RC6	2203-001052	C-CERAMIC,CHIP;0.56nF,10%,50V,X7R,TP,160	
RC7	2203-001640	C-CERAMIC,CHIP;0.39nF,10%,50V,X7R,TP,160	
RC8	2203-000384	C-CERAMIC,CHIP;0.015nF,5%,50V,NP0,TP,160	
RC9	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
RD1	0401-000008	DIODE-SWITCHING;DAN217,80V,100mA,SOT-23,	
RD2	0403-001079	DIODE-ZENER;UDZ3.9B,7%,200MW,SOD-323,TP	
RD3	0401-000008	DIODE-SWITCHING;DAN217,80V,100mA,SOT-23,	
RD6	0407-000114	DIODE-ARRAY;DAN202K,80V,100mA,CA2-3,SOT-	
RE11	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11mm,2.5m	
RE12	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
RE13	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
RE14	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11mm,2.5m	
RE17	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
RE2	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
RE8	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
RE9	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
RIC1	AH13-10030Y	IC ASIC;-,KS1461,VQFP,100pin,RF IC	
RIC3	1202-000121	IC-VOLTAGE COMP;2903,SOP,8P,150MIL,DUAL	
RL2	2703-000398	INDUCTOR-SMD;10uH,10%,3.2x2.5x2.2mm	
RL3	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
RL4	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
RL5	2703-000398	INDUCTOR-SMD;10uH,10%,3.2x2.5x2.2mm	
RQ1	0501-000279	TR-SMALL SIGNAL;KSA1182-Y,PNP,150mW,SOT-	
RQ2	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
RQ3	0501-000279	TR-SMALL SIGNAL;KSA1182-Y,PNP,150mW,SOT-	
RR1	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
RR10	2007-001179	R-CHIP;8.2Kohm,5%,1/16W,DA,TP,1608	
RR11	2007-000512	R-CHIP;2.4Kohm,5%,1/16W,DA,TP,1608	
RR12	2007-000093	R-CHIP;20Kohm,5%,1/16W,DA,TP,1608	
RR13	2007-001179	R-CHIP;8.2Kohm,5%,1/16W,DA,TP,1608	
RR14	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
RR15	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR16	2007-000704	R-CHIP;3.6Kohm,5%,1/16W,DA,TP,1608	
RR17	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR18	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR19	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR2	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
RR20	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
RR21	2007-000704	R-CHIP;3.6Kohm,5%,1/16W,DA,TP,1608	
RR22	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR23	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR24	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
RR25	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR28	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
RR29	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
RR3	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
RR30	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
RR31	2007-001179	R-CHIP;8.2Kohm,5%,1/16W,DA,TP,1608	
RR32	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR33	2007-000082	R-CHIP;3.3Kohm,5%,1/16W,DA,TP,1608	
RR34	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
RR35	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR36	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR37	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR38	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR39	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR4	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
RR40	2007-000655	R-CHIP;27Kohm,5%,1/16W,DA,TP,1608	
RR41	2007-000708	R-CHIP;3.9Kohm,1%,1/16W,DA,TP,1608	
RR43	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
RR44	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
RR45	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
RR46	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
RR47	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR48	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR49	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
RR5	2104-001068	VR-SMD;10Kohm,25%,1/20W,TOP	
RR50	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
RR51	2007-000134	R-CHIP;33Kohm,5%,1/16W,DA,TP,1608	
RR52	2007-000077	R-CHIP;470ohm,5%,1/16W,DA,TP,1608	
RR53	2007-000312	R-CHIP;10OHM,5%,1/8W,DA,TP,3216	
RR57	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
RR58	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR59	2007-000082	R-CHIP;3.3Kohm,5%,1/16W,DA,TP,1608	
RR6	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR62	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
RR65	2007-000082	R-CHIP;3.3Kohm,5%,1/16W,DA,TP,1608	
RR68	2007-000130	R-CHIP;39Kohm,5%,1/16W,DA,TP,1608	
RR69	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
RR7	2007-000072	R-CHIP;47ohm,5%,1/16W,DA,TP,1608	
RR70	2007-000134	R-CHIP;33Kohm,5%,1/16W,DA,TP,1608	
RR72	2007-000103	R-CHIP;120Kohm,5%,1/16W,DA,TP,1608	
RR8	2007-000077	R-CHIP;470ohm,5%,1/16W,DA,TP,1608	
RR80	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
RR81	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
RR82	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
RR83	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
RR85	2007-000108	R-CHIP;510Kohm,5%,1/16W,DA,TP,1608	
RR86	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR87	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
RR9	2007-000312	R-CHIP;10OHM,5%,1/8W,DA,TP,3216	
SC1	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
SC10	2203-001222	C-CERAMIC,CHIP;820pF,10%,50V,X7R,TP,1608	
SC11	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC14	2203-000491	C-CERAMIC,CHIP;2.2nF,10%,50V,X7R,TP,1608	
SC15	2203-001052	C-CERAMIC,CHIP;0.56nF,10%,50V,X7R,TP,160	
SC16	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC17	2203-000560	C-CERAMIC,CHIP;220nF,+80-20%,25V,Y5V,TP,	
SC18	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC19	2203-000140	C-CERAMIC,CHIP;1.5nF,10%,50V,X7R,TP,1608	
SC2	2203-001573	C-CERAMIC,CHIP;0.012nF,5%,50V,NP0,TP,160	
SC26	2203-002398	C-CERAMIC,CHIP;22nF,10%,50V,X7R,TP,1608	
SC29	2203-000372	C-CERAMIC,CHIP;15nF,10%,50V,X7R,TP,1608,	
SC3	2203-001573	C-CERAMIC,CHIP;0.012nF,5%,50V,NP0,TP,160	
SC30	2203-000372	C-CERAMIC,CHIP;15nF,10%,50V,X7R,TP,1608,	
SC31	2203-000491	C-CERAMIC,CHIP;2.2nF,10%,50V,X7R,TP,1608	
SC32	2203-000491	C-CERAMIC,CHIP;2.2nF,10%,50V,X7R,TP,1608	
SC33	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC36	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC38	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC40	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC41	2203-000560	C-CERAMIC,CHIP;220nF,+80-20%,25V,Y5V,TP,	
SC44	2203-002398	C-CERAMIC,CHIP;22nF,10%,50V,X7R,TP,1608	
SC49	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC50	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC51	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC52	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC53	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
SC55	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC57	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC58	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC59	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC6	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC60	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC61	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC62	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC64	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	

Loc.No	Part No	Description ; Specification	Remark
SC65	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
SC66	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
SC68	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC7	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC9	2203-000560	C-CERAMIC,CHIP;220nF,+80-20%,25V,Y5V,TP,	
SD2	0407-000114	DIODE-ARRAY;DAN202K,80V,100mA,CA2-3,SOT-	
SD3	0407-000114	DIODE-ARRAY;DAN202K,80V,100mA,CA2-3,SOT-	
SE1	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
SE2	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
SE3	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
SE5	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11mm,2.5m	
SE53	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
SE54	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
SE55	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
SE56	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
SE63	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
SIC1	AH13-10030N	IC-ASIC;-,KS1452,QFP,80P,DSSP IC	
SIC3	0801-002097	IC-CMOS LOGIC;7SET08,AND GATE,SOP,5P,110	
SIC4	1003-001298	IC-MOTOR DRIVER;KA3017,HQFP,48P,550MIL,1	
SIC8	AH14-10004T	IC-ANALOG M/PLEXER;MC14053BD,SOP,TAPE 16	
SL2	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
SL4	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
SQ1	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
SQ2	0504-000156	TR-DIGITAL;DTA124EKA,PNP,200mW,22K-22K	
SR1	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR10	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
SR11	2007-000107	R-CHIP;470Kohm,5%,1/16W,DA,TP,1608	
SR12	2007-001235	R-CHIP;910Kohm,5%,1/16W,DA,TP,1608	
SR14	2007-000450	R-CHIP;180ohm,5%,1/16W,DA,TP,1608	
SR15	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
SR16	2007-000131	R-CHIP;91Kohm,5%,1/16W,DA,TP,1608	
SR17	2007-000081	R-CHIP;2.7Kohm,5%,1/16W,DA,TP,1608	
SR18	2007-000093	R-CHIP;20Kohm,5%,1/16W,DA,TP,1608	
SR19	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
SR2	2007-000109	R-CHIP;1Mohm,5%,1/16W,DA,TP,1608	
SR20	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
SR21	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
SR22	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
SR23	2007-000130	R-CHIP;39Kohm,5%,1/16W,DA,TP,1608	
SR24	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
SR26	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
SR3	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR32	2007-000080	R-CHIP;2Kohm,5%,1/16W,DA,TP,1608	
SR33	2007-000080	R-CHIP;2Kohm,5%,1/16W,DA,TP,1608	
SR34	2007-000124	R-CHIP;2.2Kohm,5%,1/16W,DA,TP,1608	
SR35	2007-000124	R-CHIP;2.2Kohm,5%,1/16W,DA,TP,1608	
SR36	2007-000124	R-CHIP;2.2Kohm,5%,1/16W,DA,TP,1608	
SR37	2007-000124	R-CHIP;2.2Kohm,5%,1/16W,DA,TP,1608	
SR38	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
SR39	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR4	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR40	2007-000101	R-CHIP;82Kohm,5%,1/16W,DA,TP,1608	
SR41	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
SR42	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR43	2007-000106	R-CHIP;220Kohm,5%,1/16W,DA,TP,1608	
SR44	2007-000098	R-CHIP;56Kohm,5%,1/16W,DA,TP,1608	
SR45	2007-000655	R-CHIP;27Kohm,5%,1/16W,DA,TP,1608	
SR47	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
SR5	2007-001179	R-CHIP;8.2Kohm,5%,1/16W,DA,TP,1608	
SR52	2007-000704	R-CHIP;3.6Kohm,5%,1/16W,DA,TP,1608	
SR53	2007-000123	R-CHIP;1.5Kohm,5%,1/16W,DA,TP,1608	
SR6	2007-000098	R-CHIP;56Kohm,5%,1/16W,DA,TP,1608	
SR60	2007-000097	R-CHIP;47Kohm,5%,1/16W,DA,TP,1608	
SR67	2007-000034	R-CHIP;1OHM,5%,1/8W,DA,TP,3216	
SR68	2007-000034	R-CHIP;1OHM,5%,1/8W,DA,TP,3216	
SR7	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	

Loc.No	Part No	Description ; Specification	Remark
SR70	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR71	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR73	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR74	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR75	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
SR76	2007-000616	R-CHIP;24Kohm,5%,1/16W,DA,TP,1608	
SR77	2007-001179	R-CHIP;8.2Kohm,5%,1/16W,DA,TP,1608	
SR80	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
SR81	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
SR82	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
SR83	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
SR84	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
SR85	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
SR9	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
SY1	2801-000261	CRYSTAL-UNIT;33.8688MHZ,50PPM,28-AAA,12P	
ZC1	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC10	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC11	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC12	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC13	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC14	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC15	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC16	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC17	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC18	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC19	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC2	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC29	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
ZC3	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC37	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
ZC38	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC39	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC4	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
ZC40	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC41	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC42	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC43	2203-001652	C-CERAMIC,CHIP;470nF,+80-20%,16V,Y5V,TP,	
ZC44	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC45	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC46	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC47	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC48	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC49	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC5	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
ZC50	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC51	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC58	2203-000440	C-CERAMIC,CHIP;1nF,10%,50V,X7R,TP,1608,-	
ZC59	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
ZC6	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
ZC60	2203-000681	C-CERAMIC,CHIP;0.027nF,5%,50V,NP0,TP,160	
ZC61	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
ZC62	2203-000681	C-CERAMIC,CHIP;0.027nF,5%,50V,NP0,TP,160	
ZC63	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
ZC65	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC66	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC67	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC68	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC69	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC7	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC70	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC71	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC72	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC73	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC74	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC75	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC76	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	

Loc.No	Part No	Description ; Specification	Remark
ZC77	2203-000426	C-CERAMIC,CHIP;0.018nF,5%,50V,NP0,TP,160	
ZC78	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
ZC8	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC9	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZE30	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
ZE34	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
ZE35	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
ZE36	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
ZE37	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
ZIC1	1204-001673	IC-DECODER;ZIVA4.1,QFP,208P,1100MIL,PLAS	
ZIC2	1105-001268	IC-DRAM;3617161,16BIT,TSOP,50P-,7NS,3	
ZIC3	1105-001268	IC-DRAM;3617161,16BIT,TSOP,50P-,7NS,3	
ZIC4	AH14-10004R	IC;M74HCU04,SOP,TAPE 14P	
ZIC5	0402-000309	DIODE-RECTIFIER;1SR154-400,400V,1A,PSM	
ZL10	2703-000398	INDUCTOR-SMD;10uH,10%,3.2x2.5x2.2mm	
ZL11	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
ZL12	2703-000398	INDUCTOR-SMD;10uH,10%,3.2x2.5x2.2mm	
ZL2	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
ZL6	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
ZL7	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
ZL9	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
ZR1	2007-001164	R-CHIP;75ohm,1%,1/16W,DA,TP,1608	
ZR16	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZR17	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZR18	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZR23	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR27	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
ZR28	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
ZR29	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR30	2011-000475	R-NETWORK;33ohm,5%,63mW,L,CHIP,8P,TP	
ZR31	2011-000475	R-NETWORK;33ohm,5%,63mW,L,CHIP,8P,TP	
ZR32	2011-000475	R-NETWORK;33ohm,5%,63mW,L,CHIP,8P,TP	
ZR33	2011-000475	R-NETWORK;33ohm,5%,63mW,L,CHIP,8P,TP	
ZR34	2007-000113	R-CHIP;33ohm,5%,1/16W,DA,TP,1608	
ZR35	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
ZR37	2007-000113	R-CHIP;33ohm,5%,1/16W,DA,TP,1608	
ZR38	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZR68	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR69	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
ZR70	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
ZR71	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
ZR72	2011-000816	R-NETWORK;100ohm,5%,63mW,L,CHIP,8P,TP	
ZR73	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR75	2007-001164	R-CHIP;75ohm,1%,1/16W,DA,TP,1608	
ZR76	2007-001164	R-CHIP;75ohm,1%,1/16W,DA,TP,1608	
ZR77	2007-001164	R-CHIP;75ohm,1%,1/16W,DA,TP,1608	
ZR78	2007-001164	R-CHIP;75ohm,1%,1/16W,DA,TP,1608	
ZR79	2007-007332	R-CHIP;1.18KOHM,1%,1/10W,DA,TP,2012	
ZR82	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
ZR84	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR86	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR88	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR89	2007-000109	R-CHIP;1Mohm,5%,1/16W,DA,TP,1608	
ZR90	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
ZR91	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZR92	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZR93	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZY1	2801-003554	CRYSTAL-UNIT;27MHz,10ppm,28-AAM,12pF,40o	

Loc.No	Part No	Description ; Specification	Remark
602	**AH92-00338D**	**ASSY PCB-J ACK;DVD-611,J ACK PCB**	**DVD-611**
	AH92-00338E	**ASSY PCB-J ACK;DVD-511,J ACK PCB**	**DVD-511**
AC10	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
AC11	2301-000423	C-FILM,PEF;3.3NF,5%,100V,TP,7X10X4.5MM,5	
AC13	2301-000423	C-FILM,PEF;3.3NF,5%,100V,TP,7X10X4.5MM,5	
AC14	2301-000402	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
AC15	2301-000402	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
AC201	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
AC202	2203-000260	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,2012	DVD-611 ONLY
AC203	2203-000260	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,2012	
AC4	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
AC5	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
AC6	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
AC7	2301-000402	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
AC8	2301-000402	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
AC9	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
AD51	0407-000114	DIODE-ARRAY;DAN202K,80V,100mA,CA2-3,SOT-	
AD54	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
AD55	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
AD60	0407-000116	DIODE-ARRAY;DAP202K,80V,100mA,CK2-3,SOT-	
AE1	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
AE17	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
AE2	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
AE21	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
AE22	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
AE3	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
AE51	2401-001969	C-AL;470uF,20%,25V,GP,TP,10x12.5,5	
AE52	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
AE6	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
AE9	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
AIC1	1002-001213	IC-D/A CONVERTER;AK4393VF,24BIT,SOP,28P,	
AIC3	AH14-10004R	IC;M74HCU04,SOP,TAPE 14P	
AL1	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
AL2	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
AL201	2901-001125	FILTER-EMI ON BOARD;50V,0.5A,-,220pF,7x7	DVD-611 ONLY
AOP1	1201-000163	IC-OP AMP;4560,SOP,8P,173MIL,DUAL,100V/m	
AQ1	0501-000341	TR-SMALL SIGNAL;KSC1623-L,NPN,200mW,SOT-	
AQ3	0501-000341	TR-SMALL SIGNAL;KSC1623-L,NPN,200mW,SOT-	
AQ51	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
AQ52	0504-000156	TR-DIGITAL;DTA124EKA,PNP,200mW,22K-22K	
AQ55	0504-000118	TR-DIGITAL;KSR1003,NPN,300MW,22K/22K,TO-	
AQ56	0504-000118	TR-DIGITAL;KSR1003,NPN,300MW,22K/22K,TO-	
AQ57	0504-001003	TR-DIGITAL;KSR2003,PNP,300MW,22K/22K,TO-	
AR10	2007-000267	R-CHIP;1.8KOHM,5%,1/10W,DA,TP,2012	
AR11	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	
AR14	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR15	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR16	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR17	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR18	2007-000221	R-CHIP;1.2KOHM,5%,1/10W,DA,TP,2012	
AR19	2007-000221	R-CHIP;1.2KOHM,5%,1/10W,DA,TP,2012	
AR2	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	
AR201	2007-000766	R-CHIP;330OHM,5%,1/10W,DA,TP,2012	DVD-611 ONLY
AR202	2007-001247	R-CHIP;91OHM,5%,1/10W,DA,TP,2012	DVD-611 ONLY
AR203	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR21	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR22	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR24	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR26	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR28	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR29	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR3	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR30	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR31	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR32	2007-000221	R-CHIP;1.2KOHM,5%,1/10W,DA,TP,2012	

Loc.No	Part No	Description ; Specification	Remark
AR33	2007-000221	R-CHIP;1.2KOHM ,5% ,1/10W,DA,TP,2012	
AR35	2001-000290	R-CARBON;10KOHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
AR36	2001-000515	R-CARBON;220OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
AR38	2001-000515	R-CARBON;220OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
AR4	2007-000468	R-CHIP;1KOHM ,5% ,1/10W,DA,TP,2012	
AR40	2001-000429	R-CARBON;1KOHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
AR5	2001-000429	R-CARBON;1KOHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
AR51	2001-000429	R-CARBON;1KOHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
AR54	2001-000281	R-CARBON;100OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
AR55	2001-000241	R-CARBON;1.5KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
AR56	2001-000281	R-CARBON;100OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
AR6	2001-000429	R-CARBON;1KOHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
AR7	2001-000429	R-CARBON;1KOHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
AR8	2001-000429	R-CARBON;1KOHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
AR9	2007-000267	R-CHIP;1.8KOHM ,5% ,1/10W,DA,TP,2012	
AVJ1	3722-001469	JACK-RCA;3P/4P,3.2mm,NI,BLK,-	DVD-611 ONLY
AVJ2	3722-001467	JACK-RCA;3P,3.2mm,NI,BLK,-	
AVJ4	3722-001053	JACK-RCA;1P,3.2mm,NI,BLK,-	DVD-611 ONLY
AVJ5	3707-001005	CONNECTOR-OPTICAL;PLUG,SM ,-,4.4/2.0M M	
AZD51	0403-000551	DIODE-ZENER;MTZ3.9B,3.9V,3.89-4.16V,500m	
CN1	3708-001364	CONNECTOR-FPC/FC/PIC;35P,1.25M M ,STRAIGHT	
CN3	AH39-00179A	CONNECT WIRE;-,-,-,-,#26,-,-,-,-,-,-,-,1	
FC10	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30% ,16V,Y5S,TP,	
FC14	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30% ,16V,Y5S,TP,	
FC15	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30% ,16V,Y5S,TP,	
FC16	2203-000444	C-CERAMIC,CHIP;1nF,10% ,50V,X7R,TP,2012,-	
FC2	2202-000162	C-CERAMIC,MLC-AXIAL;.015NF,5% ,50V,SL,TP,	
FC3	2202-000162	C-CERAMIC,MLC-AXIAL;.015NF,5% ,50V,SL,TP,	
FC4	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30% ,16V,Y5S,TP,	
FC6	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30% ,16V,Y5S,TP,	
FC7	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20% ,50V,Y5V	
FD10	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
FD6	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
FD7	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
FD8	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
FD9	0403-000551	DIODE-ZENER;MTZ3.9B,3.9V,3.89-4.16V,500m	
FE1	2401-000922	C-AL;22uF,20% ,16V,GP,TP,5x5,5	
FE12	2401-001475	C-AL;47uF,20% ,10V,GP,TP,6.3x5,5mm	
FE5	2401-002144	C-AL;47uF,20% ,16V,GP,TP,5x11,5	
FE8	2401-001507	C-AL;47uF,20% ,16V,GP,TP,6.3x5,5	
FIC1	AH09-00034A	IC MICOM;LC866232A,SANYO,100PIN ,QFP,QFP	
FIC2	1203-001252	IC-VOL. DETECTOR;7545,TO-92,3P,-,PLASTIC	
FIC4	AH59-00010A	MODULE-REMOCON;-,-,37.9KHZ,940NM ,-,-,-	
FL2	2701-000114	INDUCTOR-AXIAL;10uH,10% ,2.5x3.4mm	
FR1	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR10	2001-000281	R-CARBON;100OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
FR101	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR102	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR103	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR104	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR105	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR106	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR11	2001-000281	R-CARBON;100OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
FR12	2001-000281	R-CARBON;100OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
FR13	2001-000281	R-CARBON;100OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
FR16	2001-000027	R-CARBON;100OHM ,5% ,1/4W,AA,TP,2.4X6.4M M	
FR17	2001-000027	R-CARBON;100OHM ,5% ,1/4W,AA,TP,2.4X6.4M M	
FR18	2007-000493	R-CHIP;2.2KOHM ,5% ,1/10W,DA,TP,2012	
FR19	2001-000449	R-CARBON;2.2KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR20	2001-000449	R-CARBON;2.2KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR21	2001-000435	R-CARBON;1M OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
FR24	2001-000281	R-CARBON;100OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
FR25	2007-000029	R-CHIP;0OHM ,5% ,1/10W,DA,TP,2012	
FR26	2001-000281	R-CARBON;100OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
FR2S	2007-000029	R-CHIP;0OHM ,5% ,1/10W,DA,TP,2012	
FR31	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR32	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR33	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR34	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR35	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR36	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR37	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR3S	2007-000029	R-CHIP;0OHM ,5% ,1/10W,DA,TP,2012	
FR43	2001-000793	R-CARBON;47OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
FR44	2001-000429	R-CARBON;1KOHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
FR45	2001-000429	R-CARBON;1KOHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
FR46	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR4S	2007-000029	R-CHIP;0OHM ,5% ,1/10W,DA,TP,2012	
FR5	2001-000325	R-CARBON;120OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	
FR51	2007-000029	R-CHIP;0OHM ,5% ,1/10W,DA,TP,2012	
FR52	2007-000029	R-CHIP;0OHM ,5% ,1/10W,DA,TP,2012	
FR53	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR54	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR57	2001-000429	R-CARBON;1KOHM ,5% ,1/8W,AA,TP,1.8X3.2M M	DVD-511 ONLY
FR6	2001-000273	R-CARBON;100KOHM ,5% ,1/8W,AA,TP,1.8X3.2M	
FR7	2007-000282	R-CHIP;100KOHM ,5% ,1/10W,DA,TP,2012	
FR8	2007-000282	R-CHIP;100KOHM ,5% ,1/10W,DA,TP,2012	
FY1	2802-000108	RESONATOR-CERAMIC;12MHZ,0.5% ,BK,10.0X5.0	
JP347	2008-000141	R-FUSIBLE;2.2ohm,5% ,1/4W,AA,TP,2.6x6.7mm	DVD-511 ONLY
JP383	2001-000780	R-CARBON;470OHM ,5% ,1/8W,AA,TP,1.8X3.2M M	DVD-511 ONLY
JP58	2701-000114	INDUCTOR-AXIAL;10uH,10% ,2.5x3.4mm	
JP80	2007-000033	R-CHIP;0OHM ,5% ,1/8W,DA,TP,3216	
JP81	2007-000033	R-CHIP;0OHM ,5% ,1/8W,DA,TP,3216	
PBR11	3301-000297	CORE-FERRITE BEAD;AA,3.6x1.2x5.7mm,1400,	
PBS01	3301-000297	CORE-FERRITE BEAD;AA,3.6x1.2x5.7mm,1400,	
PCD02	2201-000934	C-CERAMIC,DISC;3.3nF,20% ,400V,Y5U,TP,15x	⚠
PCD03	2201-000934	C-CERAMIC,DISC;3.3nF,20% ,400V,Y5U,TP,15x	⚠
PCD12	2201-000930	C-CERAMIC,DISC;0.22nF,10% ,500V,Y5P,TP,5.	
PCNS1	AH39-00177A	CONNECT WIRE;-,-,-,-,#24,-,-,-,-,-,-,-,1	
PCNS2	3711-000178	CONNECTOR-HEADER;1WALL,2P,1R,3.96mm,STRA	⚠
PCR01	2201-000795	C-CERAMIC,DISC;10nF,10% ,400V,Y5P,TP,15x1	⚠
PCR02	2201-000934	C-CERAMIC,DISC;3.3nF,20% ,400V,Y5U,TP,15x	⚠
PCR11	2201-000930	C-CERAMIC,DISC;0.22nF,10% ,500V,Y5P,TP,5.	
PCR13	2301-000176	C-FILM ,PEF;18nF,5% ,100V,TP,10X9X4.3X5,5m	
PCR14	2301-000417	C-FILM ,PEF;24nF,5% ,50V,TP,6.5x10.5x4mm,5	
PCR15	2301-000423	C-FILM ,PEF;3.3NF,5% ,100V,TP,7X10X4.5M M ,5	
PCS03	2201-000916	C-CERAMIC,DISC;100pF,10% ,400V,Y5U,TP,10x	
PCS31	2301-000381	C-FILM ,PEF;10nF,5% ,50V,TP,6.5x5.5x3mm,5m	
PCS32	2203-000192	C-CERAMIC,CHIP;100nF,+80-20% ,50V,Y5V,TP,	
PDD35	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
PDR11	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
PDR12	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
PDS01	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDS02	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDS03	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDS04	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDS11	0402-000276	DIODE-RECTIFIER;UF4007,1KV,1A,DO-41,TP	
PDS31	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
PDS32	0402-001194	DIODE-RECTIFIER;UG2D,200V,2A,DO-204AC,TP	
PDS33	0404-001097	DIODE-SCHOTTKY;SG45,45V,7500mA,TO-220A,B	
PDS34	0404-001097	DIODE-SCHOTTKY;SG45,45V,7500mA,TO-220A,B	
PDS36	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
PDS51	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
PDS52	0402-000132	DIODE-RECTIFIER;1N4004,400V,1A,DO-41,TP	
PER10	2401-003365	C-AL;150uF,20% ,200V,GP,TP,18x25,7.5	⚠
PER11	2401-001235	C-AL;4.7uF,20% ,250V,WT,TP,10x12.5,5	
PER12	2401-000905	C-AL;22UF,20% ,16V,BP,-,6X11,2.5M M	
PES31	2401-000302	C-AL;100uF,20% ,25V,GP,TP,6.3x11,5	
PES32	2401-000302	C-AL;100uF,20% ,25V,GP,TP,6.3x11,5	
PES33	2401-000118	C-AL;1000uF,20% ,10V,GP,TP,10x12.5,5	
PES34	2401-000118	C-AL;1000uF,20% ,10V,GP,TP,10x12.5,5	
PES35	2401-003046	C-AL;47uF,20% ,50V,WT,TP,6.3x11,2.5	

Loc.No	Part No	Description ; Specification	Remark
PES36	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
PES37	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
PES51	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
PES52	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
PES53	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
PES54	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
PES56	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
PES57	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
PES58	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
PFD01	3601-000194	FUSE-CARTRIDGE;250V,1A,FAST-ACTING,GLASS	⚠
PICS1	0604-000186	PHOTO-COUPLER;TR,-,200mW,DIP-4,ST	⚠
PICS2	AC14-12006D	IC;KA431Z,TO-92,TAPING	
PICS3	1203-000122	IC-NEGA.FIXED REG.;7908,TO-220,3P,-,PLAS	
PICS4	1203-001697	IC-VOLTAGE REGULATOR;78R08,TO-220,4P,-,P	
PICS5	1203-001083	IC-VOLTAGE REGULATOR;3RF23,TO-202,4P,12.	
PLS01	AC29-30050C	FILTER-LINE NOISE;-,25MH,0.35A,AC250V,BS	⚠
PLS31	AC27-12001N	COIL-CHOKE;10UH-15%,RA,K-30,Q80,150KHZ,-	
POWER	0601-001447	LED;ROUND,RED,3.1mm,650nm	
PQR11	0502-000405	TR-POWER;-,NPN,70W,TO-220,BK,10	⚠
PQR12	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,T0-9	
PQS55	0504-000152	TR-DIGITAL;KSR2101,PNP,200MW,4.7K/4.7K,S	
PQS56	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
PQS57	0501-000616	TR-SMALL SIGNAL;KSC2328A-Y,NPN,1W,TO-92L	
PQS58	0501-000616	TR-SMALL SIGNAL;KSC2328A-Y,NPN,1W,TO-92L	
PRD11	2003-000119	R-METAL OXIDE;0.68ohm,5%,2W,AE,TP,6x16mm	
PRD31	2007-000221	R-CHIP;1.2KOHM,5%,1/10W,DA,TP,2012	
PRD32	2007-000766	R-CHIP;330OHM,5%,1/10W,DA,TP,2012	
PRR11	2003-002117	R-METAL OXIDE(S);330Kohm,5%,1W,AA,TP,3.3	
PRR12	2003-000314	R-METAL OXIDE;47ohm,5%,2W,AE,TP,6x16mm	
PRR13	2003-000314	R-METAL OXIDE;47ohm,5%,2W,AE,TP,6x16mm	
PRR14	2001-000003	R-CARBON;330ohm,5%,1/8W,AA,TP,1.8x3.2mm	
PRR15	2001-000003	R-CARBON;330ohm,5%,1/8W,AA,TP,1.8x3.2mm	
PRR17	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRS11	2003-000994	R-METAL OXIDE(S);33Kohm,5%,2W,AF,TP,3.9x	
PRS12	2003-000994	R-METAL OXIDE(S);33Kohm,5%,2W,AF,TP,3.9x	
PRS31	2001-000440	R-CARBON;1OHM,5%,1/8W,AA,TP,1.8X3.2MM	
PRS32	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
PRS33	2004-000869	R-METAL;3Kohm,1%,1/8W,AA,TP,1.8x3.2mm	
PRS34	2004-000459	R-METAL;2.2Kohm,1%,1/8W,AA,TP,1.8x3.2m	
PRS54	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRS55	2001-000062	R-CARBON;470OHM,5%,1/4W,AA,TP,2.4X6.4MM	
PRS56	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
PTD1	AC26-00001N	TRANS-SWITCHING;-,-,-,120V,UL/CSA,EE2821	⚠
PVA1	1405-000186	VARISTOR;470V,4500A,17x12mm,TP	⚠
PZR31	0403-001036	DIODE-ZENER;1N4745A,16V,5%,1W,DO-41,TP	
PZS51	0403-000717	DIODE-ZENER;MTZJ 5.1B,5.1V,4.94-5.2V,500m	
SVJ1	3722-001375	JACK-DIN;4P,-,NI,BLK,-	
SW1	3404-000160	SWITCH-TACT;12V,50mA,160gf+-50gf,6.55x7.	
VC1	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
VC10	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	
VC106	2203-000260	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,2012	DVD-611 ONLY
VC11	2202-000851	C-CERAMIC,MLC-AXIAL;270PF,10%,50V,Y5P,TP	DVD-611 ONLY
VC12	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	DVD-611 ONLY
VC13	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	DVD-611 ONLY
VC14	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	DVD-611 ONLY
VC16	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
VC17	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
VC18	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
VC19	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	
VC21	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
VC22	2202-000851	C-CERAMIC,MLC-AXIAL;270PF,10%,50V,Y5P,TP	
VC3	2202-000851	C-CERAMIC,MLC-AXIAL;270PF,10%,50V,Y5P,TP	
VC4	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
VC5	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	
VC6	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
VC8	2202-000851	C-CERAMIC,MLC-AXIAL;270PF,10%,50V,Y5P,TP	
VC9	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
VE1	2401-000369	C-AL;100UF,20%,6.3V,GP,-,6.3X11,5	DVD-611 ONLY
VE10	2401-000369	C-AL;100UF,20%,6.3V,GP,-,6.3X11,5	DVD-611 ONLY
VE11	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11mm,2.5m	DVD-611 ONLY
VE2	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11mm,2.5m	DVD-611 ONLY
VE3	2401-000369	C-AL;100UF,20%,6.3V,GP,-,6.3X11,5	DVD-611 ONLY
VE4	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11mm,2.5m	DVD-611 ONLY
VE5	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
VE6	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11mm,2.5m	
VE7	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
VE8	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11mm,2.5m	
VE9	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
VFD1	AH07-00024A	VF DISPLAY;HNV-11SS19,21SEG,74X9.0mm,DVD	
VIC1	1201-001419	IC-VIDEO AMP;7660,SSOP,16P,173MIL,3,6DB,	
VIC2	1201-001419	IC-VIDEO AMP;7660,SSOP,16P,173MIL,3,6DB,	DVD-611 ONLY
VL1	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL112	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
VL2	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL3	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL4	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL5	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	DVD-611 ONLY
VL6	2701-000145	INDUCTOR-AXIAL;1uH,5%,2.4x3.4mm	DVD-611 ONLY
VL7	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL8	2701-000145	INDUCTOR-AXIAL;1uH,5%,2.4x3.4mm	
VR10	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR10S	2001-001006	R-CARBON;82OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR11	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR12	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR121	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	DVD-611 ONLY
VR122	2007-000572	R-CHIP;220OHM,5%,1/10W,DA,TP,2012	
VR123	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	DVD-611 ONLY
VR13	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	DVD-611 ONLY
VR22	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	DVD-611 ONLY
VR23	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	DVD-611 ONLY
VR24	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	DVD-611 ONLY
VR7	2001-001006	R-CARBON;82OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR8	2001-001006	R-CARBON;82OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR9	2001-001006	R-CARBON;82OHM,5%,1/8W,AA,TP,1.8X3.2MM	DVD-611 ONLY
VSW1	AH34-00010A	SWITCH SLIDE;-,50V DC,-,-,100M OHM,-,-,-,	DVD-611 ONLY

Loc.No	Part No	Description ; Specification	Remark
701	**AH92-00583A**	**ASSY PCB-KEY;DVD-611,KEY PCB**	**DVD-611**
	AH92-00582A	**ASSY PCB-KEY;DVD-511,KEY PCB**	**DVD-511**
CON21	AH39-00180A	CONNECT WIRE;-,-,-,-,#26,-,-,-,-,-,-,-,1	
FSW1	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
FSW2	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
FSW4	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
FSW5	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
FSW6	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
H240	**AH92-00608A**	**ASSY PCB-DECK;VALINO DECK 1L**	
CN1	3708-001084	CONNECTOR-FPC/FC/PIC;40P,1.25mm,ANGLE,SN	
CN2	3708-001494	CONNECTOR-FPC/FC/PIC;20P,1mm,SMD-A,SN	
CN2A	3809-001182	CABLE-FLAT;30V,80C,114mm,20P,1mm,UL20696	
CN3	3708-001492	CONNECTOR-FPC/FC/PIC;11P,1mm,ANGLE,SN	
DC1	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
DC2	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
DC4	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
DC5	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
DD2	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
DR1	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR4	2001-000405	R-CARBON;180OHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR5	2001-000405	R-CARBON;180OHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR6	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR7	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
SW1	3409-001045	SWITCH-DETECTOR;30V,0.1A,1,36gf,-	
SW2	3409-000176	SWITCH-DETECTOR;30Vdc,100mA,SPST,-,-	
SW3	3408-000227	SWITCH-SLIDE;30V,300mA,DPDT,-	

Loc.No	Part No	Description ; Specification	Remark

MEMO

9. Block Diagram

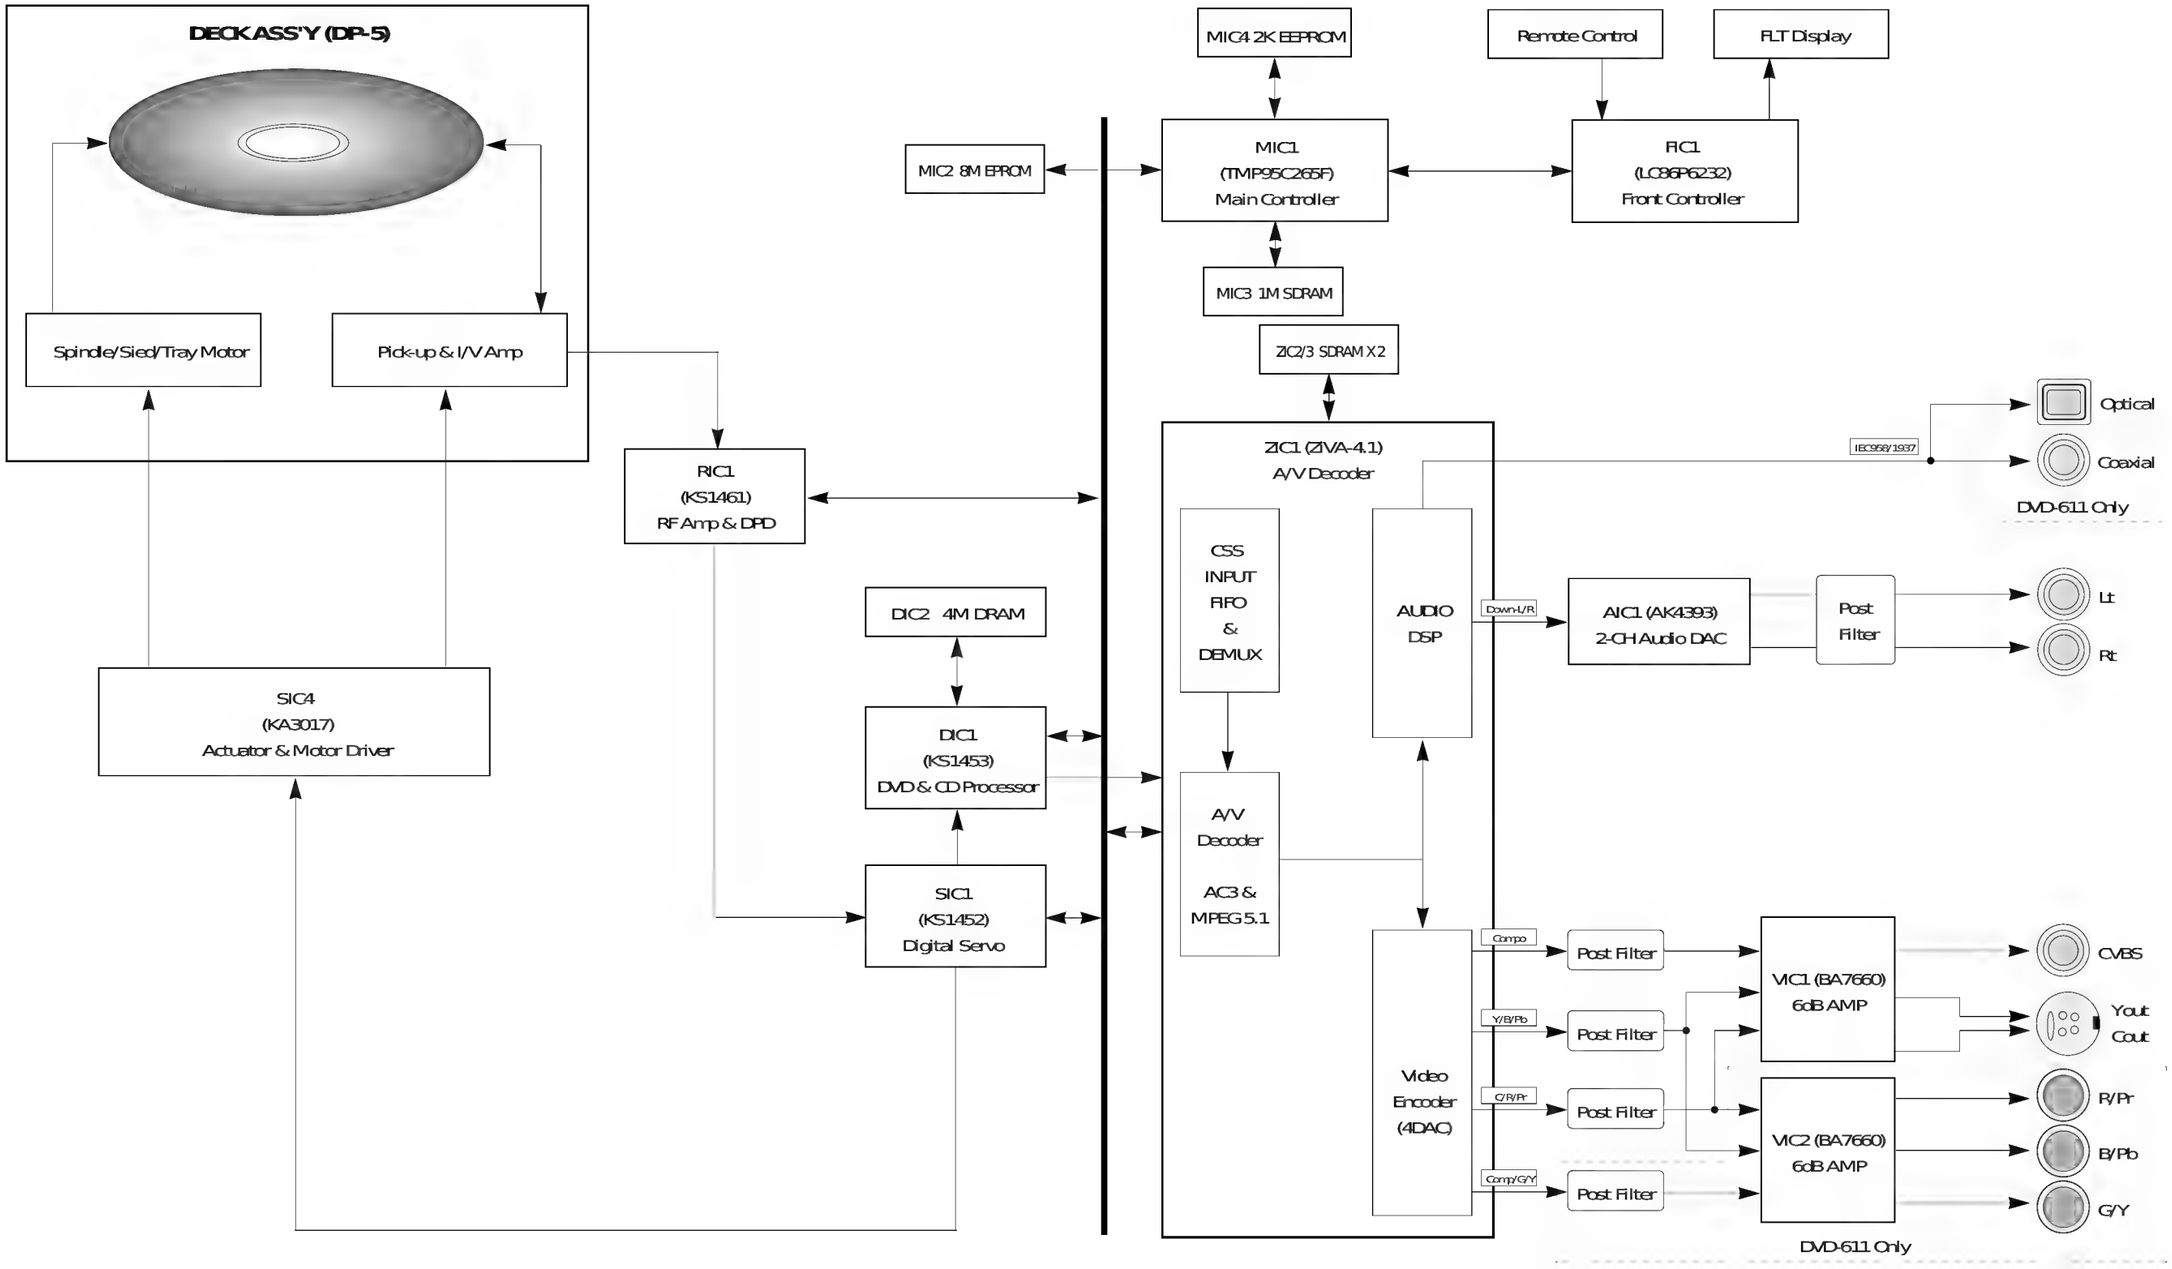

MEMO

10. PCB Diagrams

10-1 Main ---------- 10-2

10-2 Jack ---------- 10-3

10-3 Key ---------- 10-4

10-4 Deck ---------- 10-4

10-1 Main

COMPONENT SIDE

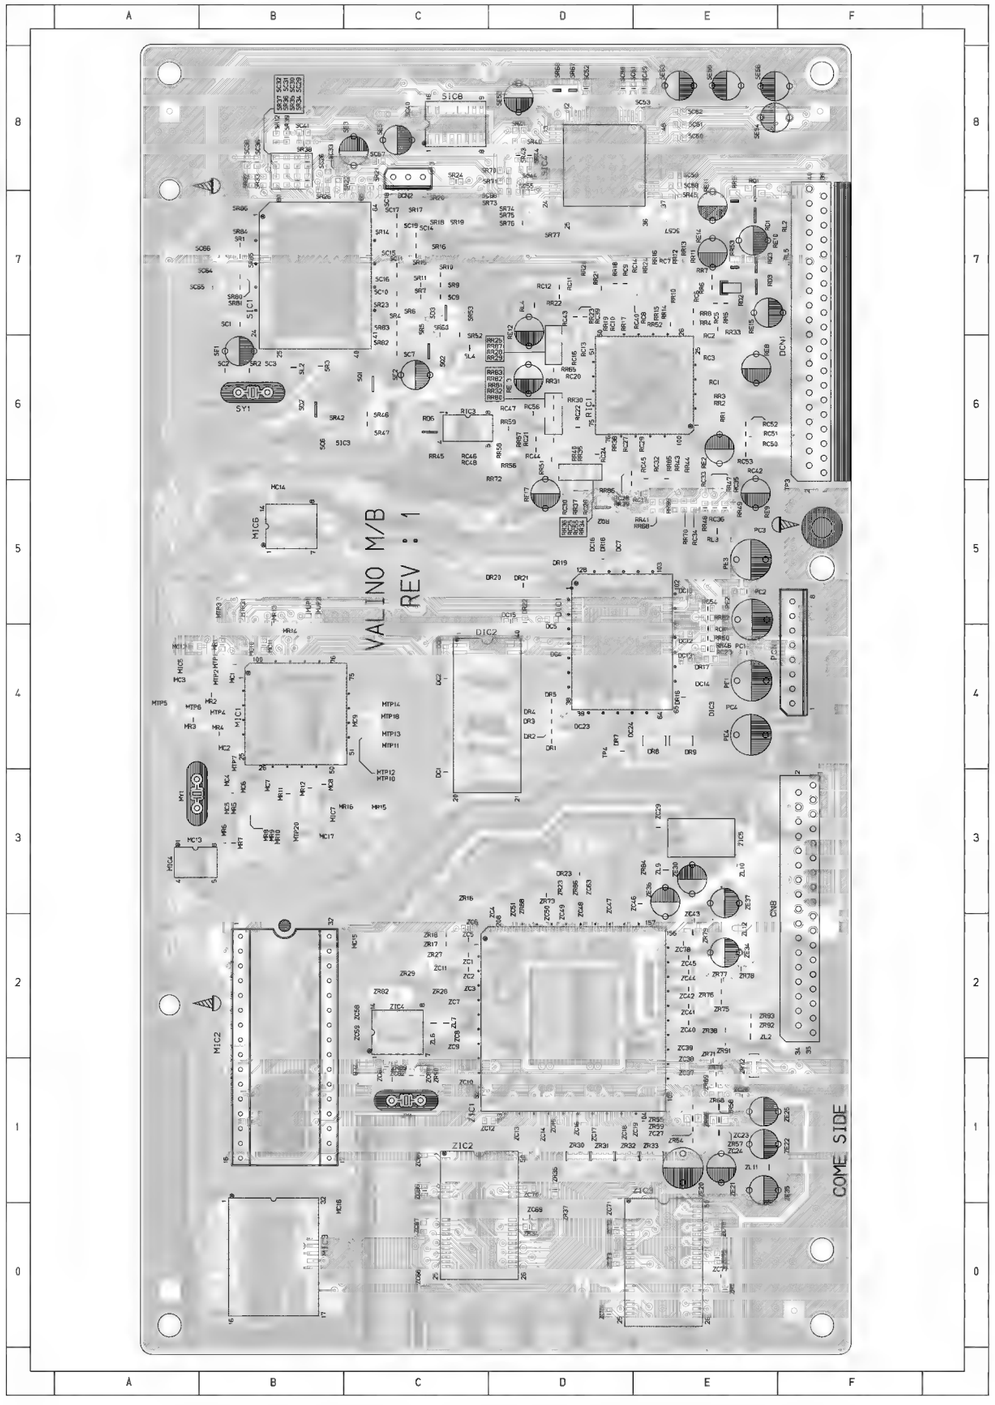

SOLDER SIDE

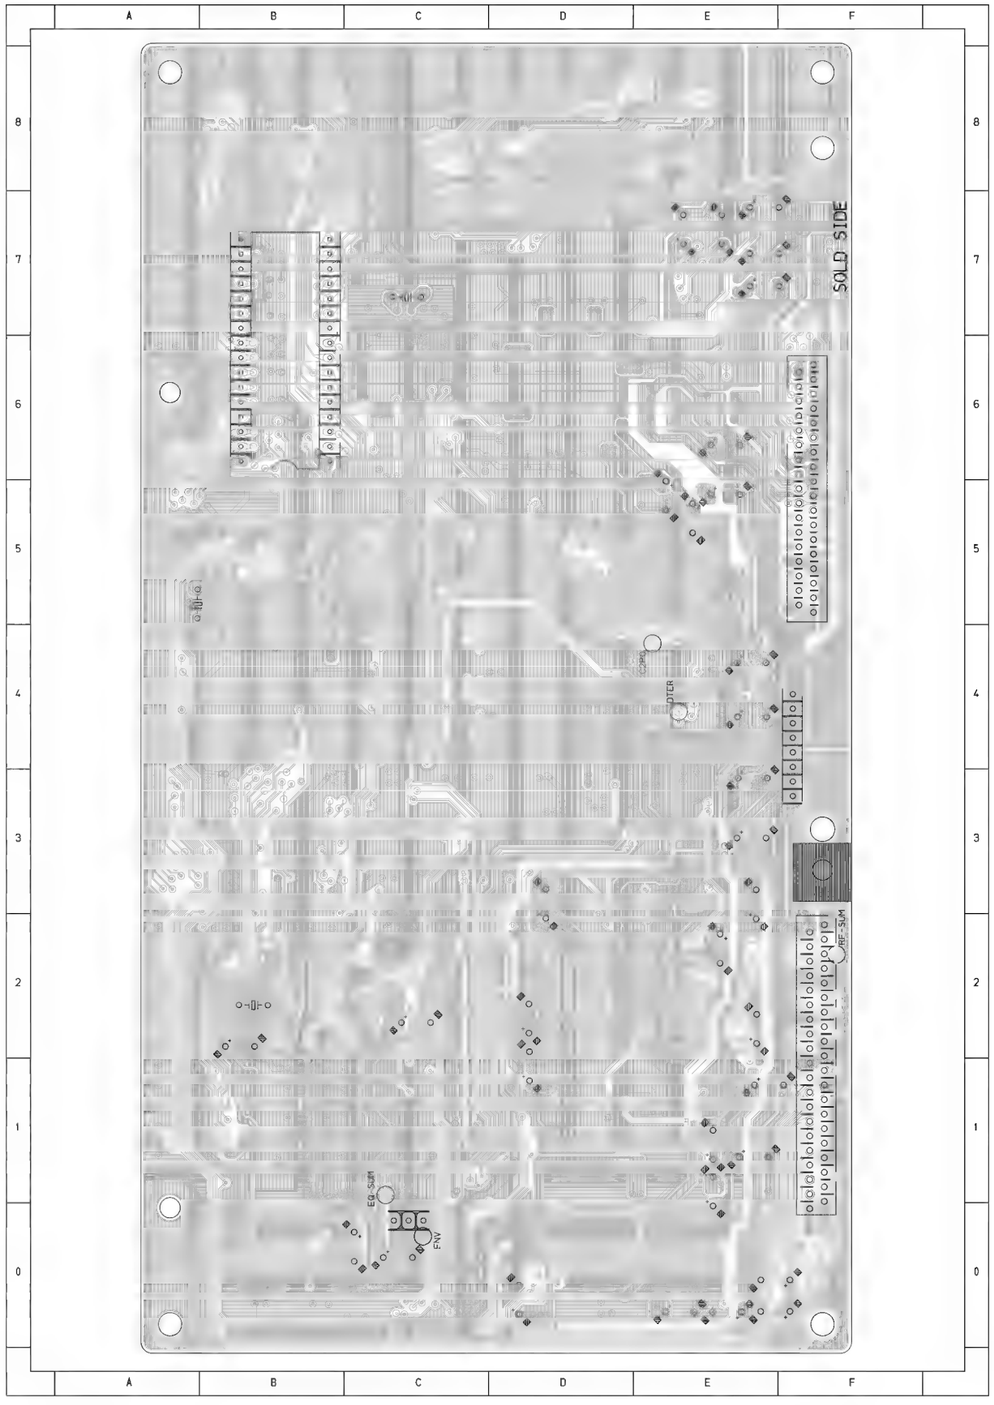

10-2 Jack

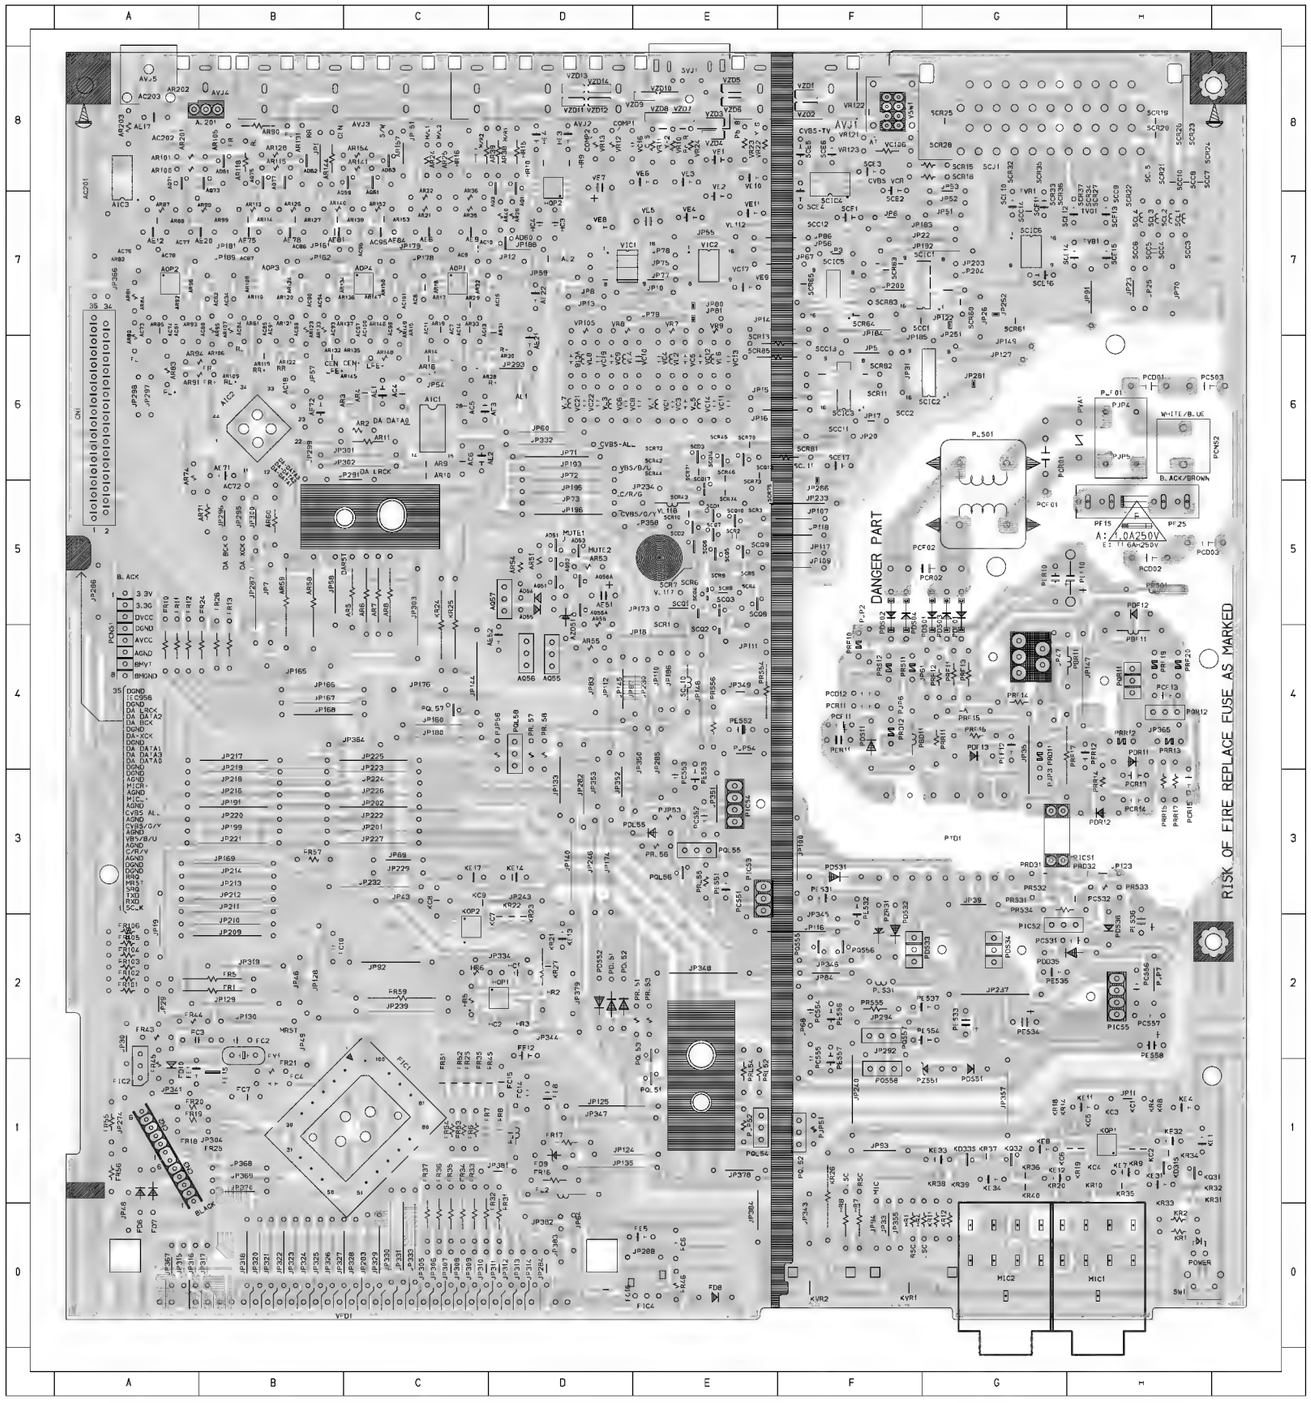
DANGER PART
RISK OF FIRE REPLACE FUSE AS MARKED
A: 4.0A/250V
B. ACK/BROWN
WHITE/B. UE
POWER

10-3 Key

DVD-611

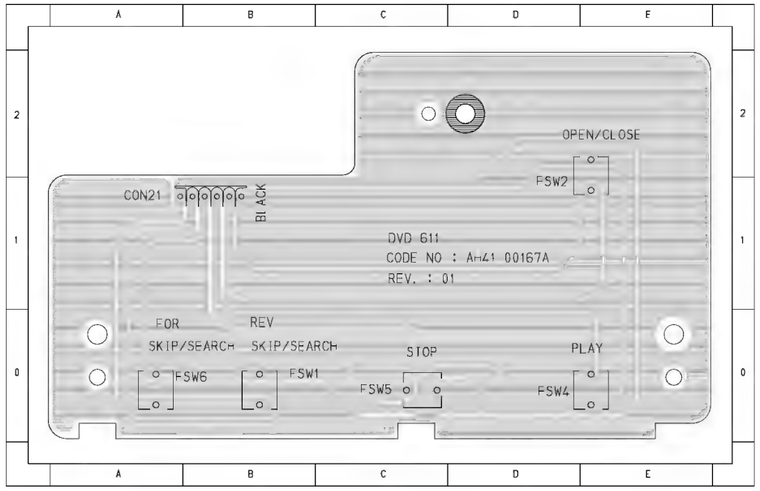

DVD-511

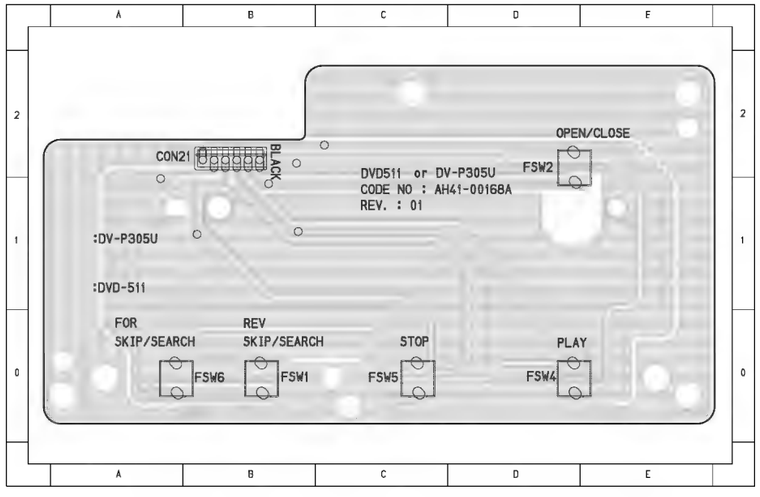

10-4 Deck

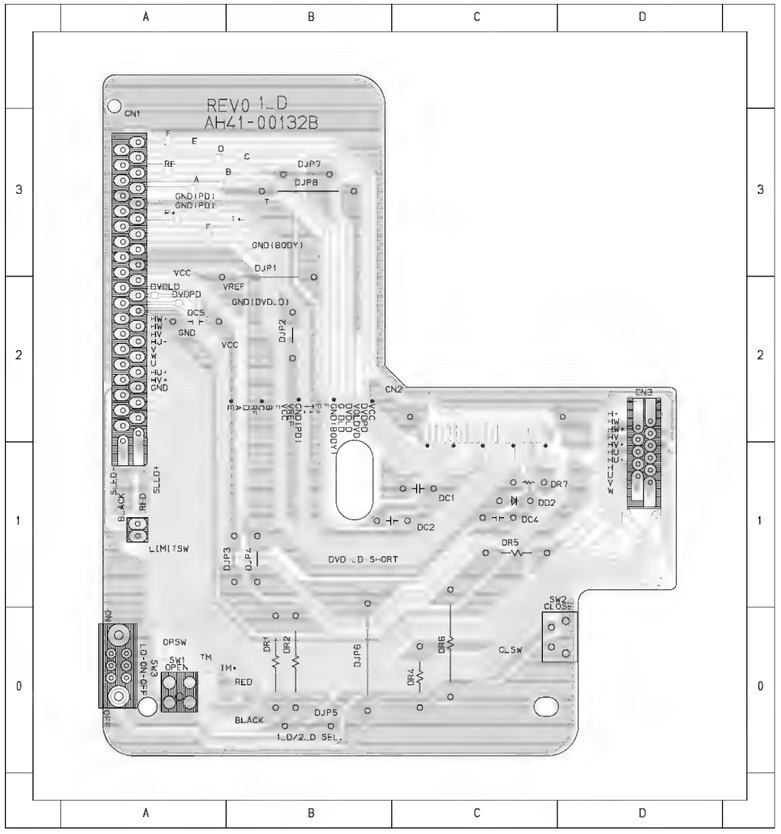

11. Wiring Diagram

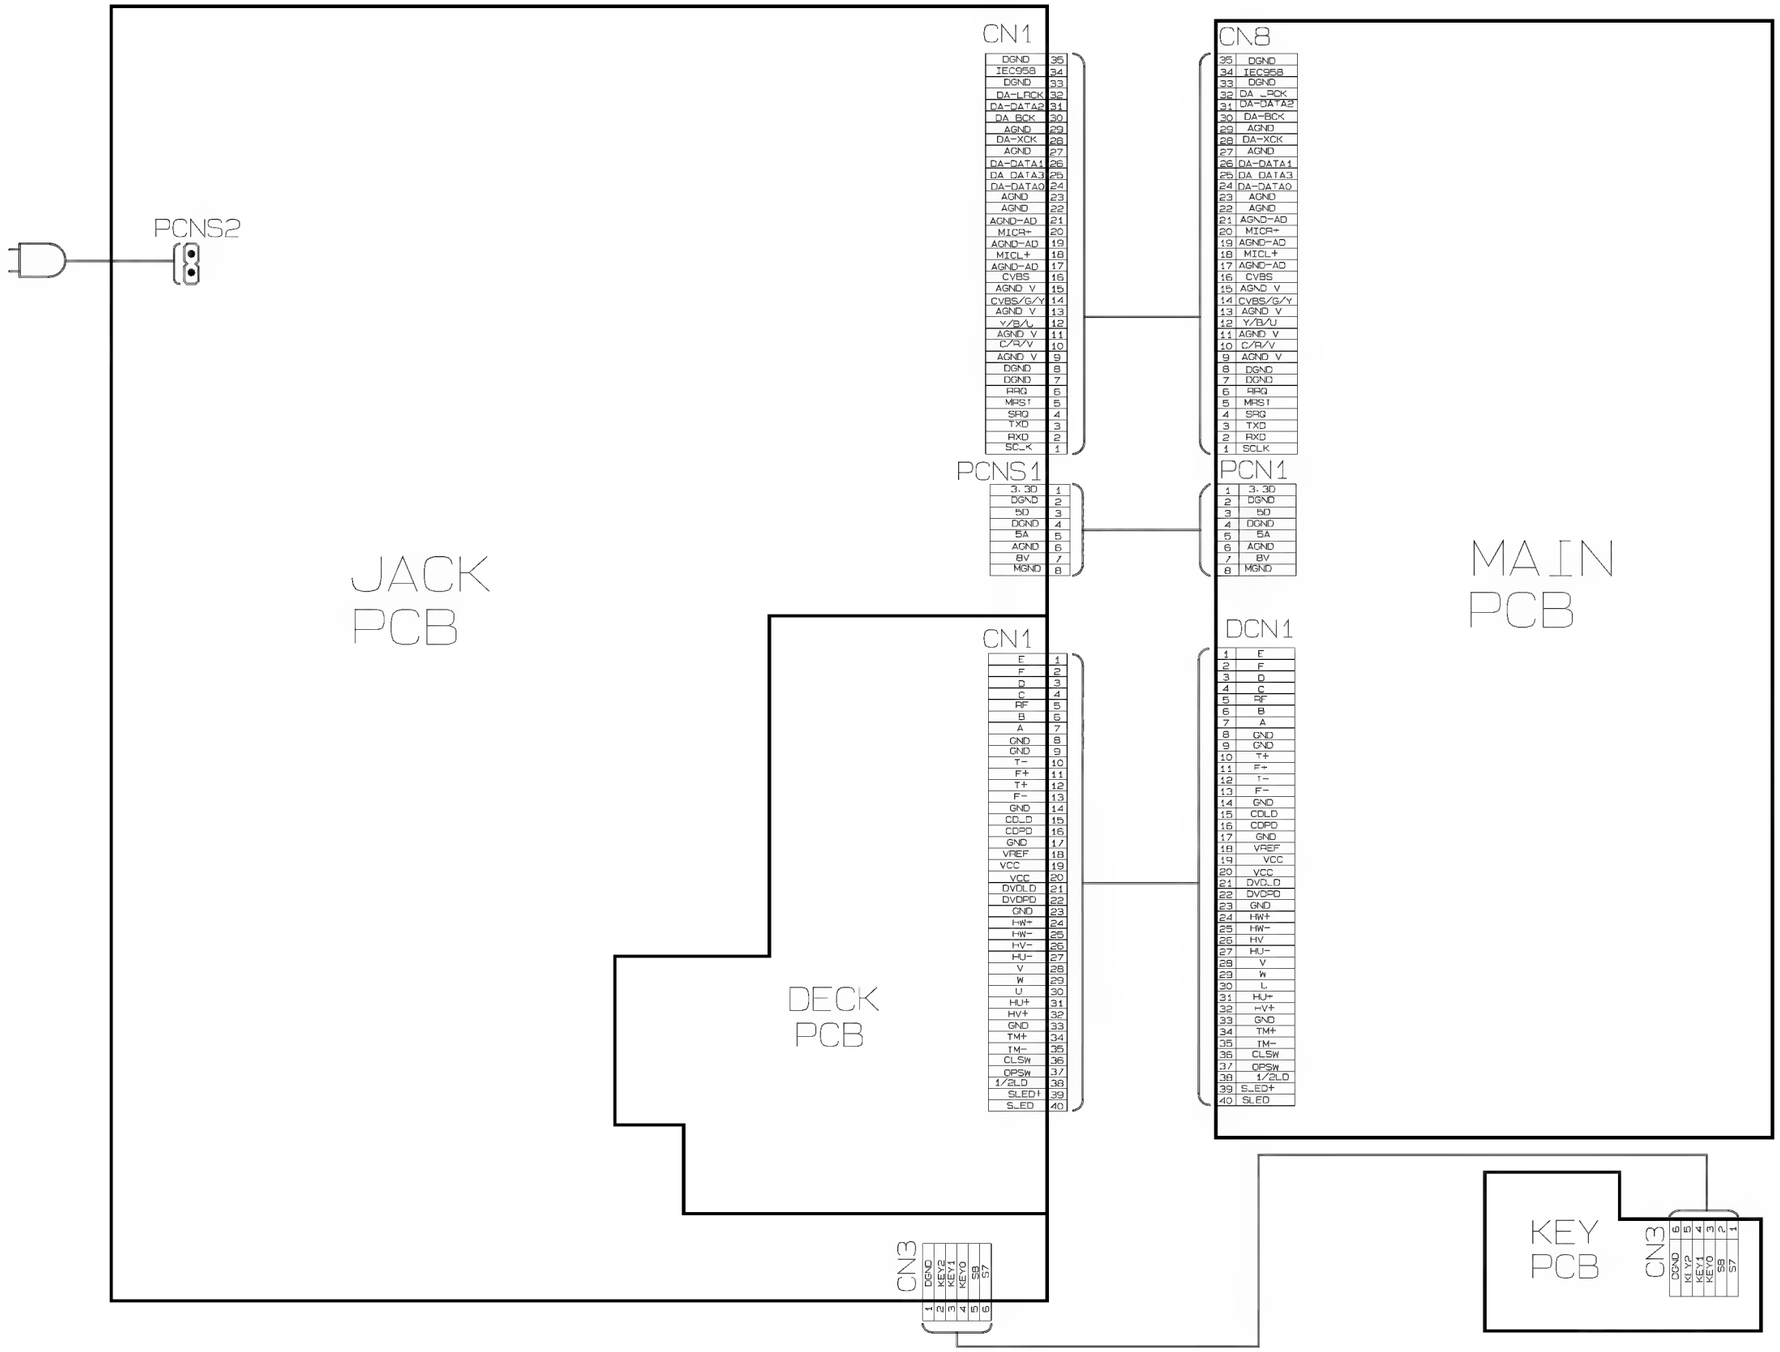

MEMO

12. Schematic Diagrams

12-1 Power ---------- 12-2

12-2 Main-Micom ---------- 12-3

12-3 Servo ---------- 12-4

12-4 Video ---------- 12-5

12-5 Audio ---------- 12-6

12-6 RF ---------- 12-7

12-7 ZiVA ---------- 12-8

12-8 DSP ---------- 12-9

12-9 Front-Micom/VFD Display ---------- 12-10

12-10 Key ---------- 12-11

12-11 Deck ---------- 12-12

12-12 Remote Control ---------- 12-13

Block Identification of PCB

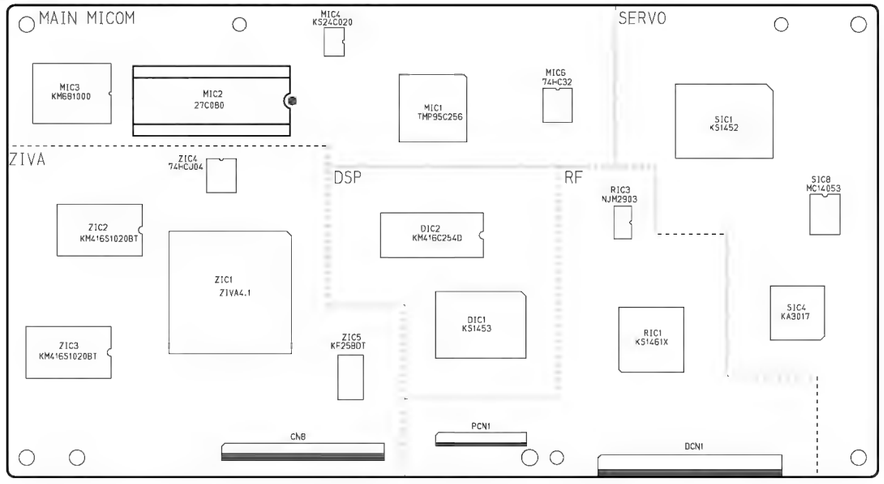

Main PCB (Component Side)

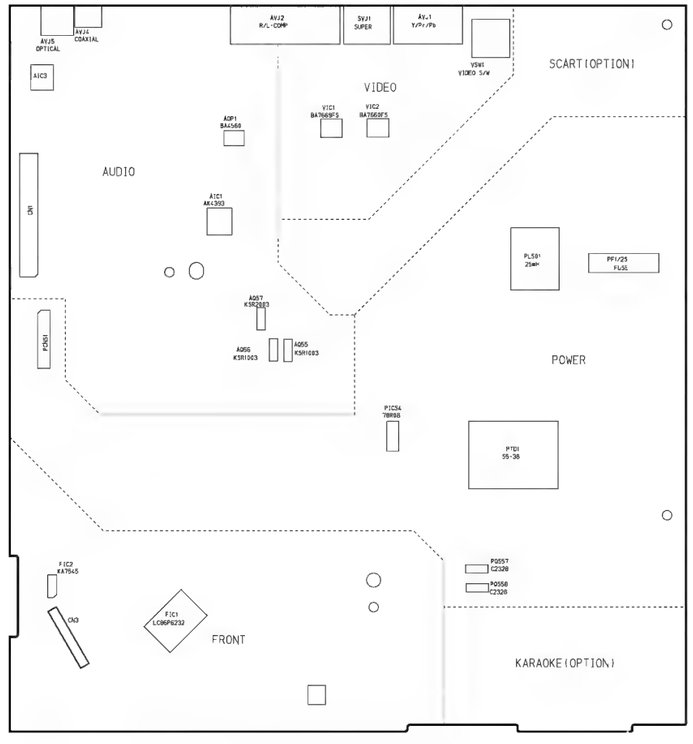

Jack PCB (Conductor Side)

12-1 Power

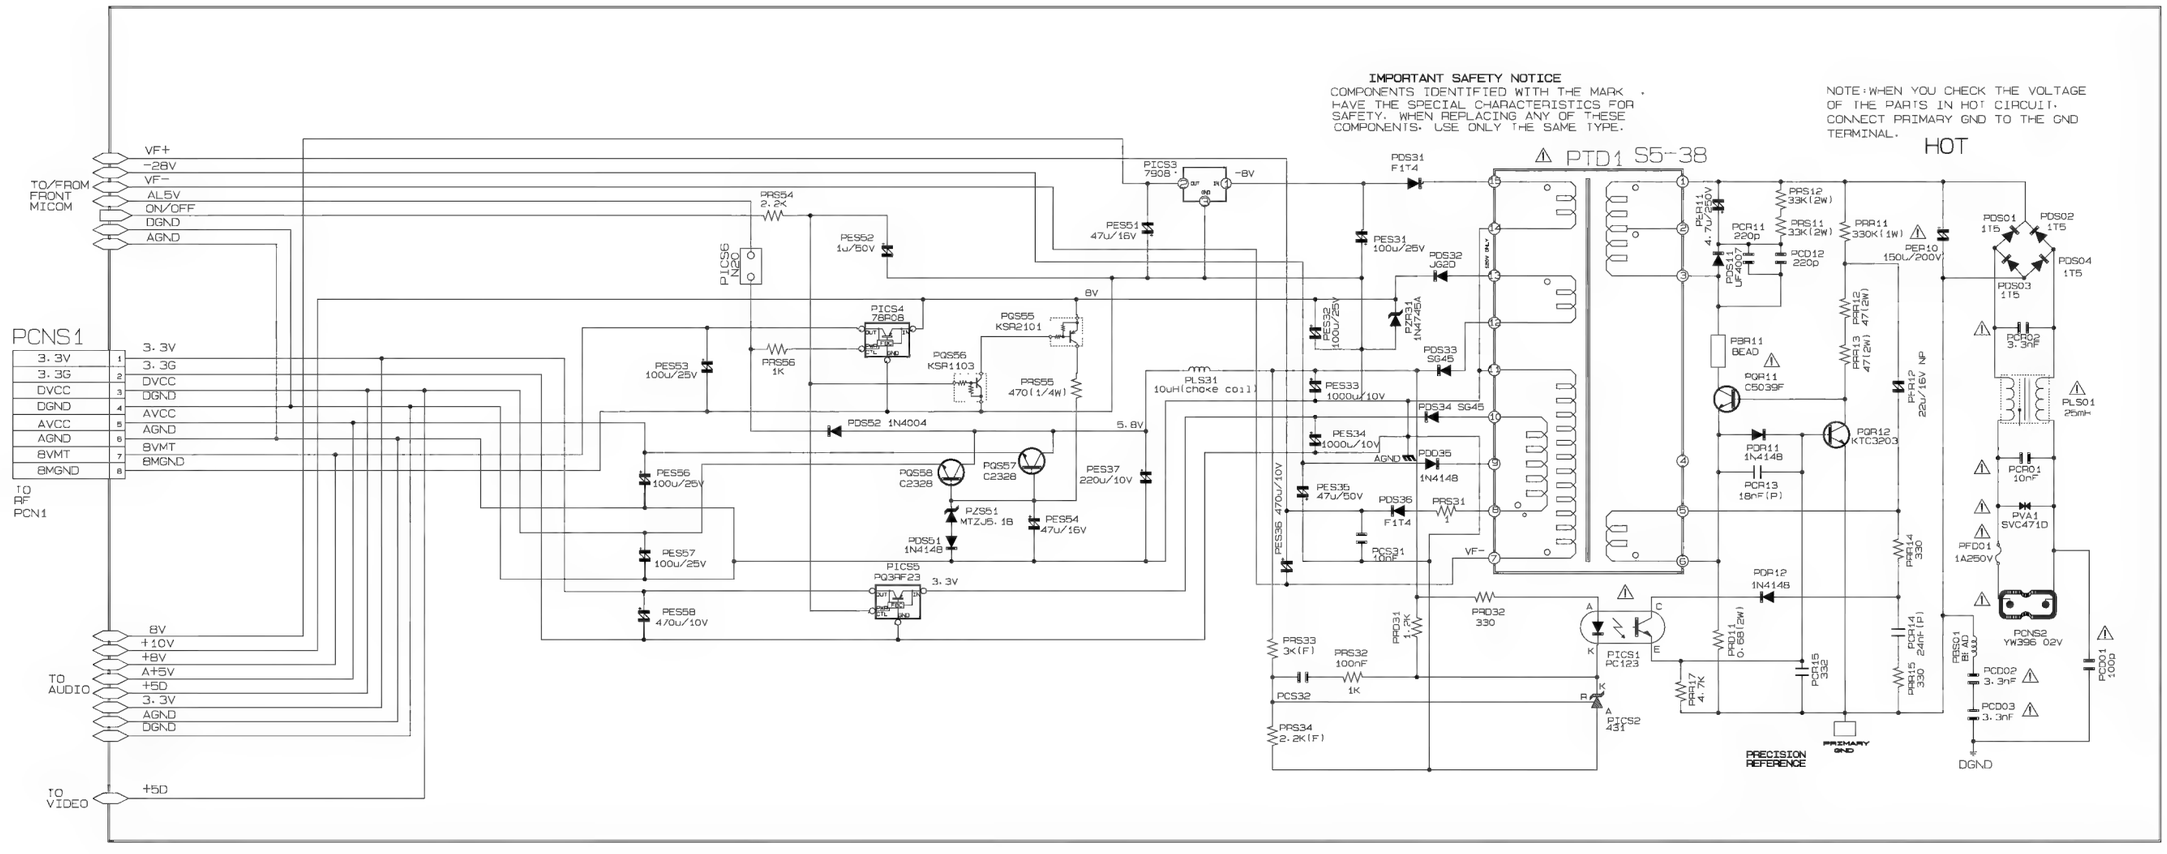
IMPORTANT SAFETY NOTICE
COMPONENTS IDENTIFIED WITH THE MARK ⚠ HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS. USE ONLY THE SAME TYPE.
NOTE:WHEN YOU CHECK THE VOLTAGE OF THE PARTS IN HOT CIRCUIT. CONNECT PRIMARY GND TO THE GND TERMINAL.
HOT
⚠ PTD1 S5-38
TO/FROM FRONT MICOM
VF+
-28V
VF-
AL5V
ON/OFF
DGND
AGND
PCNS1
3.3V
3.3G
DVCC
DGND
AVCC
AGND
8VMT
8MGND
TO RF PCN1
8V
+10V
+8V
A+5V
+5D
3.3V
AGND
DGND
TO AUDIO
TO VIDEO
PICS3 7908
-8V
PRS54 2.2K
PES52 1u/50V
PICS6 PC357N2
PES51 47u/16V
PICS4 78R08
8V
PQS55 KSR2101
PQS56 KSR1103
PRS56 1K
PRS55 470(1/4W)
PES53 100u/25V
PDS52 1N4004
5.8V
PES56 100u/25V
PQS58 C2328
PQS57 C2328
PES37 220u/10V
PZS51 MTZJS.1B
PES54 47u/16V
PDS51 1N4148
PES57 100u/25V
PICS5 PQ3RF23
3.3V
PES58 470u/10V
PDS31 F1T4
PES31 100u/25V
PDS32 SG20
PDS31 1N4725A
PDS33 SG45
PES33 1000u/10V
PLS31 10uH(choke coil)
PDS34 SG45
PES34 1000u/10V
AGND
PDD35 1N4148
PES35 47u/50V
PDS36 F1T4
PRS31 1
PCS31 100P
VF-
PES36 470u/10V
PRD32 330
PRD31 1.2K
PRS33 3K(F)
PRS32 100nF
1K
PCS32
PRS34 2.2K(F)
PICS1 PC123
PICS2 431
PRECISION REFERENCE
PRS11 4.7u/160V
PCR11 220p
PDS11 FR4007
PRS12 33K(2W)
PRS11 33K(2W)
PRR11 330K(1W)
PEP10 150u/200V
PCD12 220p
PBR11 BEAD
PQR11 C5039F
PRR13 PRR12 47(2W)
PQR12 KTC3203
PDR11 1N4148
PCR13 18nF(P)
PDR12 1N4148
PRR12 22u/16V NP
PRR14 330
PCR14 24nF(P)
PRR15 330
PRR17 4.7K
PDS01 1S5
PDS02 1T5
PDS04 1T5
PDS03 1S5
PCR02 3.3nF
PLS01 25mH
PCR01 10nF
PVA1 SVC471D
PFD01 1A250V
PCNS2 YW396 0.2V
PRS01 BEAD
PCD02 3.3nF
PCD03 3.3nF
PCD01 100p
PRIMARY GND
DGND

12-2 Main-Micom

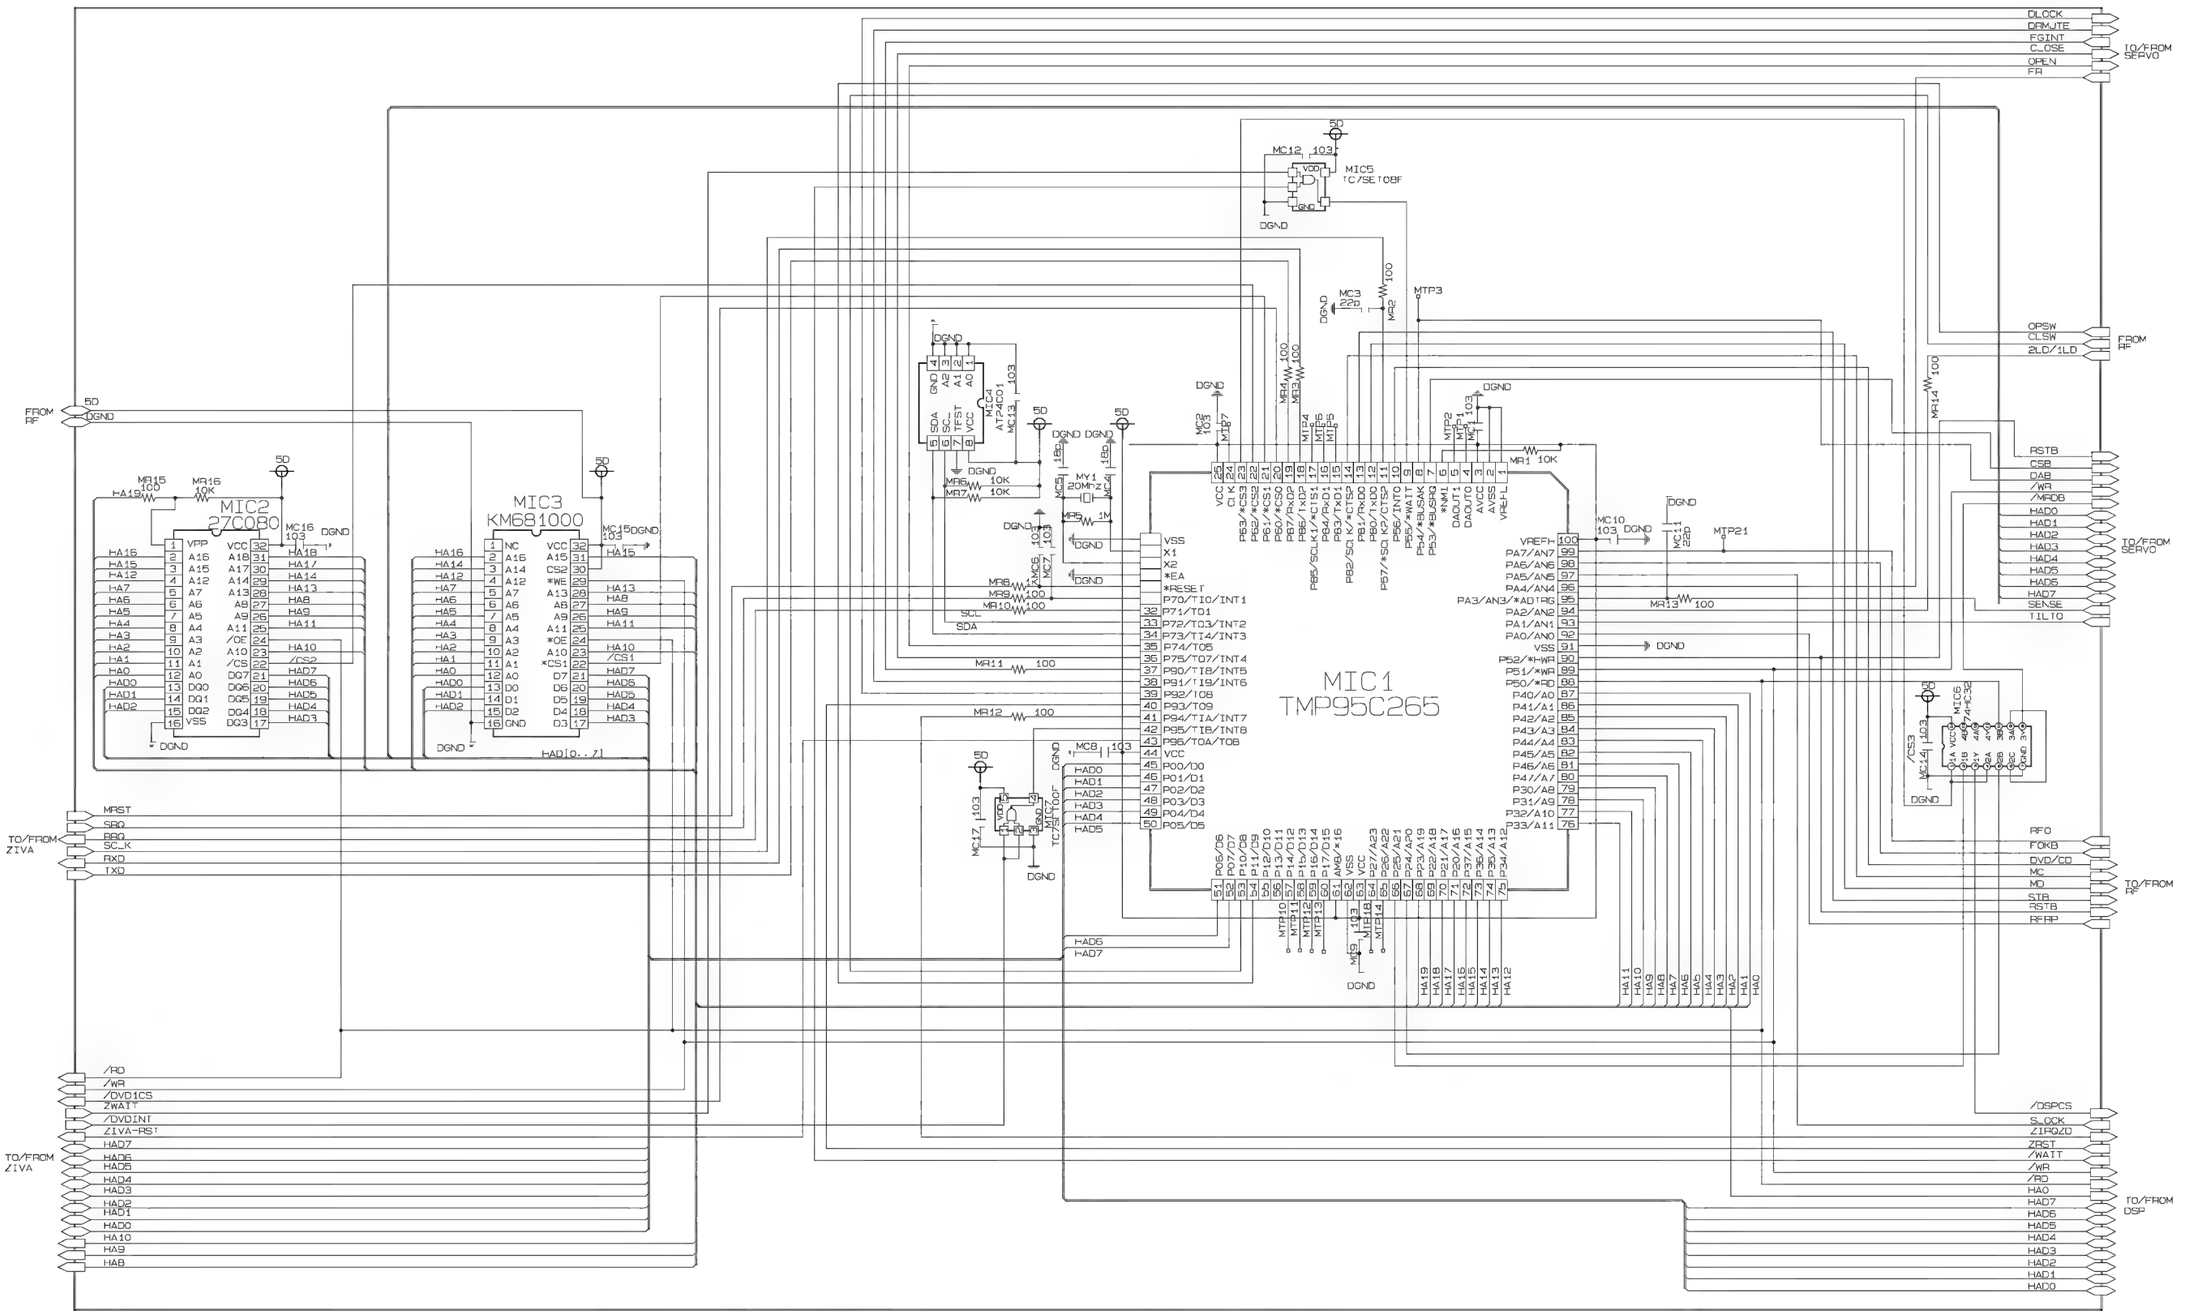

12-3 Servo

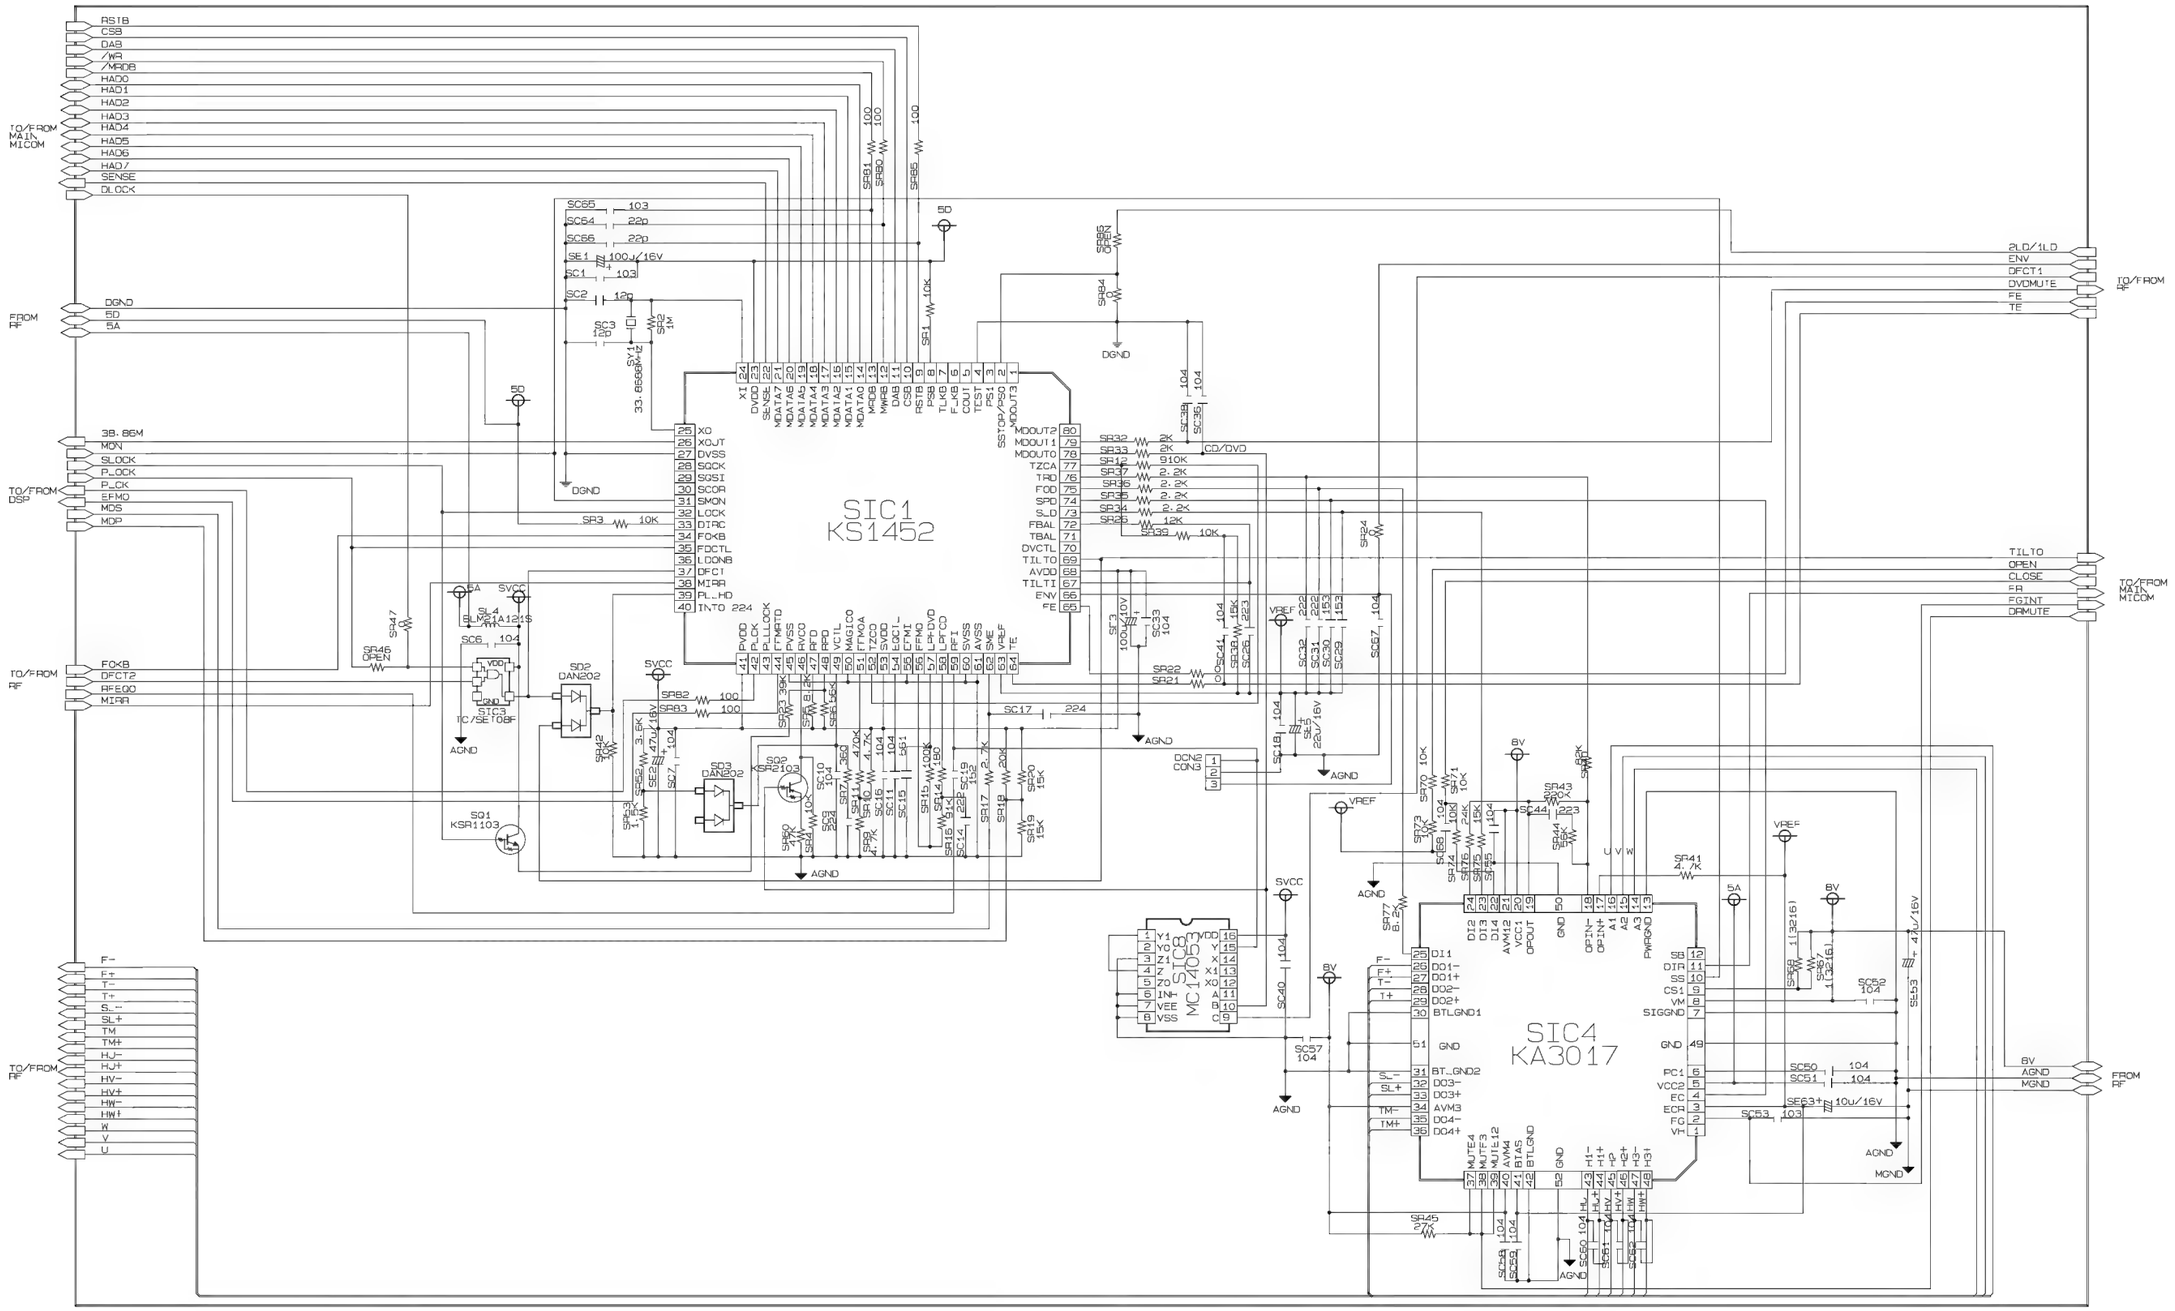
SIC1
KS1452
SIC4
KA3017
SIC3
MC14053
SQ1
KSR1103
SQ2
KSR2103
SD2
DAN202
SD3
DAN202
SIC5
IC/SE10BF
TO/FROM MAIN MICOM
TO/FROM DSP
TO/FROM RF
FROM RF
TO/FROM MAIN MICOM
RSTB
CSB
DAB
/WR
/MRDB
HAD0
HAD1
HAD2
HAD3
HAD4
HAD5
HAD6
HAD7
SENSE
DLOCK
DGND
5D
5A
3B.86M
MDN
SLOCK
P_DCK
P_CK
EFMO
MDS
MDP
FOKB
DFCT2
RFEQO
MIRR
F-
F+
T-
T+
S-
SL+
TM
TM+
HJ-
HJ+
HV-
HV+
HW-
HW+
W
V
U
2LD/1LD
ENV
DFCT1
DVDMUTE
FE
TE
TILTO
OPEN
CLOSE
FR
FGINT
DRMUTE
8V
AGND
MGND
FROM RF
CD/DVD
SVCC
VREF
AGND
DGND

12-4 Video

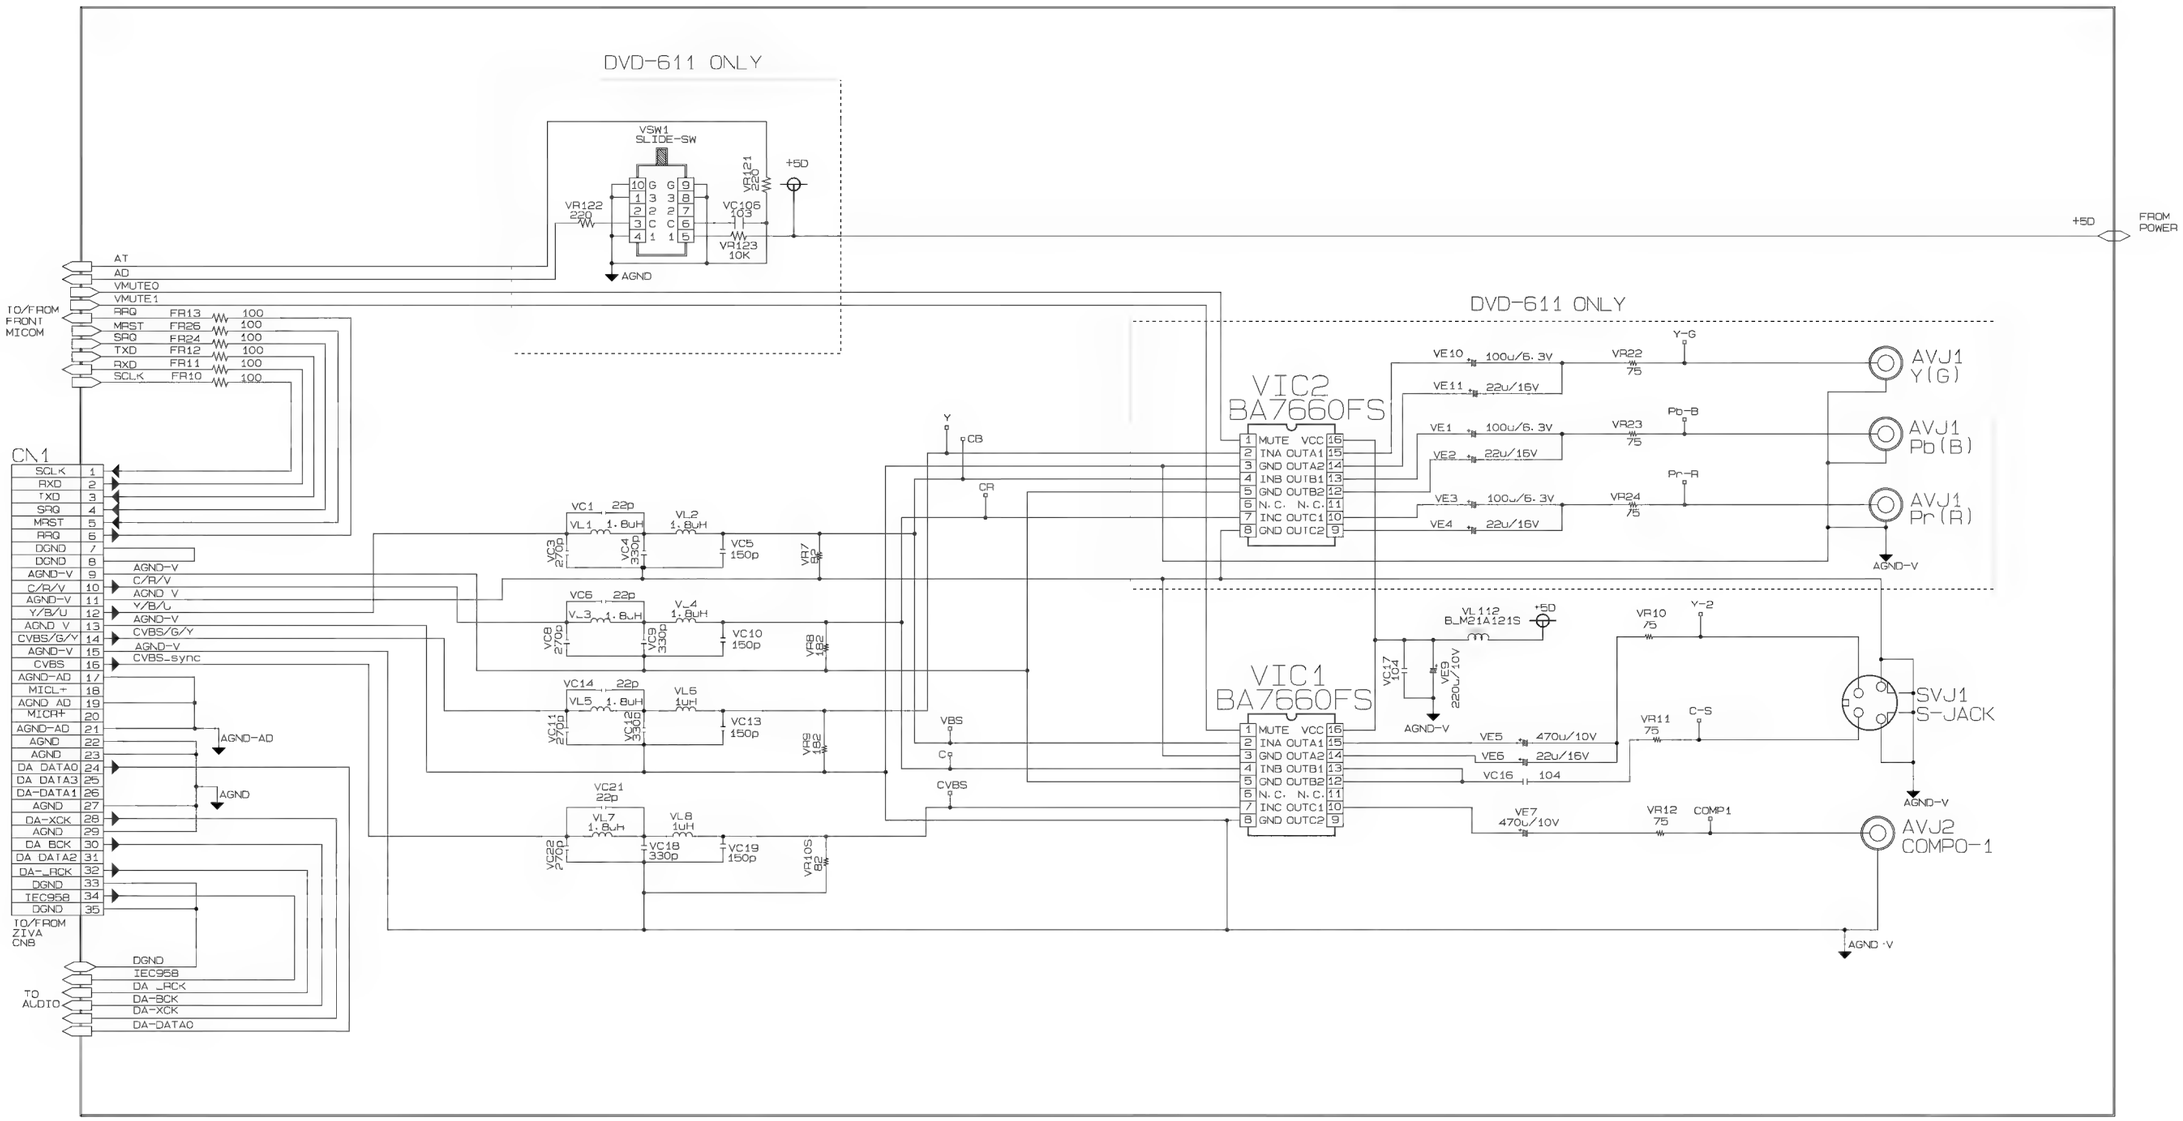
DVD-611 ONLY
VSW1
SLIDE-SW
VR121
10K
+5D
VR122
220
VC106
103
VR123
10K
AGND
+5D
FROM
POWER
AT
AD
VMUTE0
VMUTE1
TO/FROM
FRONT
MICOM
RSQ
MRST
SRQ
TXD
RXD
SCLK
FR13
FR26
FR24
FR12
FR11
FR10
100
CN1
SCLK 1
RXD 2
TXD 3
SRQ 4
MRST 5
RRQ 6
DGND 7
DGND 8
AGND-V 9
C/R/V 10
AGND-V 11
Y/B/U 12
AGND_V 13
CVBS/G/Y 14
AGND-V 15
CVBS 16
AGND-AD 17
MICL+ 18
AGND_AD 19
MICR+ 20
AGND-AD 21
AGND 22
AGND 23
DA_DATA0 24
DA_DATA3 25
DA-DATA1 26
AGND 27
DA-XCK 28
AGND 29
DA_BCK 30
DA_DATA2 31
DA-_RCK 32
DGND 33
IEC958 34
DGND 35
TO/FROM
ZIVA
CNB
DGND
IEC958
DA_-RCK
DA-BCK
DA-XCK
DA-DATA0
TO
AUDIO
AGND-V
AGND-AD
AGND
Y
CB
CR
VBS
C
CVBS
VC1 22p
VL1 1.8uH
VL2 1.8uH
VC3 270p
VC4 330p
VC5 150p
VR7 82
VC6 22p
VL3 1.8uH
VL4 1.8uH
VC8 270p
VC9 330p
VC10 150p
VR8 82
VC14 22p
VL5 1.8uH
VL6 1uH
VC11 270p
VC12 330p
VC13 150p
VR9 82
VC21 22p
VL7 1.8uH
VL8 1uH
VC20 270p
VC18 330p
VC19 150p
VR10S 82
DVD-611 ONLY
VIC2
BA7660FS
MUTE VCC
INA OUTA1
GND OUTA2
INB OUTB1
GND OUTB2
N.C. N.C.
INC OUTC1
GND OUTC2
VE10 100u/6.3V
VE11 22u/16V
VE1 100u/6.3V
VE2 22u/16V
VE3 100u/6.3V
VE4 22u/16V
VR22 75
VR23 75
VR24 75
Y-G
Pb-B
Pr-R
AVJ1
Y(G)
AVJ1
Pb(B)
AVJ1
Pr(R)
AGND-V
VIC1
BA7660FS
VL112
BLM21A121S
+5D
VC17 104
VC15 220u/10V
AGND-V
VR10 75
Y-2
VR11 75
C-S
VR12 75
COMP1
VE5 470u/10V
VE6 22u/16V
VC16 104
VE7 470u/10V
SVJ1
S-JACK
AVJ2
COMPO-1
AGND-V
AGND-V

12-5 Audio

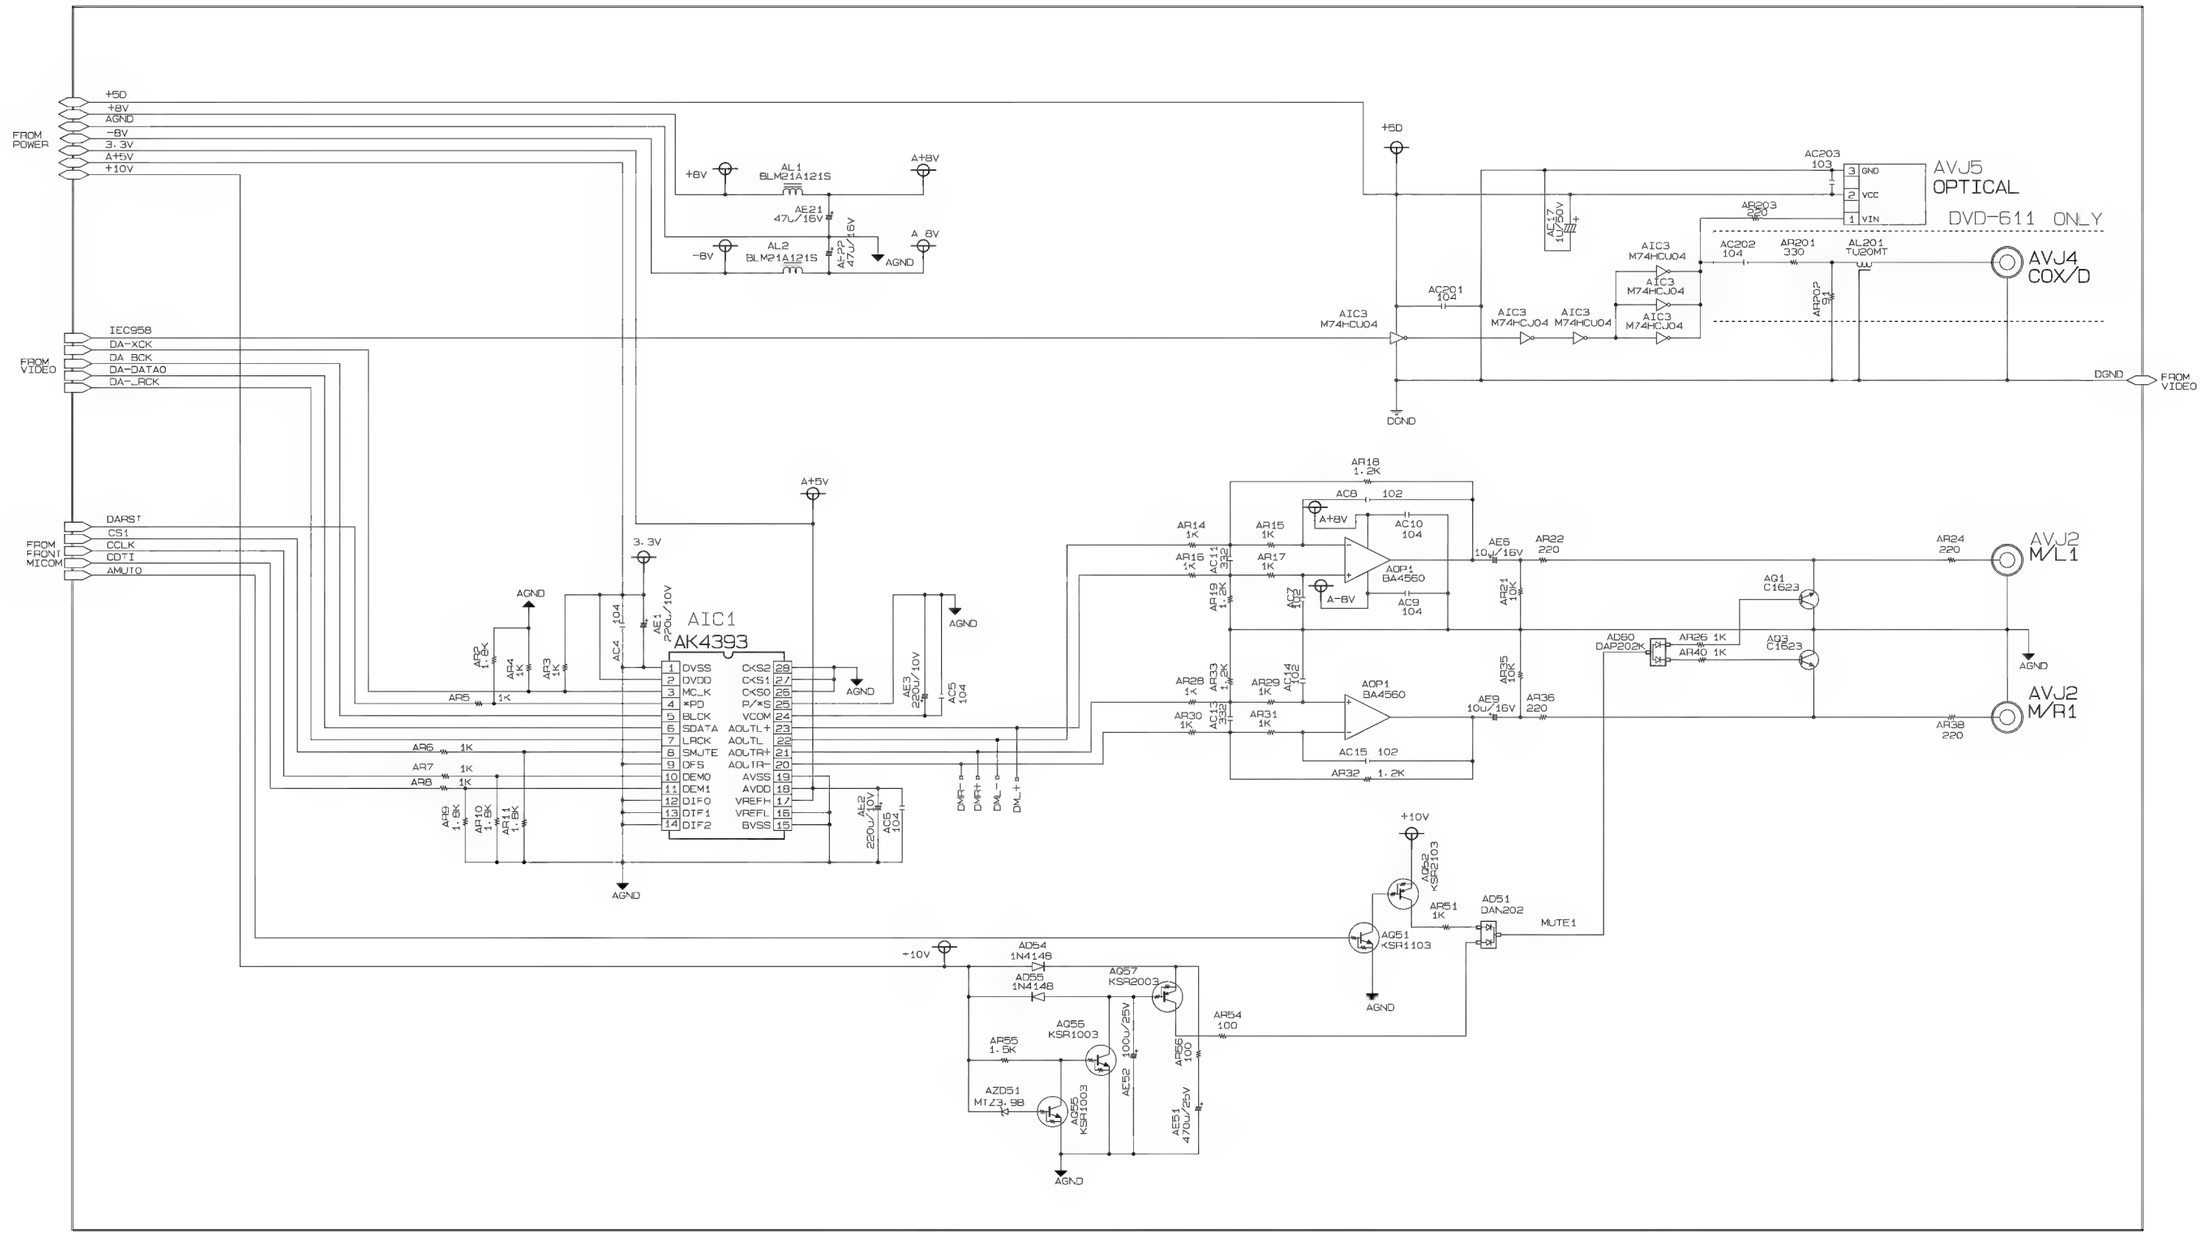
FROM POWER
+5D
+8V
AGND
-8V
3.3V
A+5V
+10V
AL1 BLM21A121S
AL2 BLM21A121S
AE21 47U/16V
AE22 47U/16V
A-8V
FROM VIDEO
IEC958
DA-XCK
DA_BCK
DA-DATA0
DA-LRCK
FROM FRONT MICOM
DARST
CS1
CCLK
CDTI
AMUTO
AIC1
AK4393
DVSS
DVDD
MCLK
PDN
BLCK
SDATA
LRCK
SMUTE
DFS
DEM0
DEM1
DIF0
DIF1
DIF2
CKS2
CKS1
CKS0
P/*S
VCOM
AOUTL+
AOUTL-
AOUTR+
AOUTR-
AVSS
AVDD
VREFH
VREFL
BVSS
AE1 220U/10V
AE2 220U/10V
AE3 220U/10V
AE4 220U/10V
AE5 10U/16V
AE6 10U/16V
AE9 10U/16V
AE17 10U/50V
AE51 470U/25V
AE52 100U/25V
AIC3 M74HCU04
AOP1 BA4560
AC203 103
AVJ5 OPTICAL
DVD-611 ON_Y
AVJ4 COX/D
AVJ2 M/L1
AVJ2 M/R1
AL201 TU20MT
AQ1 C1623
AQ2 C1623
AQ3 C1623
AQ51 KSR1103
AQ52 KSR2103
AQ55 KSR1003
AQ57 KSR2003
AZD51 MTZ3.9B
AD50 DAP202K
AD51 DAN202
AD54 1N4148
AD55 1N4148
MUTE1
DGND
FROM VIDEO

12-6 RF

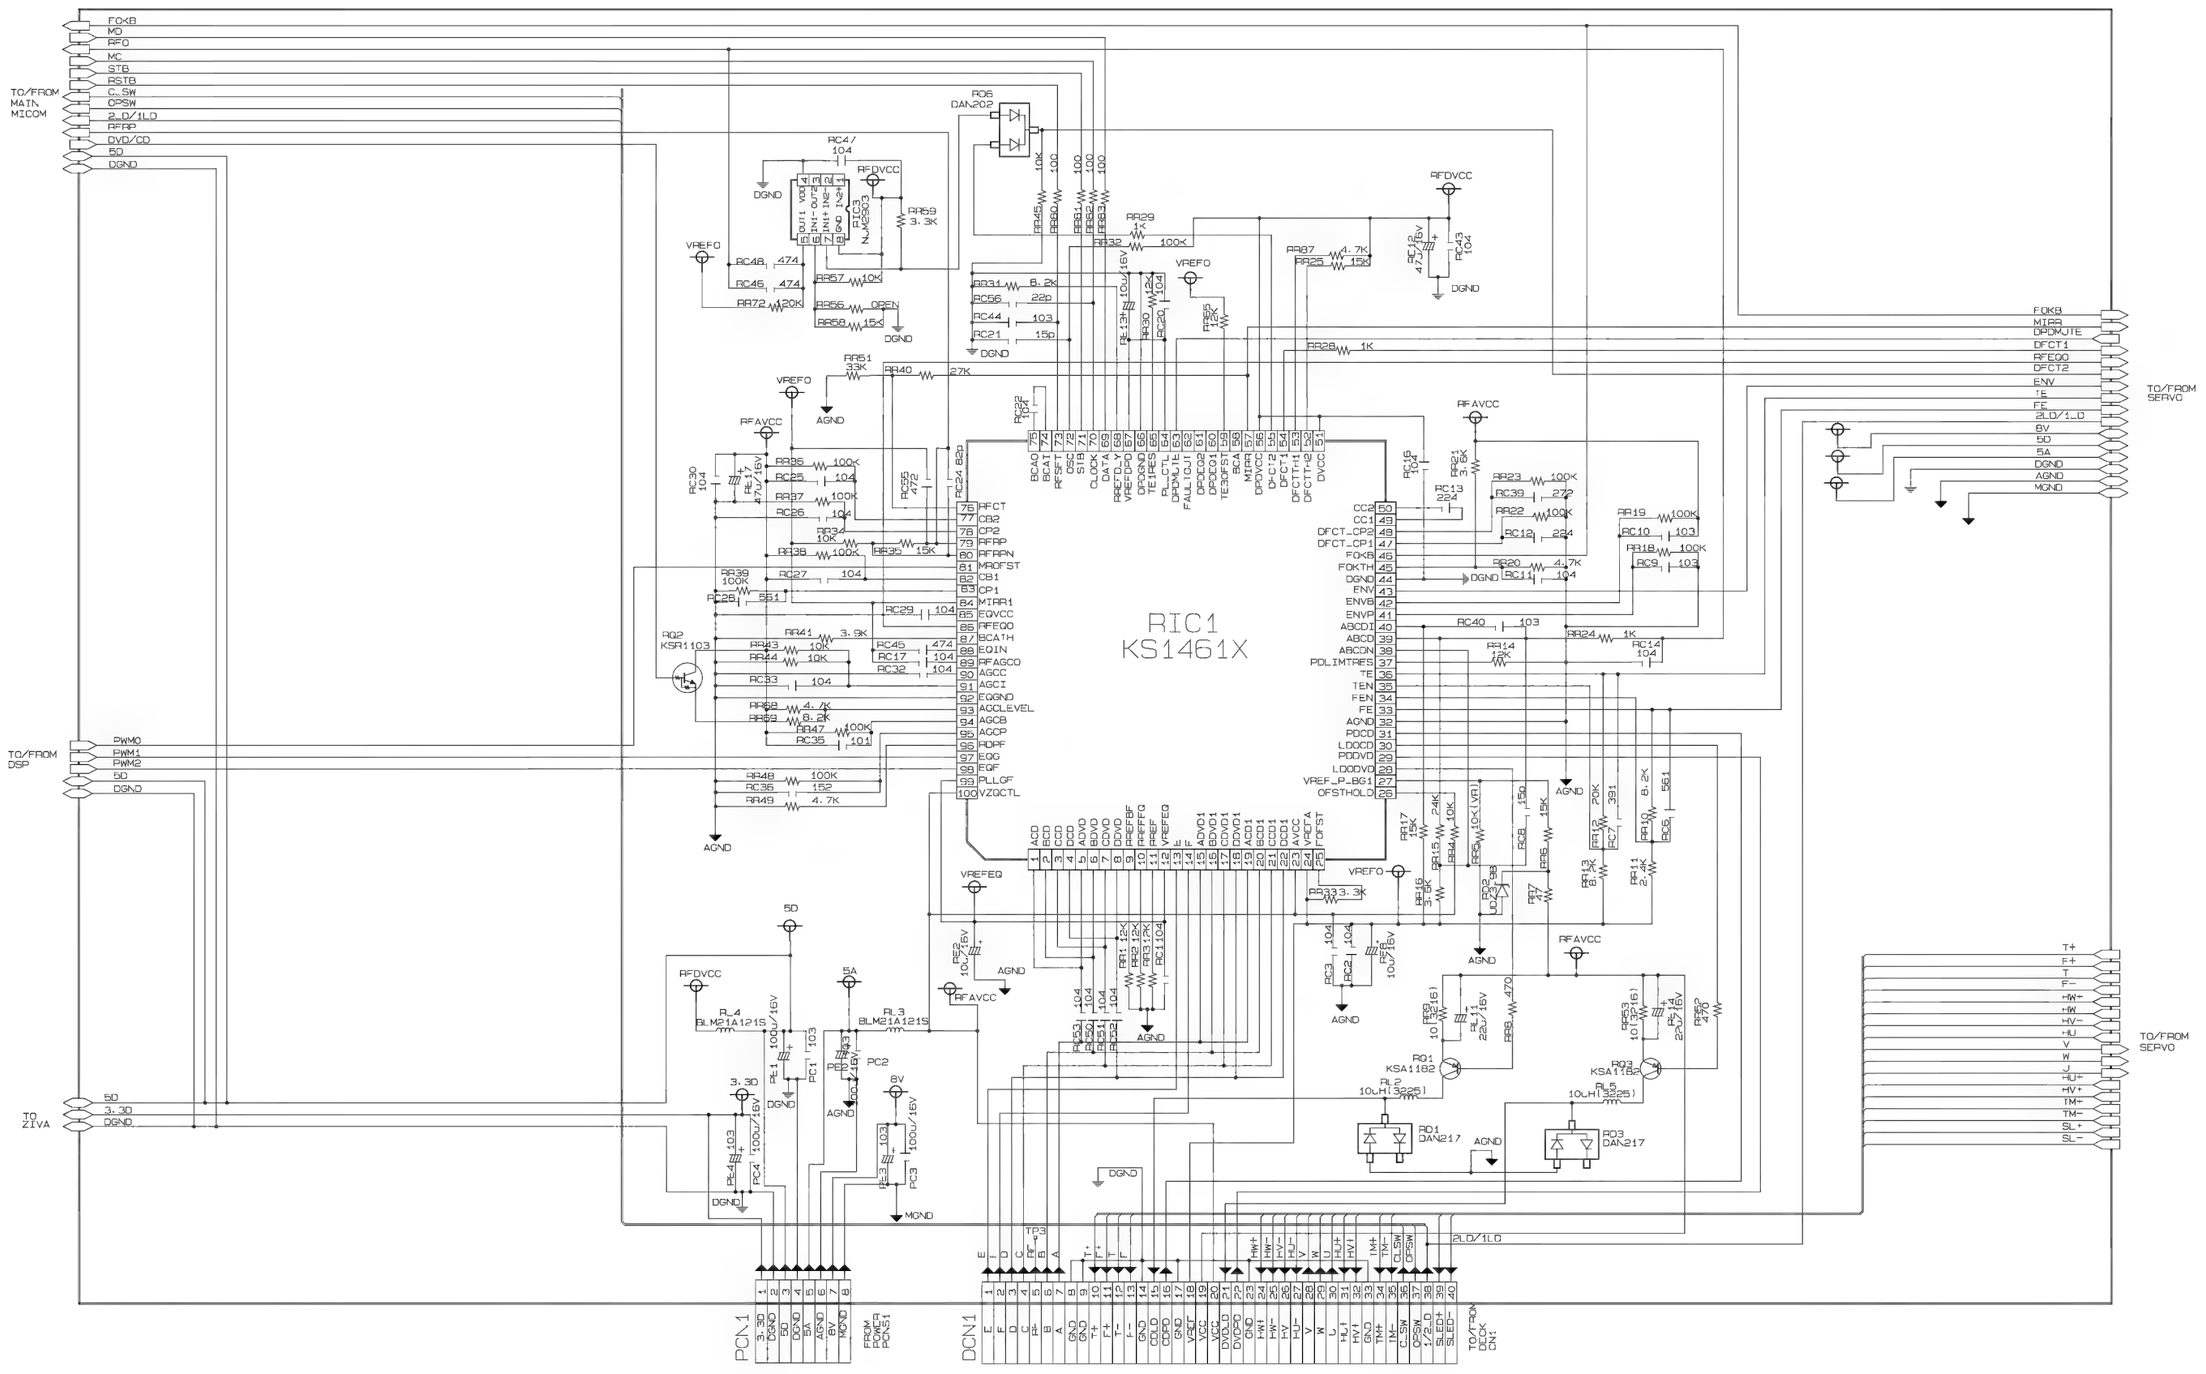
RIC1
KS1461X
TO/FROM MAIN MICOM
TO/FROM DSP
TO ZIVA
TO/FROM SERVO
TO/FROM SERVO
TO/FROM DECK CN1
PCN1
DCN1
FOKB
MD
RFO
MC
STB
RSTB
C_SW
OPSW
2_D/1LD
RFRP
DVD/CD
5D
DGND
PWM0
PWM1
PWM2
3.3D
MGND
AGND
DGND
RFDVCC
RFAVCC
VREFO
VREFEQ
5A
8V
MIRR
DPDMUTE
DFCT1
RFEQO
DFCT2
ENV
TE
FE
2LD/1LD
AGND
MGND
T+
F+
T-
F-
HW+
HW-
HV+
HV-
HU+
HU-
V
W
U
TM+
TM-
SL+
SL-

12-7 ZIVA

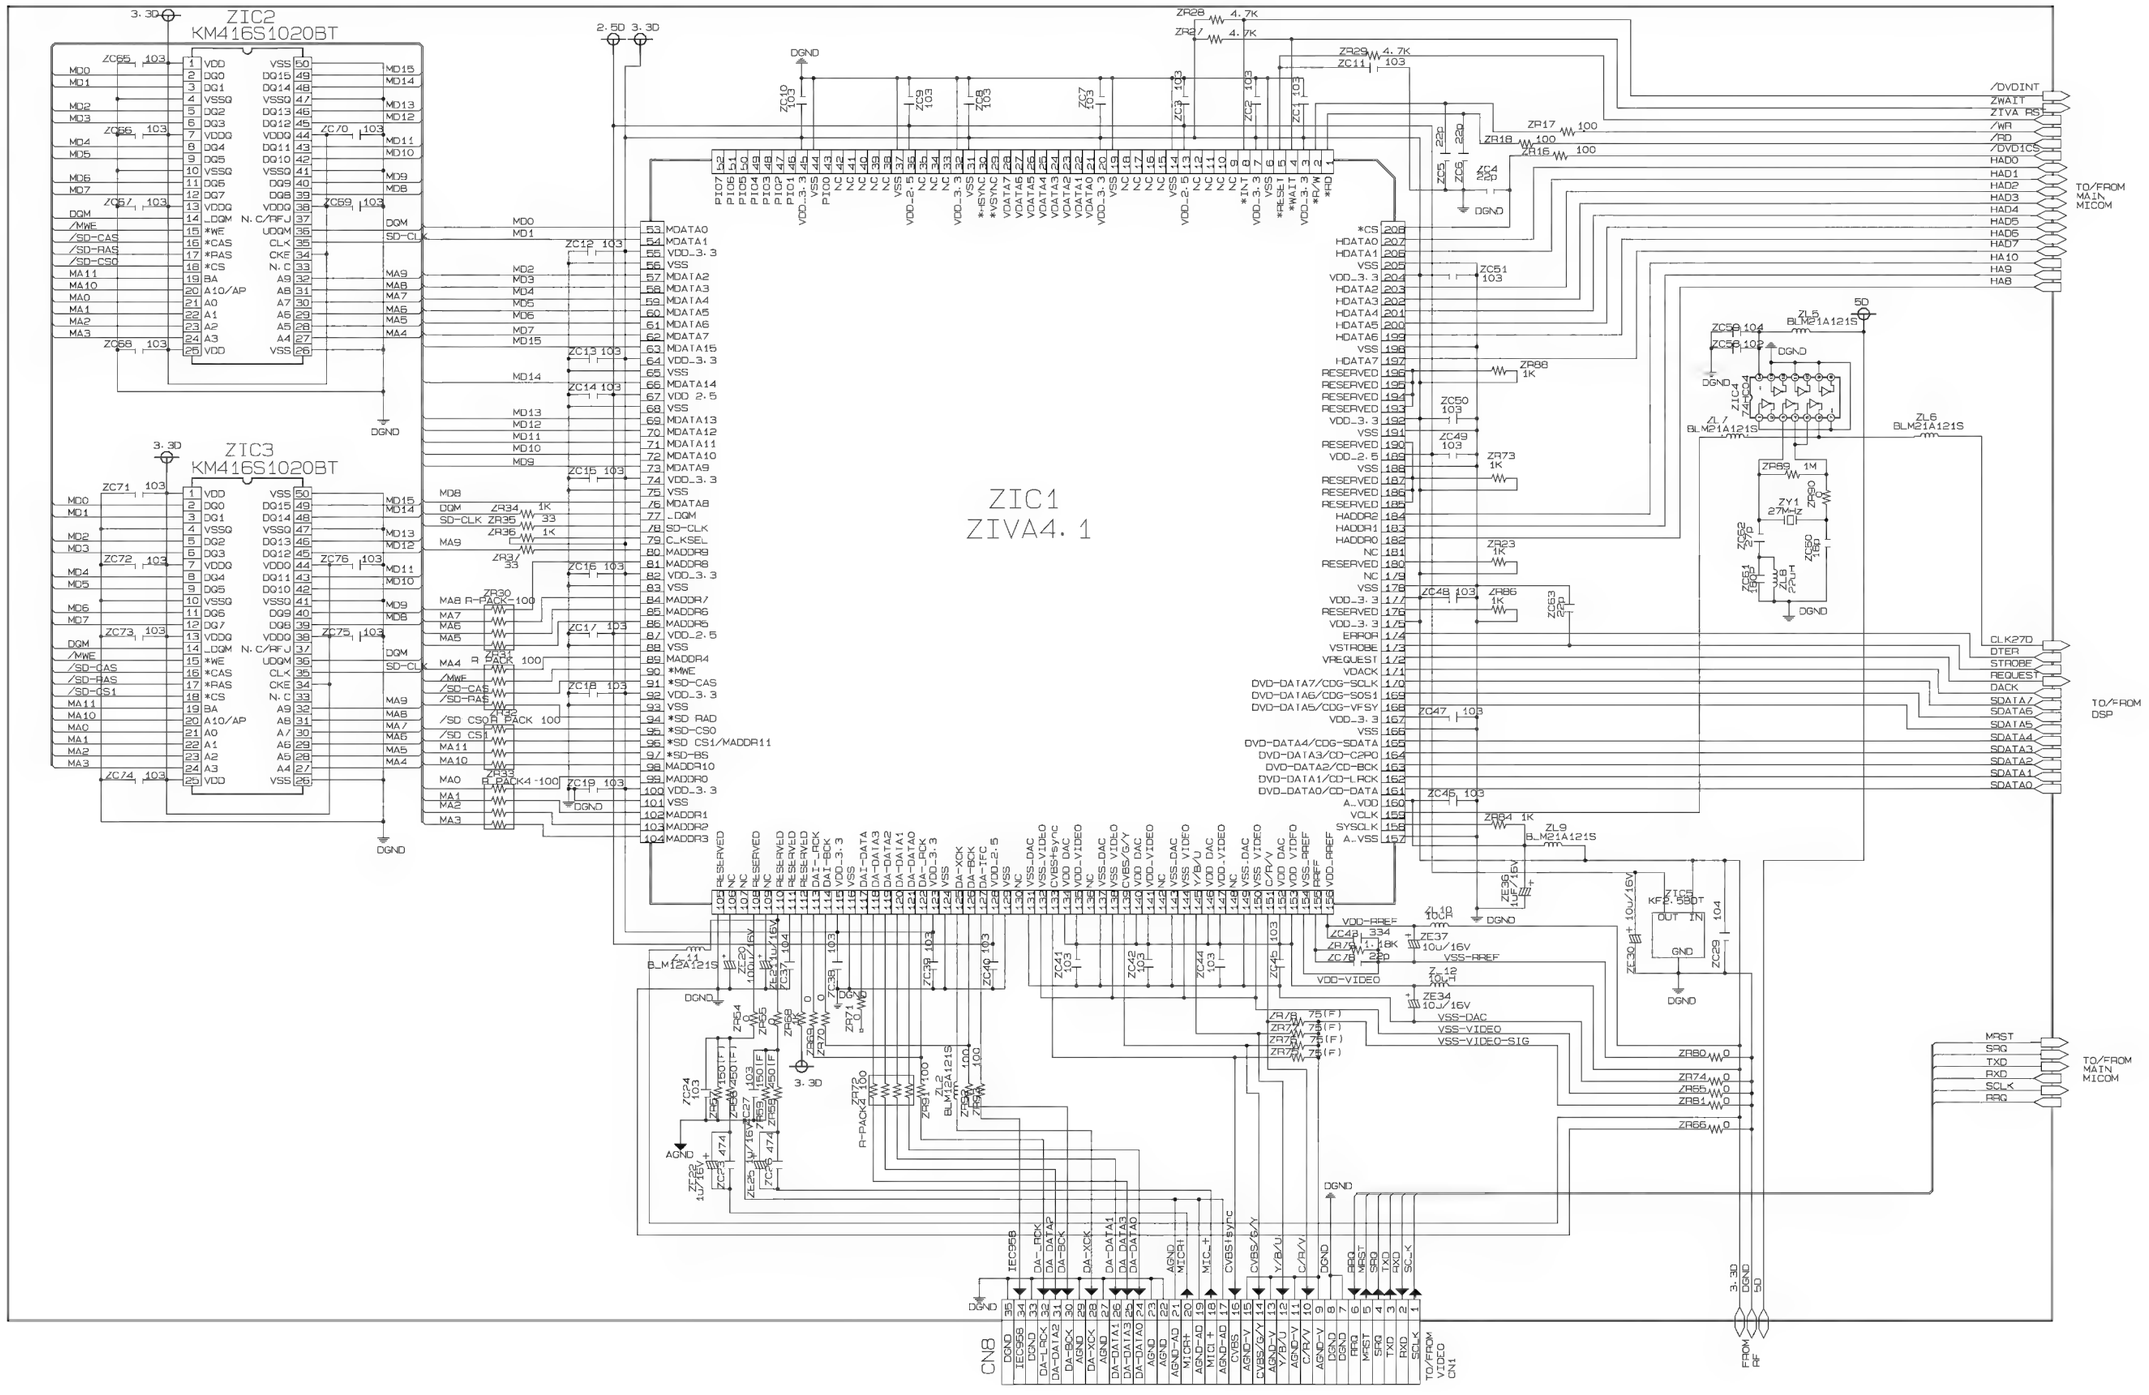
ZIC2
KM416S1020BT
ZIC3
KM416S1020BT
ZIC1
ZIVA4.1
CN8
TO/FROM MAIN MICOM
TO/FROM DSP
TO/FROM MAIN MICOM
TO/FROM VIDEO CN1
FROM RF
/DVDINT
ZWAIT
ZIVA_RST
/WR
/RD
/DVDICS
HAD0
HAD1
HAD2
HAD3
HAD4
HAD5
HAD6
HAD7
HA10
HA9
HA8
CLK27D
DTER
STROBE
REQUEST
DACK
SDATA7
SDATA6
SDATA5
SDATA4
SDATA3
SDATA2
SDATA1
SDATA0
MRST
SRQ
TXD
RXD
SCLK
RRQ
DGND
3.3D
5D
2.5D
VSS-DAC
VSS-VIDEO
VSS-VIDEO-SIG
VDD-AREF
VDD-VIDEO

12-8 DSP

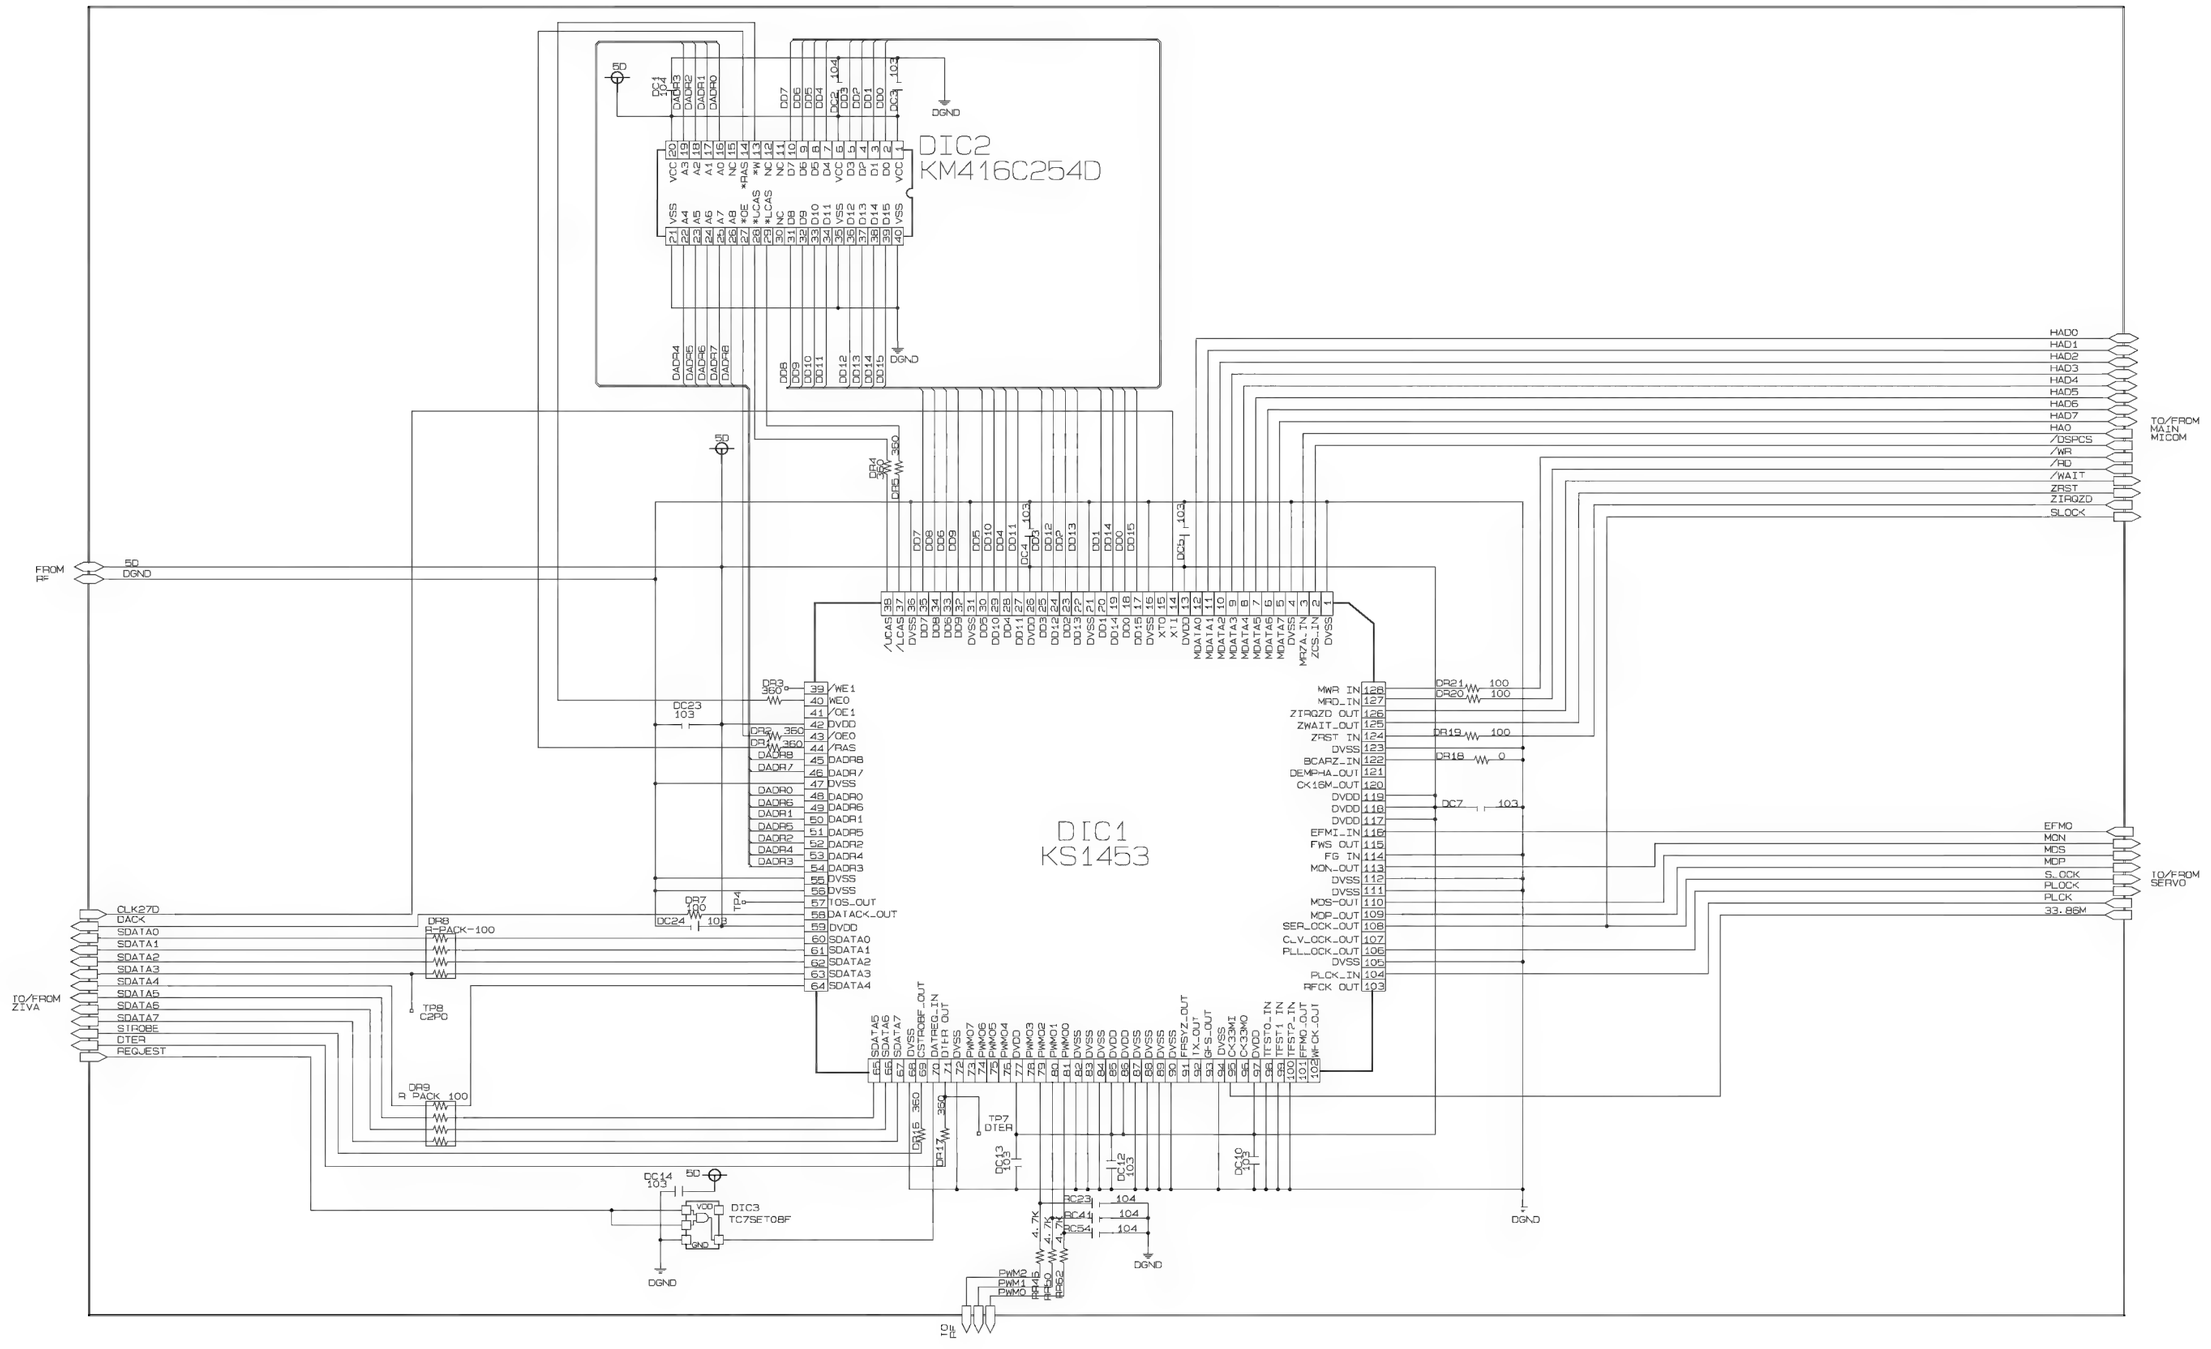
DIC2
KM416C254D
DIC1
KS1453
DIC3
TC7SET08F
HAD0
HAD1
HAD2
HAD3
HAD4
HAD5
HAD6
HAD7
HA0
/DSPCS
/WR
/RD
/WAIT
ZRST
ZIRQZD
SLOCK
TO/FROM MAIN MICOM
EFMO
MON
MDS
MDP
S_CCK
PLCK
PLCK
33.86M
TO/FROM SERVO
FROM IF
CLK27D
DACK
SDATA0
SDATA1
SDATA2
SDATA3
SDATA4
SDATA5
SDATA6
SDATA7
SIRQBE
DTER
REQUEST
TO/FROM ZIVA
DGND

12-9 Front-Micom/VFD Display

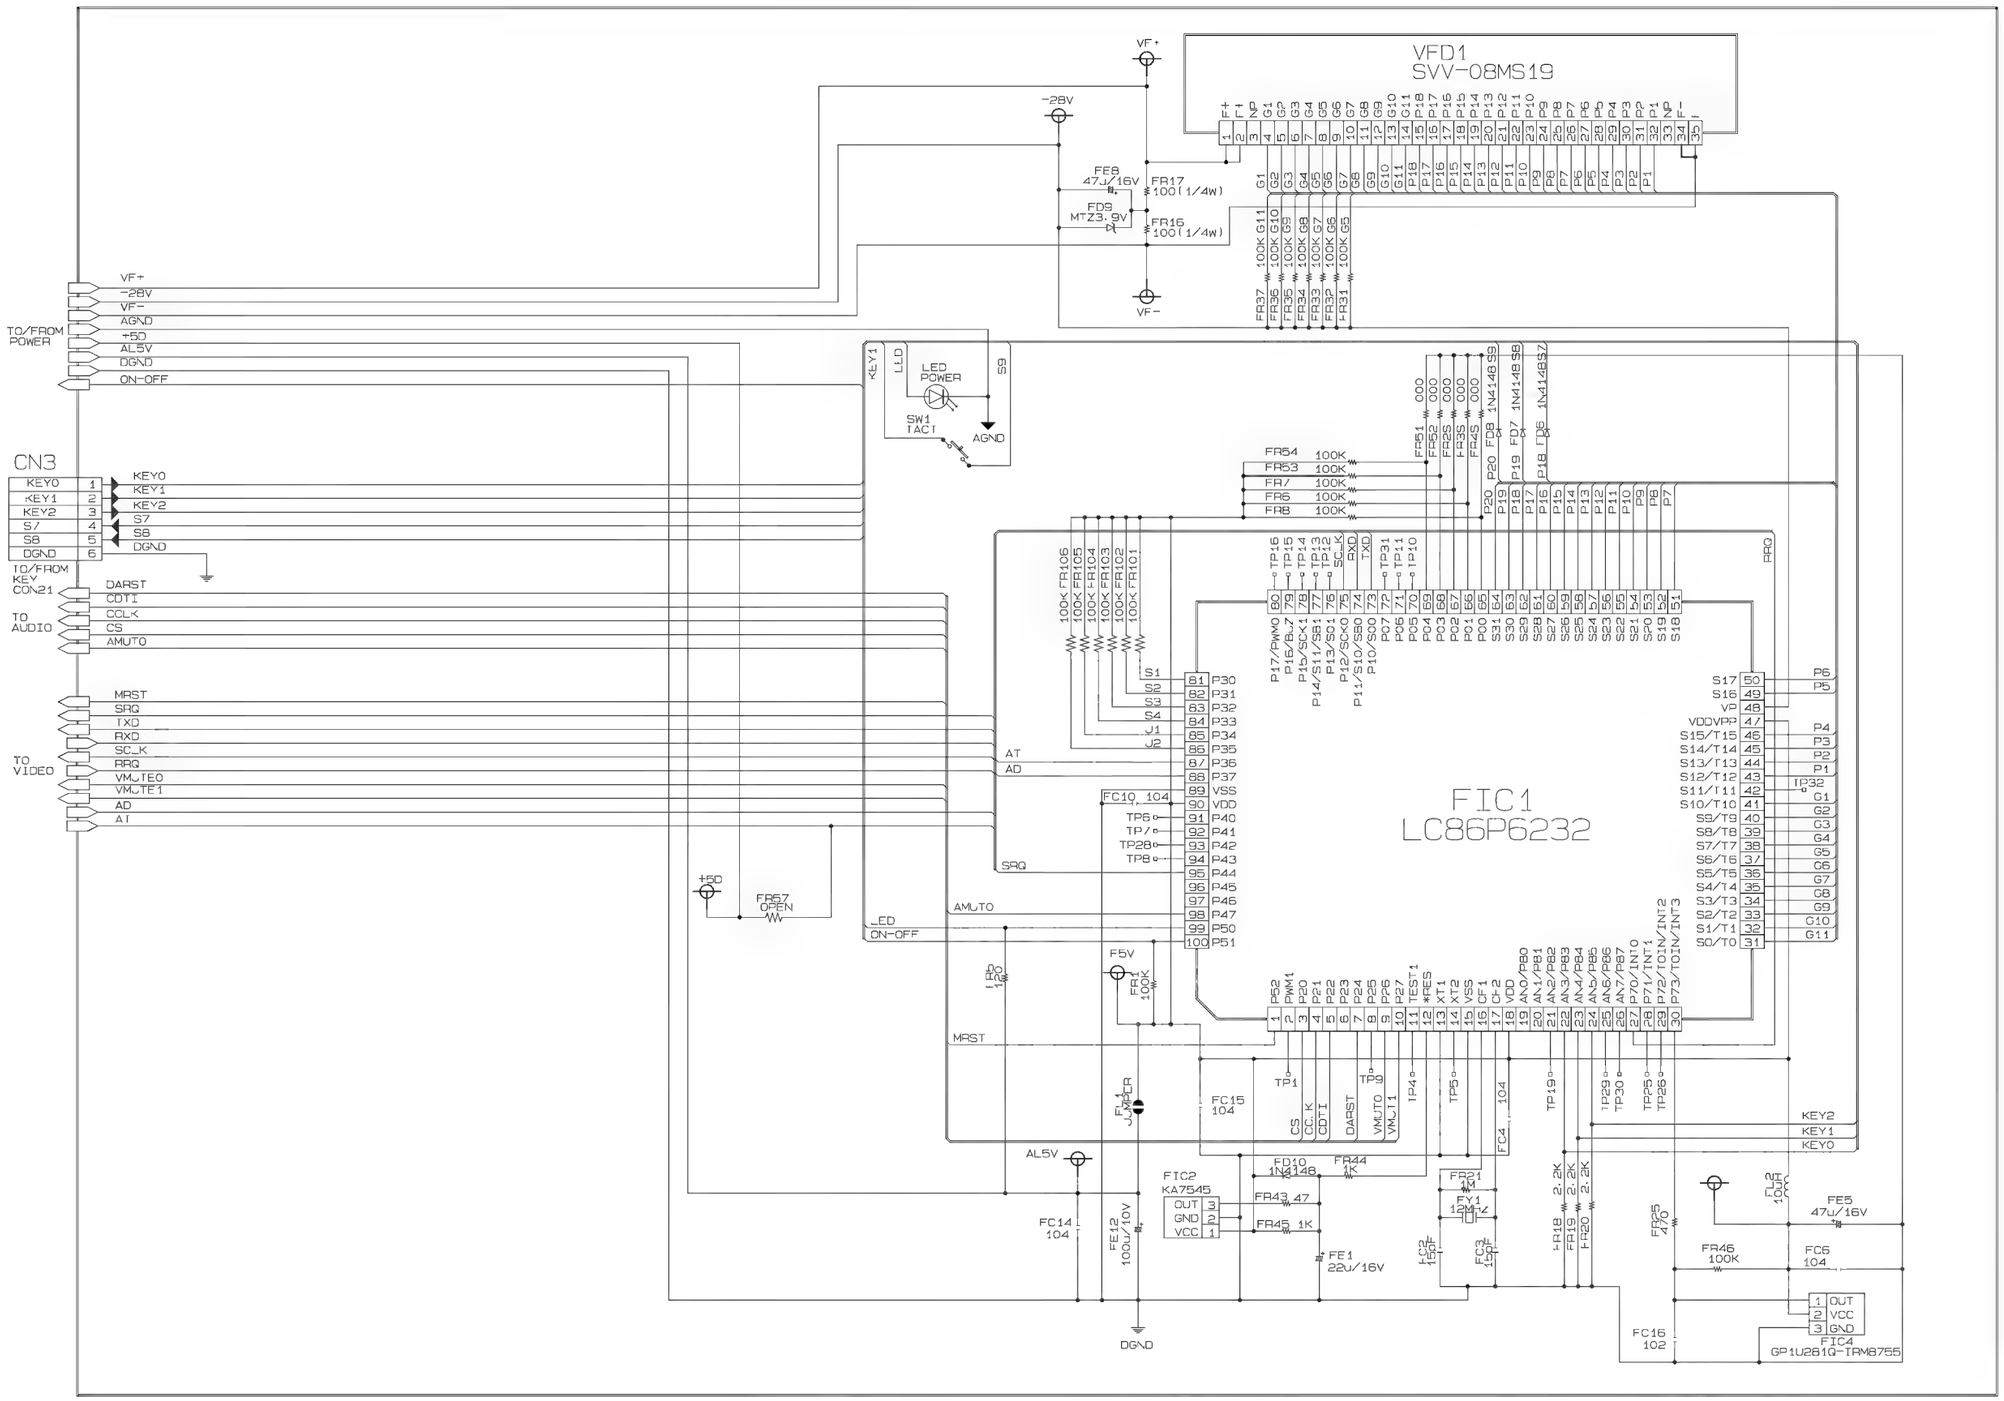

12-10 Key

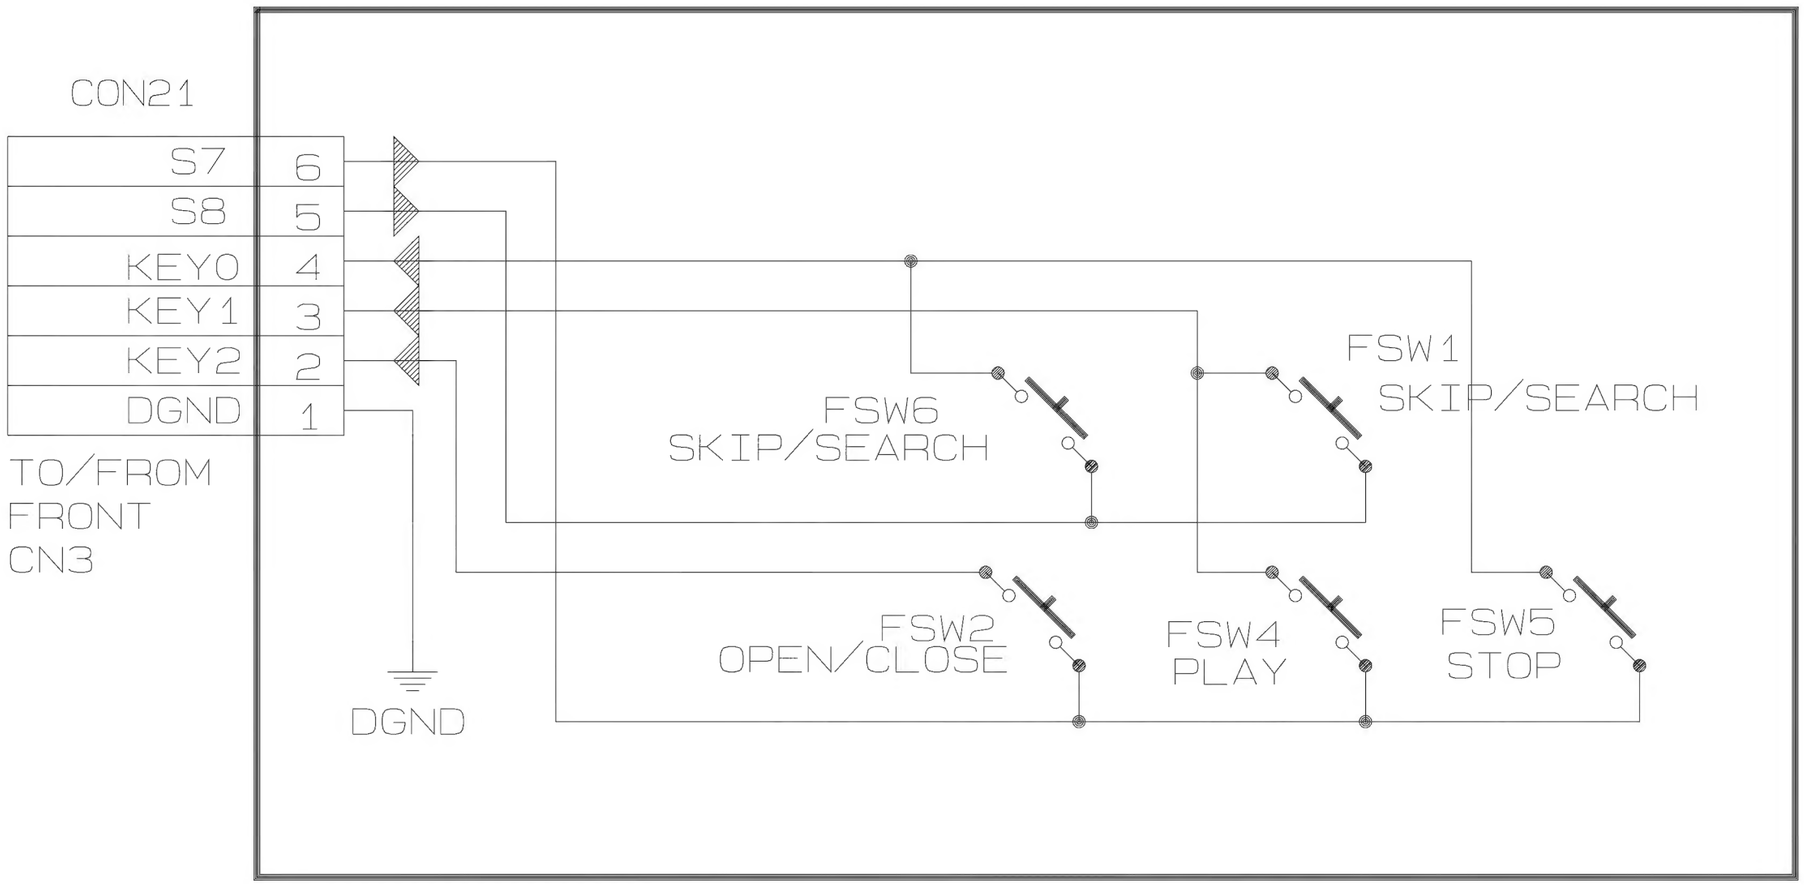
CON21
S7
S8
KEY0
KEY1
KEY2
DGND
6
5
4
3
2
1
TO/FROM
FRONT
CN3
DGND
FSW6
SKIP/SEARCH
FSW1
SKIP/SEARCH
FSW2
OPEN/CLOSE
FSW4
PLAY
FSW5
STOP

12-11 Deck

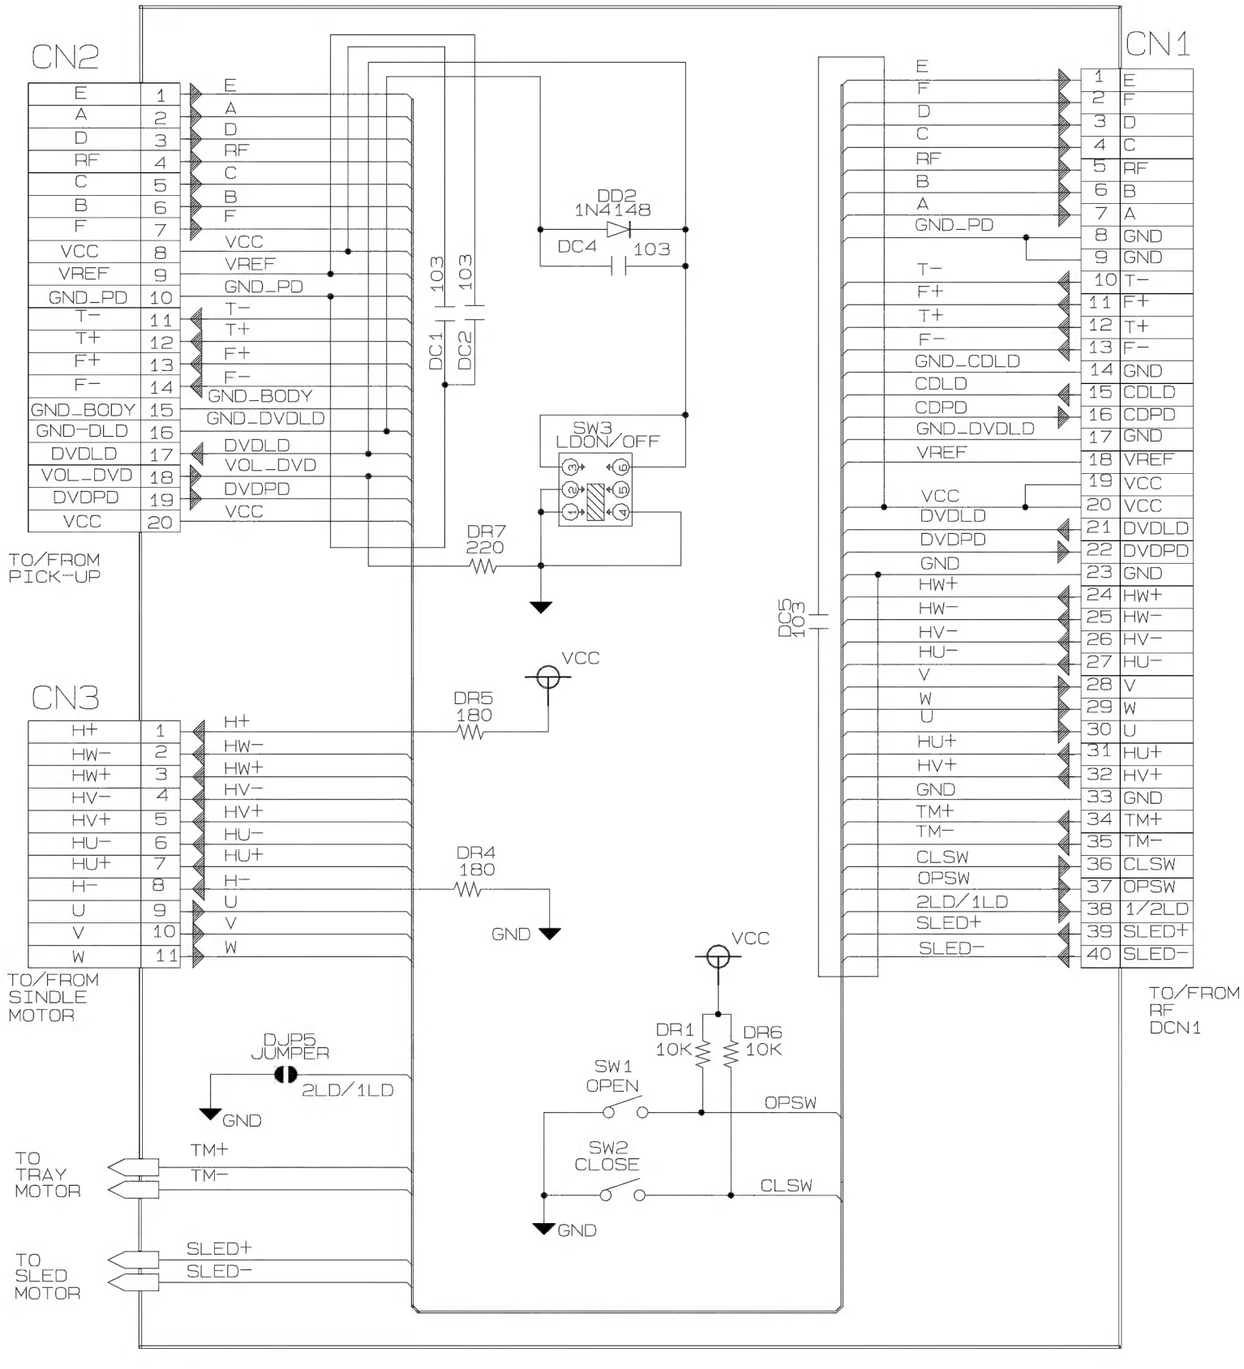
CN2
E 1
A 2
D 3
RF 4
C 5
B 6
F 7
VCC 8
VREF 9
GND_PD 10
T- 11
T+ 12
F+ 13
F- 14
GND_BODY 15
GND-DLD 16
DVDLD 17
VOL_DVD 18
DVDPD 19
VCC 20
TO/FROM PICK-UP
DD2 1N4148
DC4 103
DC1 103
DC2 103
SW3 LDON/OFF
DR7 220
VCC
DR5 180
CN3
H+ 1
HW- 2
HW+ 3
HV- 4
HV+ 5
HU- 6
HU+ 7
H- 8
U 9
V 10
W 11
TO/FROM SINDLE MOTOR
DR4 180
GND
DJP5 JUMPER
2LD/1LD
TO TRAY MOTOR
TM+
TM-
TO SLED MOTOR
SLED+
SLED-
DR1 10K
DR6 10K
SW1 OPEN
OPSW
SW2 CLOSE
CLSW
DC5 103
CN1
1 E
2 F
3 D
4 C
5 RF
6 B
7 A
8 GND
9 GND
10 T-
11 F+
12 T+
13 F-
14 GND
15 CDLD
16 CDPD
17 GND
18 VREF
19 VCC
20 VCC
21 DVDLD
22 DVDPD
23 GND
24 HW+
25 HW-
26 HV-
27 HU-
28 V
29 W
30 U
31 HU+
32 HV+
33 GND
34 TM+
35 TM-
36 CLSW
37 OPSW
38 1/2LD
39 SLED+
40 SLED-
TO/FROM RF DCN1

12-12 Remote Control

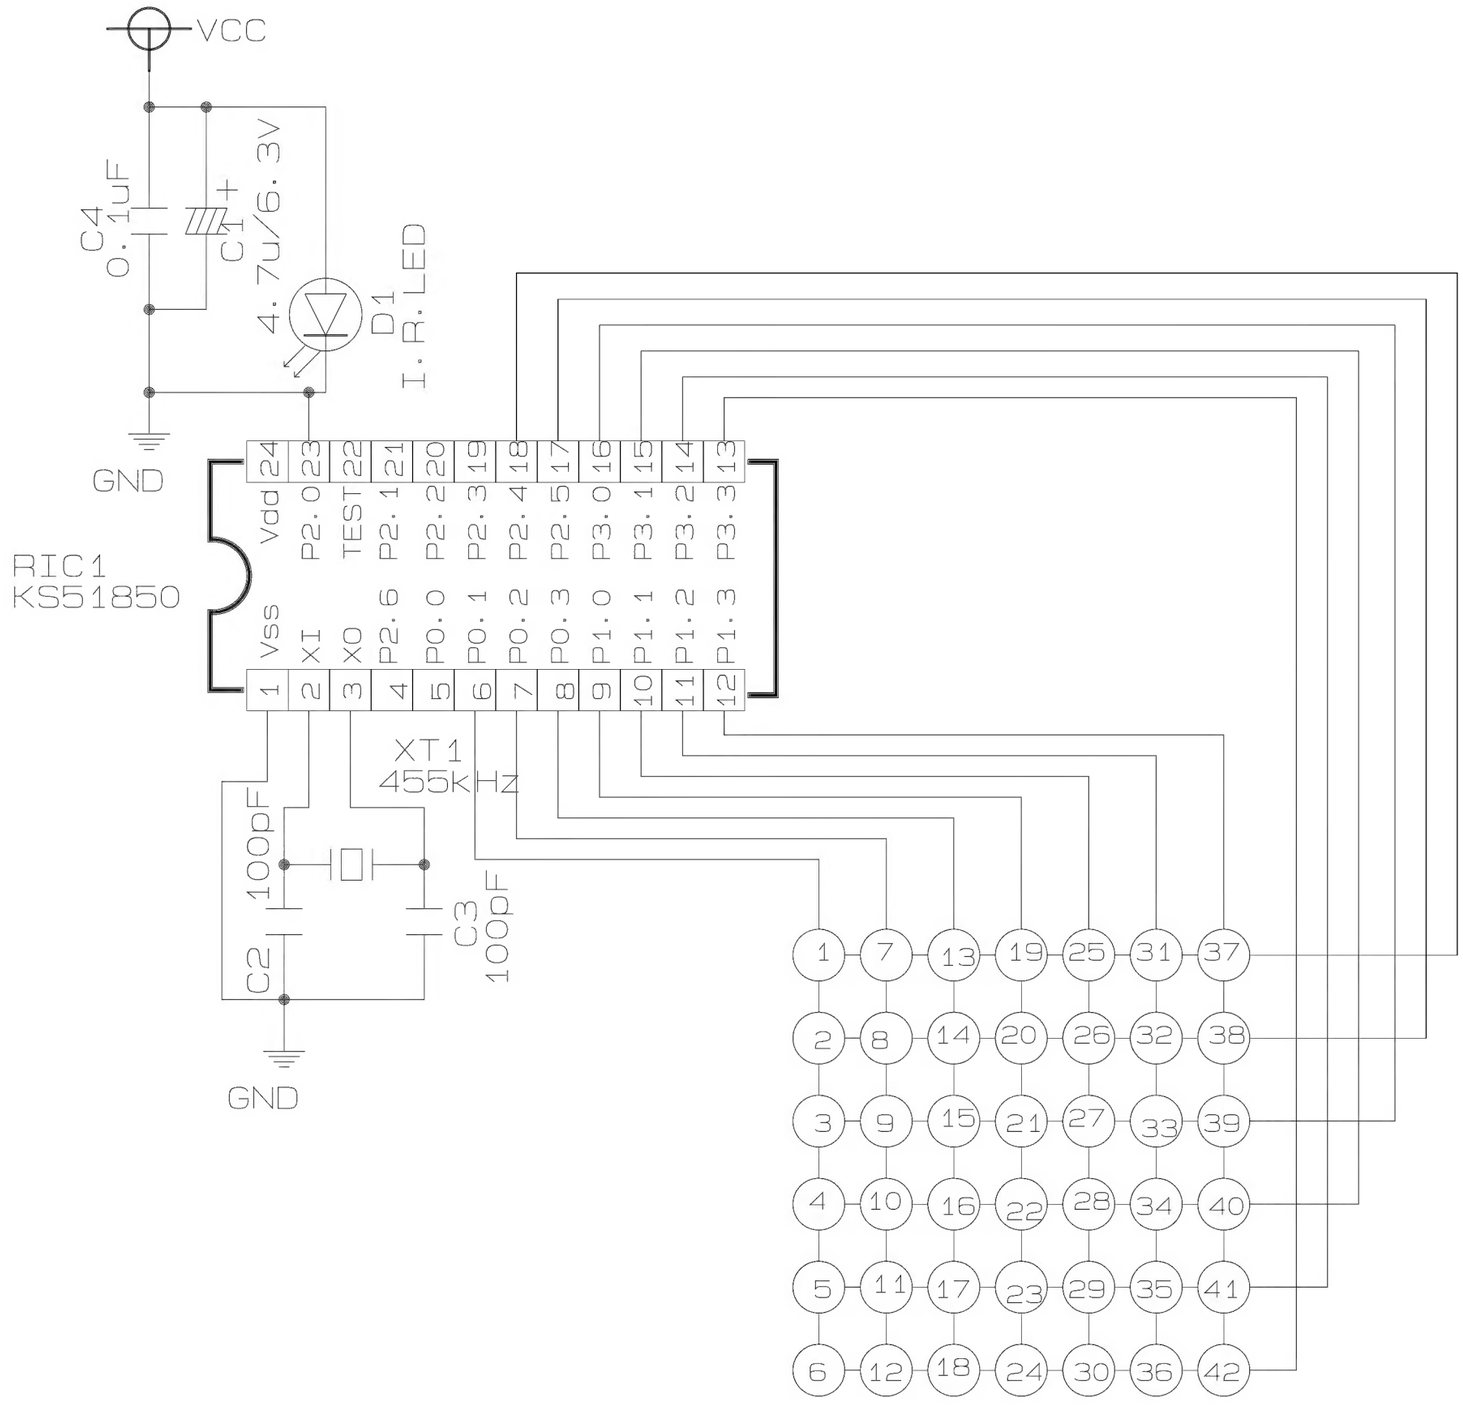

MEMO